

001 - 1.0l petrol engine , DKRF	1-18
1. 1.0l petrol engine , DKRF	1
2. Fuse holder B	2
3. Fuse holder B	3
4. Onboard supply control unit, Fuse holder C, Fuse holder D	4
5. Engine/motor control unit, Radiator fan	5
6. Brake light switch, Radiator outlet coolant temperature sender, Clutch position sender, ABS control unit, Engine/motor control unit	6
7. Accelerator pedal module, Gearbox neutral position sender, Engine/motor control unit	7
8. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Oil level and oil temperature sender, Engine/motor control unit	8
9. Ignition/starter switch, Data bus diagnostic interface, Engine/motor control unit, Interface for entry and start system, Vacuum pump for brakes	9
10. Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit	10
11. Engine/motor control unit	11
12. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	12
13. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	13
14. Pressure sensor for activated charcoal filter air flushing, Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1	14
15. Engine speed sender, Knock sensor 1, Fuel pressure sender, Engine/motor control unit, Valve for oil pressure control	15
16. Throttle valve module, Engine/motor control unit, Fuel pressure regulating valve, Charge air cooling pump	16
17. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	17
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	18
002 - 1.5l petrol engine , DPCA	19-38
1. 1.5l petrol engine , DPCA	19
2. Fuse holder B	20
3. Fuse holder B	21
4. Onboard supply control unit, Fuse holder C	22
5. Engine/motor control unit, Radiator fan	23
6. Brake light switch, Accelerator pedal module, Radiator outlet coolant temperature sender, Engine/motor control unit	24
7. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	25
8. Ignition/starter switch, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	26
9. Oil level and oil temperature sender, Data bus diagnostic interface, Engine/motor control unit, Vacuum pump for brakes	27
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	28
11. Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit	29
12. Oil pressure sender, Charge pressure sender, Engine/motor control unit	30
13. Engine speed sender, Charge pressure control module, Knock sensor 1, Engine/motor control unit	31
14. Fuel pressure sender, Exhaust gas pressure sensor 1, Inlet camshaft position sender, Engine/motor control unit	32
15. Intake manifold sender, Coolant temperature sender, Engine outlet coolant temperature sender, Exhaust camshaft position sender, Engine/motor control unit	33
16. Throttle valve module, Engine temperature regulation module, Engine/motor control unit	34
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel metering valve, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2	35
18. Engine/motor control unit, Ignition coil 1 with output stage, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Spark plug 1	36
19. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4, Charge air cooling pump	37
20. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	38
003 - Battery, starter and alternator , DKRF,DPCA	39-41
1. Battery, starter and alternator , DKRF,DPCA	39
2. Battery, Starter, Battery monitor control unit, Fuse holder B	40
3. Alternator with voltage regulator. Data bus diagnostic interface. Fuse holder B	41

004 - Brake system	42-54
1. Brake system	42
2. Fuse holder B, Fuse holder C	43
3. ABS control unit	44
4. ABS control unit, Left parking brake motor	45
5. ABS control unit	46
6. ABS control unit	47
7. Rear right speed sensor, Rear left speed sensor, ABS control unit, Right parking brake motor	48
8. ABS control unit	49
9. Front right speed sensor, Front left speed sensor, ABS control unit	50
10. Electromechanical parking brake button, Vacuum sender, ABS control unit	51
11. Electromechanical parking brake button	52
12. Brake light switch, Brake fluid level warning contact, Front right brake pad wear sender, Onboard supply control unit, Engine/motor control unit	53
13. Onboard supply control unit, Data bus diagnostic interface	54
005 - Airbag systems , (L0L)	55-62
1. Airbag systems , (L0L)	55
2. Airbag control unit, Fuse holder C, Front interior light	56
3. Crash sensor for front airbag, Airbag control unit, Front left seat belt, Front right seat belt	57
4. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Airbag igniter on driver side, Diagnostic connection	58
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear centre side airbag crash sensor, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	59
6. Key-operated switch to deactivate airbag on front passenger side, Belt switch for seat row 2, driver side, Belt switch for seat row 2, passenger side, Airbag control unit, Airbag igniter 1 on front passenger side	60
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	61
8. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Trigger for driver side rollover bar, Trigger for passenger side rollover bar	62
006 - Airbag systems , (L0R)	63-70
1. Airbag systems , (L0R)	63
2. Airbag control unit, Fuse holder C, Front interior light	64
3. Crash sensor for front airbag, Airbag control unit, Front left seat belt, Front right seat belt	65
4. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Airbag igniter on driver side, Diagnostic connection	66
5. Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Rear centre side airbag crash sensor, Airbag control unit, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	67
6. Key-operated switch to deactivate airbag on front passenger side, Belt switch for seat row 2, driver side, Belt switch for seat row 2, passenger side, Airbag control unit, Airbag igniter 1 on front passenger side	68
7. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side, Side airbag igniter on front passenger side	69
8. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Trigger for driver side rollover bar, Trigger for passenger side rollover bar	70
007 - Fuses in engine compartment	71-81
1. Fuses in engine compartment	71
2. Battery, Starter, Alternator with voltage regulator, Power steering control unit, Fuse holder B	72
3. ABS control unit, Fuse holder B, Radiator fan	73
4. Left horn, Battery monitor control unit, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	74
5. Clutch position sender, Engine/motor control unit, Fuse holder B	75
6. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit, Fuse holder B	76
7. Oil level and oil temperature sender, Fuel pump control unit, Fuse holder B	77
8. Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Ignition coil 2 with output stage, Camshaft control valve 1, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Exhaust camshaft control valve 1, Valve for oil pressure control, Fuse holder B, Charge air cooling pump	78
9. Piston cooling jet control valve, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Inlet camshaft control valve 1, Fuse holder C	79

10. Auxiliary heater control unit, Front left headlight, Front right headlight, Fuse holder D, Vacuum pump for brakes	80
11. Wiper motor control unit, Relay and fuse carrier 3	81
008 - Fuses in interior	82-98
1. Fuses in interior	82
2. Fuse holder B, Fuse holder C	83
3. Reversing light switch, Air quality sensor, Pressure sender for refrigerant circuit, Alarm horn, Data bus diagnostic interface, Fuse holder C	84
4. Rotary light switch, Selector mechanism, Rain and light sensor, Anti-theft alarm sensor, Remote control receiver for auxiliary heater, Fuse holder C	85
5. Ignition/starter switch, Electromechanical parking brake button, Adaptive cruise control unit, Control unit for cornering light and headlight range control, Fuse holder C, Diagnostic connection	86
6. Fresh air blower control unit, Trailer detector control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Front left seat belt, Fuse holder C	87
7. Front passenger door control unit, Front right seat belt, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Rear passenger side window regulator motor	88
8. Interior mirror, Fuse holder C	89
9. Airbag control unit, Parking aid control unit, Lane change assist control unit, Lane change assist control unit 2, Front camera for driver assist systems, Fuse holder C, Front interior light	90
10. Convertible roof actuation hydraulic pump relay, Hydraulic pump relay 2 for convertible roof, Front left headlight, Front right headlight, Air conditioner compressor regulating valve, Fuse holder C	91
11. Control unit for electronic steering column lock, Emergency call module control unit and communication unit, Dash panel insert, Storage compartment with interface for mobile telephone, Transmission and reception stabilisation control unit, Fuse holder C, USB connection 1	92
12. Rear lid handle, Engine/motor control unit, Interface for entry and start system, Fuse holder C, Vacuum pump for brakes	93
13. Convertible roof actuation control unit, Driver door control unit, Fuse holder C, Rear driver side window regulator motor	94
14. Heater and air conditioning controls, Driver seat lumbar support adjustment switch, Front passenger seat lumbar support adjustment switch, Digital sound package control unit, Fuse holder C	95
15. Steering column electronics control unit, Fuse holder C, USB charging socket 1	96
16. Electronically controlled damping control unit, Fuse holder C, Fuse carrier 5, Fuse carrier 9, 12 V socket 2	97
17. Onboard supply control unit, Fuse carrier 2	98
009 - Heated rear window	99-100
1. Heated rear window	99
2. Onboard supply control unit, Frequency modulation (FM) frequency filter in positive wire, Fuse holder C, Heated rear window	100
010 - Earthing concept in engine compartment	101-107
1. Earthing concept in engine compartment	101
2. Battery, ABS control unit, Battery monitor control unit, Power steering control unit, Engine/motor control unit, Radiator fan	102
3. Left horn, Wiper motor control unit, Mechatronic unit for dual clutch gearbox, Left fog light bulb, Front left headlight, Left light module	103
4. Brake light switch, Brake fluid level warning contact, Bonnet contact switch 2, Oil level and oil temperature sender, Clutch position sender, Adaptive cruise control unit, Control unit for cornering light and headlight range control, Air conditioner compressor regulating valve, Relay and fuse carrier 3, Left washer jet heater element, Right washer jet heater element	104
5. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage	105
6. Auxiliary heater control unit, Front right headlight, Ignition coil 4 with output stage, Charge air cooling pump, Vacuum pump for brakes	106
7. Bonnet contact switch, Front right brake pad wear sender, Air quality sensor, Pressure sender for refrigerant circuit, Alarm horn, Right fog light bulb, Right light module	107
011 - Earthing concept in interior	108-117
1. Earthing concept in interior	108
2. Driver seat lumbar support adjustment switch, Rear driver side window regulator motor, Seat heating (driver side)	109
3. Driver exterior door handle, Driver door control unit, Onboard supply control unit, Driver door lock unit	110
4. Rotary light switch, Parking aid control unit, Steering column electronics control unit, Data bus diagnostic interface, Control unit for electronic steering column lock, Dash panel insert, Front left footwell light, Fuse holder C	111
5. Interior mirror. Driver vanity mirror contact switch. Front passenger vanity mirror contact	112

switch, Right latch switch for convertible roof, Rain and light sensor, Anti-theft alarm sensor, Digital sound package control unit, Front camera for driver assist systems, Diagnostic connection, Front interior light	
6. Front passenger seat lumbar support adjustment switch, Fresh air blower control unit, Electronically controlled damping control unit, Front right footwell light, Seat heating (front passenger side)	113
7. Front passenger exterior door handle, Horn plate, Front passenger door control unit, Multifunction steering wheel control unit, Front passenger door lock unit, Rear passenger side window regulator motor, Glove compartment light	114
8. Rear lid handle, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Storage compartment with interface for mobile telephone, Transmission and reception stabilisation control unit, USB connection 1	115
9. Selector mechanism, Hazard warning light switch, Switch module 1 in centre console, Switch module 2 in centre console, Starter button, 12 V socket 2	116
10. Heater and air conditioning controls, Convertible roof actuation button, Electromechanical parking brake button, Interface for entry and start system, Centre console illumination bulb, USB charging socket 1	117
012 - Earthing concept in luggage compartment	118-123
1. Earthing concept in luggage compartment	118
2. Trailer detector control unit, Left tail light cluster, Front left seat belt, Front right seat belt, Trailer socket	119
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone, Convertible roof lock unit, Heated rear window	120
4. Rear lid handle, Right tail light cluster, Left tail light cluster 2, Right tail light cluster 2, High-level brake light bulb, Rear lid lock unit, Left number plate light, Right number plate light	121
5. Lane change assist control unit, Lane change assist control unit 2, Remote control receiver for auxiliary heater, Driver side exterior mirror, Passenger side exterior mirror	122
6. Convertible roof actuation control unit, Convertible roof actuation hydraulic pump relay, Fuel pump control unit, Hydraulic pump relay 2 for convertible roof, Metering pump	123
013 - Headlights , (8IT)	124-128
1. Headlights , (8IT)	124
2. Rear left vehicle level sender, Onboard supply control unit, Fuse holder C	125
3. Front left headlight, Left light module	126
4. Front right headlight, Right light module	127
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	128
014 - Headlights , (8ID)	129-131
1. Headlights , (8ID)	129
2. Onboard supply control unit, Left fog light bulb, Front left headlight, Left light module	130
3. Onboard supply control unit, Right fog light bulb, Front right headlight, Right light module	131
015 - Electromechanical steering , (1N3),(1N7)	132-134
1. Electromechanical steering , (1N3),(1N7)	132
2. Power steering control unit, Fuse holder B	133
3. Data bus diagnostic interface	134
016 - Seat heating , (4A3)	135-138
1. Seat heating , (4A3)	135
2. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	136
3. Onboard supply control unit, Seat heating (driver side)	137
4. Onboard supply control unit, Seat heating (front passenger side)	138
017 - Entry and start authorisation , (4F2),(4I3)	139-143
1. Entry and start authorisation , (4F2),(4I3)	139
2. Starter button, Interface for entry and start system, Rear bumper aerial for entry and start system, Fuse holder C	140
3. Onboard supply control unit, Engine/motor control unit, Interface for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	141
4. Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	142
5. Driver exterior door handle, Front passenger exterior door handle, Interface for entry and start system	143
018 - Window wash/wipe system , (8N6),(9T1)	144-147
1. Window wash/wipe system , (8N6),(9T1)	144
2. Fuse holder B, Relay and fuse carrier 3	145
3. Wiper motor control unit, Onboard supply control unit, Fuse holder C, Left washer jet heater element, Right washer jet heater element	146
4. Windscreen washer fluid level sender, Rain and light sensor, Onboard supply control unit, Washer	147

pump	
019 - Dual clutch gearbox 0CW , (0EG)	148-151
1. Dual clutch gearbox 0CW , (0EG)	148
2. Fuse holder B, Fuse holder C	149
3. Engine/motor control unit	150
4. Selector mechanism, Onboard supply control unit, Data bus diagnostic interface, Selector lever position display	151
020 - Steering wheel , (2PH)	152-153
1. Steering wheel , (2PH)	152
2. Horn plate, Steering column electronics control unit, Airbag igniter on driver side	153
021 - Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	154-157
1. Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	154
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side, Heated steering wheel	155
3. Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	156
4. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel	157
022 - Climatronic , (9AK)	158-165
1. Climatronic , (9AK)	158
2. Heater and air conditioning controls, Fuse holder C	159
3. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Data bus diagnostic interface	160
4. Heater and air conditioning controls, Fresh air blower control unit, Fresh air blower	161
5. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Air conditioner compressor regulating valve	162
6. Heater and air conditioning controls, Front left temperature flap, Front right temperature flap	163
7. Heater and air conditioning controls, Defroster flap, Air recirculation flap	164
8. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Air distribution flap	165
023 - Air conditioning system , (KH6)	166-170
1. Air conditioning system , (KH6)	166
2. Heater and air conditioning controls, Fuse holder C	167
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Fresh air blower control unit, Data bus diagnostic interface, Fresh air blower	168
4. Heater and air conditioning controls, Evaporator temperature sensor, Air conditioner compressor regulating valve, Air recirculation flap control motor	169
5. Heater and air conditioning controls, Air distribution flap, Front left temperature flap	170
024 - Interior lights , (QQ3)	171-174
1. Interior lights , (QQ3)	171
2. Onboard supply control unit, Front left footwell light, Front right footwell light, Centre console illumination bulb	172
3. Driver door control unit, Driver door storage compartment illumination bulb, Light for driver side interior door handle illumination, Light for driver door background lighting, Light 2 for driver door background lighting	173
4. Front passenger door control unit, Front passenger door storage compartment illumination bulb, Light for passenger side interior door handle illumination, Light for passenger door background lighting, Light 2 for passenger door background lighting	174
025 - Dash panel insert	175-178
1. Dash panel insert	175
2. Immobiliser reader coil, Data bus diagnostic interface, Dash panel insert, Fuse holder C	176
3. Fuel delivery unit, Control unit 1 for information electronics, Dash panel insert	177
4. Bonnet contact switch, Bonnet contact switch 2, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit, Dash panel insert	178
026 - Door control units, passenger side	179-187
1. Door control units, passenger side	179
2. Fuse holder C	180
3. Front passenger door control unit, Data bus diagnostic interface, Rear passenger side window regulator motor	181
4. Front passenger door control unit, Front passenger door lock unit	182
5. Front passenger door control unit, Front passenger door lock unit, Front passenger side window regulator motor	183
6. Front passenger exterior door handle, Front passenger door control unit	184
7. Front passenger side window regulator button, Front passenger door control unit	185
8. Front passenger door control unit, Passenger side exterior mirror	186
9. Front passenger door control unit, Passenger side exterior mirror	187
027 - Door control units, driver side	188-199

1. Door control units, driver side	188
2. Central switch for window regulators, Fuse holder C	189
3. Data bus diagnostic interface	190
4. Driver door control unit, Rear driver side window regulator motor	191
5. Driver door control unit, Driver door lock unit	192
6. Driver door control unit, Driver door lock unit	193
7. Exterior mirror adjuster, Driver door control unit	194
8. Driver side interior locking button for central locking system, Operating unit for window regulator in driver door, Driver door control unit, Central locking SAFELOCK function warning lamp	195
9. Driver door control unit, Driver side exterior mirror, Driver side window regulator motor	196
10. Driver door control unit, Driver side exterior mirror	197
11. Driver exterior door handle, Driver door control unit	198
12. Driver door control unit	199
028 - Fuel system , DKRF,DPCA	200-202
1. Fuel system , DKRF,DPCA	200
2. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Fuse holder B	201
3. Tank flap release, Fuel delivery unit, Onboard supply control unit, Dash panel insert	202
029 - Anti-theft alarm system , (7AS)	203-204
1. Anti-theft alarm system , (7AS)	203
2. Anti-theft alarm sensor, Alarm horn, Fuse holder C	204
030 - Parking aid (PDC) , (7X2),(7X5)	205-211
1. Parking aid (PDC) , (7X2),(7X5)	205
2. Front parking aid warning buzzer, Parking aid control unit, Data bus diagnostic interface, Fuse holder C	206
3. Switch module 2 in centre console, Front left parking aid sender, Front left sender for park assist steering on left side of vehicle, Parking aid control unit	207
4. Front right parking aid sender, Front centre right parking aid sender, Front centre left parking aid sender, Parking aid control unit	208
5. Rear left parking aid sender, Front right sender for park assist steering on right side of vehicle, Rear left park assist steering sender, Parking aid control unit	209
6. Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	210
7. Rear right park assist steering sender, Parking aid control unit	211
031 - Adaptive chassis control DCC , (2H4)	212-216
1. Adaptive chassis control DCC , (2H4)	212
2. Front left vehicle level sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Fuse holder C	213
3. Front right vehicle level sender, Front left body acceleration sender, Front right body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	214
4. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	215
5. Switch module 1 in centre console, Electronically controlled damping control unit, Onboard supply control unit, Data bus diagnostic interface	216
032 - Multimedia system	217-225
1. Multimedia system	217
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	218
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	219
4. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Rear left loudspeaker, Rear right loudspeaker	220
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	221
6. Control unit 1 for information electronics, Dash panel insert, Storage compartment with interface for mobile telephone, USB connection 1	222
7. Rear lid handle, Control unit 1 for information electronics, Front left loudspeaker, Front left treble loudspeaker, Front left bass loudspeaker	223
8. Control unit 1 for information electronics, Front right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	224
9. Control unit 1 for information electronics, Radio aerial 2, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Rear spoiler	225
033 - Reversing camera (Rear Assist) , (KA1)	226-227
1. Reversing camera (Rear Assist) , (KA1)	226
2. Rear lid handle. Onboard supply control unit. Control unit 1 for information electronics. Fuse	227

holder C	
034 - Auxiliary heater , (9M9)	228-231
1. Auxiliary heater , (9M9)	228
2. Auxiliary heater control unit, Data bus diagnostic interface, Fuse holder C, Fuse holder D, Metering pump	229
3. Auxiliary heater control unit	230
4. Remote control receiver for auxiliary heater, Auxiliary heater aerial	231
035 - Radiator fan	232-233
1. Radiator fan	232
2. Engine/motor control unit, Fuse holder B, Radiator fan	233
036 - Diagnostic connector	234-235
1. Diagnostic connector	234
2. Airbag control unit, Data bus diagnostic interface, Fuse holder C, Diagnostic connection	235
037 - Trailer coupling , (1D2)	236-239
1. Trailer coupling , (1D2)	236
2. Trailer detector control unit, Fuse holder C	237
3. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface	238
4. Trailer detector control unit, Trailer socket	239
038 - Sound system , (9VG)	240-243
1. Sound system , (9VG)	240
2. Digital sound package control unit, Control unit 1 for information electronics, Subwoofer, Fuse holder C	241
3. Digital sound package control unit, Data bus diagnostic interface, Front left treble loudspeaker, Front left bass loudspeaker	242
4. Digital sound package control unit, Rear left loudspeaker, Rear right loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	243
039 - Adaptive cruise control , (6K4),(8T7),(8T8)	244-245
1. Adaptive cruise control , (6K4),(8T7),(8T8)	244
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C	245
040 - Electrohydraulic control of convertible roof , (3FN)	246-252
1. Electrohydraulic control of convertible roof , (3FN)	246
2. Convertible roof actuation control unit, Data bus diagnostic interface, Fuse holder C	247
3. Convertible roof actuation control unit, Convertible roof actuation hydraulic pump relay, Hydraulic pump relay 2 for convertible roof	248
4. Left latch switch for convertible roof, Right latch switch for convertible roof, Convertible roof actuation control unit, Convertible roof actuation hydraulic pump	249
5. Sender for roof stowed, Convertible roof closing sender, Convertible roof actuation control unit, Convertible roof lock unit	250
6. Rotary light switch, Convertible roof actuation button, Central switch for window regulators, Convertible roof actuation control unit	251
7. Driver door control unit, Front passenger door control unit, Rear driver side window regulator motor, Rear passenger side window regulator motor	252
041 - USB connections for data transfer , (U9B),(U9C)	253-256
1. USB connections for data transfer , (U9B),(U9C)	253
2. Fuse holder C, Fuse carrier 5, Fuse carrier 9	254
3. Control unit 1 for information electronics, USB connection 1	255
4. USB charging socket 1	256
042 - Front camera for driver assist systems , (QK1)	257-258
1. Front camera for driver assist systems , (QK1)	257
2. Adaptive cruise control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	258
043 - Steering column electronics , (2ZD),(2ZW)	259-261
1. Steering column electronics , (2ZD),(2ZW)	259
2. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	260
3. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	261
044 - Steering column electronics , (1XX),(2PK),(2PU),(2ZH)	262-264
1. Steering column electronics , (1XX),(2PK),(2PU),(2ZH)	262
2. Airbag control unit, Steering column electronics control unit, Data bus diagnostic interface, Fuse holder C	263
3. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit	264
045 - Mobile telephone systems , (9ZX),(9IJ)	265-267
1. Mobile telephone systems . (9ZX).(9IJ)	265

2. Onboard supply control unit, Control unit 1 for information electronics, Storage compartment with interface for mobile telephone, Transmission and reception stabilisation control unit, Fuse holder C	266
3. Storage compartment with interface for mobile telephone, LTE aerial 1, Transmission and reception stabilisation control unit	267
046 - Emergency call module , (NZ4)	268-272
1. Emergency call module , (NZ4)	268
2. Data bus diagnostic interface, Emergency call module control unit and communication unit, Fuse holder C	269
3. Emergency call module control unit and communication unit, Telephone microphone, Loudspeaker for emergency call module, Front interior light	270
4. Airbag control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit	271
5. Emergency call module control unit and communication unit, GPS aerial, GSM aerial, LTE aerial 2	272
047 - Tail light clusters with LEDs , (8SK),(8SQ),(8VG)	273-277
1. Tail light clusters with LEDs , (8SK),(8SQ),(8VG)	273
2. Reversing light switch, Onboard supply control unit, Left tail light cluster, Fuse holder C	274
3. Onboard supply control unit, Right tail light cluster, Left tail light cluster 2	275
4. Onboard supply control unit, Right tail light cluster 2, High-level brake light bulb	276
5. Left number plate light, Right number plate light	277
048 - Rear lid remote release	278-280
1. Rear lid remote release	278
2. Rear lid handle, Onboard supply control unit, Fuse holder C	279
3. Onboard supply control unit, Rear lid lock unit	280
049 - Interior mirror	281-282
1. Interior mirror	281
2. Interior mirror, Onboard supply control unit, Fuse holder C, Front interior light	282
050 - Light switch	283-285
1. Light switch	283
2. Rotary light switch, Onboard supply control unit, Fuse holder C	284
3. Rotary light switch, Hazard warning light switch, Onboard supply control unit	285
051 - Horn , (8Y0)	286-287
1. Horn , (8Y0)	286
2. Left horn, Onboard supply control unit, Fuse holder B	287
052 - Lane change assist , (7Y1),(7Y9)	288-290
1. Lane change assist , (7Y1),(7Y9)	288
2. Lane change assist control unit, Lane change assist control unit 2, Fuse holder C, Driver side exterior mirror	289
3. Data bus diagnostic interface, Lane change assist control unit, Passenger side exterior mirror	290
053 - Fog light , (8WH)	291-292
1. Fog light , (8WH)	291
2. Onboard supply control unit, Left fog light bulb, Right fog light bulb	292
054 - 12 V sockets	293-294
1. 12 V sockets	293
2. Fuse holder C, 12 V socket 2	294
055 - Interior lights	295-298
1. Interior lights	295
2. Interior mirror, Airbag control unit, Fuse holder C, Front interior light	296
3. Glove compartment light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Front interior light, Glove compartment light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror	297
4. Onboard supply control unit, Emergency call module control unit and communication unit, Front interior light, Luggage compartment light	298
056 - Data bus network for powertrain CAN bus	299-300
1. Data bus network for powertrain CAN bus	299
2. Selector mechanism, Airbag control unit, Data bus diagnostic interface, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder C	300
057 - Data bus network for running gear CAN bus	301-303
1. Data bus network for running gear CAN bus	301
2. Electronically controlled damping control unit, Data bus diagnostic interface, Fuse holder C	302
3. ABS control unit, Parking aid control unit, Power steering control unit	303
058 - Data bus network for convenience CAN bus	304-307
1. Data bus network for convenience CAN bus	304
2. Data bus diagnostic interface, Control unit for cornering light and headlight range control, Fuse holder C	305
3. Heater and air conditioning controls, Convertible roof actuation control unit, Interface for entry and start system, Dash panel insert, Front left headlight, Front right headlight	306

4. Trailer detector control unit, Driver door control unit, Front passenger door control unit, Onboard supply control unit, Control unit for electronic steering column lock, Emergency call module control unit and communication unit	307
059 - Data bus network for communication CAN bus	308-309
1. Data bus network for communication CAN bus	308
2. Auxiliary heater control unit, Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	309
060 - Data bus network for driver assist systems CAN bus	310-312
1. Data bus network for driver assist systems CAN bus	310
2. Adaptive cruise control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Fuse holder C	311
3. Adaptive cruise control unit, Lane change assist control unit, Lane change assist control unit 2, Front camera for driver assist systems	312
061 - Data bus network for ethernet	313-314
1. Data bus network for ethernet	313
2. Digital sound package control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Dash panel insert	314
062 - Electrically adjustable lumbar support , (7P1)	315-317
1. Electrically adjustable lumbar support , (7P1)	315
2. Driver seat lumbar support adjustment switch, Fuse holder C, Lumbar support for driver seat	316
3. Front passenger seat lumbar support adjustment switch, Fuse carrier 2, Lumbar support for front passenger seat	317
063 - 1.0l petrol engine , DLAA	318-335
1. 1.0l petrol engine , DLAA	318
2. Fuse holder B	319
3. Fuse holder B	320
4. Engine/motor control unit, Fuse holder C	321
5. Brake light switch, Engine/motor control unit, Radiator fan	322
6. Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	323
7. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Radiator outlet coolant temperature sender, Engine/motor control unit	324
8. Accelerator pedal module, Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	325
9. Ignition/starter switch, Onboard supply control unit, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	326
10. Data bus diagnostic interface, Engine/motor control unit	327
11. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	328
12. Throttle valve module, Engine speed sender, Engine/motor control unit	329
13. Pressure sensor for activated charcoal filter air flushing, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	330
14. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	331
15. Engine temperature regulation module, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	332
16. Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	333
17. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Fuel metering valve, Charge air cooling pump	334
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	335
064 - Headlights , (8IT)	336-339
1. Headlights , (8IT)	336
2. Onboard supply control unit, Front left headlight	337
3. Onboard supply control unit, Front right headlight	338
4. Rear left vehicle level sender, Onboard supply control unit	339
065 - Headlights , (8IU),(8IV)	340-346
1. Headlights , (8IU),(8IV)	340
2. Light conductor for contour lighting in radiator grille, front left, Front left headlight, Fuse holder C, Fuse holder D	341
3. Front left headlight, Left light module	342
4. Rear left vehicle level sender, Onboard supply control unit, Front left headlight, Left light module	343
5. Onboard supply control unit. Light conductor for contour lighting in radiator grille, front right.	344

Front right headlight, Right light module	345
6. Front right headlight, Right light module	346
7. Data bus diagnostic interface, Control unit for cornering light and headlight range control	347-351
066 - Tail light clusters with LEDs , (8VP)	
1. Tail light clusters with LEDs , (8VP)	347
2. Reversing light switch, Onboard supply control unit, Left tail light cluster, Fuse holder C	348
3. Onboard supply control unit, Right tail light cluster, Left tail light cluster 2	349
4. Onboard supply control unit, Left tail light cluster 2, Right tail light cluster 2, High-level brake light bulb	350
5. Onboard supply control unit, Right tail light cluster 2, Left number plate light, Right number plate light	351
068 - Multifunction steering wheel , (2PD),(2PE),(2PS),(2PT)	352-355
1. Multifunction steering wheel , (2PD),(2PE),(2PS),(2PT)	352
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	353
3. Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection, Heated steering wheel	354
4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	355
069 - Multifunction steering wheel , (2FD),(2FE),(2FM),(2FT)	356-359
1. Multifunction steering wheel , (2FD),(2FE),(2FM),(2FT)	356
2. Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	357
3. Multifunction steering wheel control unit, Steering column electronics control unit, Control unit for steering wheel contact detection, Heated steering wheel	358
4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	359
070 - USB connections for data transfer , (U9E)	360-362
1. USB connections for data transfer , (U9E)	360
2. Onboard supply control unit, Fuse holder C, USB connection 1	361
3. Control unit 1 for information electronics, USB charging socket 1, USB connection 1	362
801 - - Fitting locations: Earth points - 3	363-376
1. Earth points	363-376
1.1 Earth points in front part of vehicle	363-369
1.1.1 Front from left	365
1.1.2 Front from right	365
1.1.3 1.0l petrol engine, DKRF, DLAA	366
1.1.4 1.5l petrol engine, DPCA	367
1.1.5 Dual clutch gearbox, 0CW	368
1.1.6 Manual gearbox	369
1.2 Earth points in middle part of vehicle	370-372
1.2.1 Front left of interior	371
1.2.2 Front right of interior	371
1.2.3 Front middle of interior	372
1.3 Steering wheel	373
1.4 Earth points in rear part of vehicle	374-376
1.4.1 Left luggage compartment	374
1.4.2 On right in luggage compartment, rear lid	375-376
802 - -Fitting locations: Fuses - 3	377-408
1. Fuses	377-408
1.1 Multifuse fuse strip on fuse holder B -SB-, from November 2019	377-379
1.1.1 Fitting location of multifuse fuse strip on fuse holder B -SB-, from November 2019	377-378
1.1.2 Fuse assignment for multifuse fuse strip on fuse holder B -SB-, from November 2019	379
1.2 Fuse holder B -SB-, from November 2019	380-382
1.2.1 Fitting location of fuse holder B -SB-, from November 2019	380
1.2.2 Fuse assignment for fuse holder B -SB-, from November 2019	381-382
1.3 Fuse holder C -SC-, from November 2019	383-389
1.3.1 Fitting location of fuse holder C -SC-, left-hand drive models, from November 2019	383-384
1.3.2 Fitting location of fuse holder C -SC-, right-hand drive models, from November 2019	385-386
1.3.3 Fuse assignment for fuse holder C -SC-, from November 2019	387-389
1.4 Fuse holder C -SC-, from January 2022	390-397
1.4.1 Fitting location of fuse holder C -SC-, LHD models, from January 2022	391-392
1.4.2 Fitting location of fuse holder C -SC-, RHD models, from January 2022	393-394
1.4.3 Fuse assignment for fuse holder C -SC-, from January 2022	395-397
1.5 Individual fuses, from August 2019	398-401
1.5.1 Fitting location of individual fuses. LHD models. from November 2019	399

1.5.2 Fitting location of individual fuses, RHD models, from November 2019	400
1.5.3 Fuse assignment for individual fuses, left-hand drive models, from August 2019	401
1.5.4 Fuse assignment for individual fuses, right-hand drive models, from August 2019	401
1.6 Fuse holder D -SD-, from November 2019	402-403
1.6.1 Fitting location of fuse holder D -SD-, from November 2019	402-403
1.6.2 Fuse assignment for fuse holder D -SD-, from November 2019	404
1.7 Fuse holder D -SD-, from July 2021	404-405
1.7.1 Fitting location of fuse holder D -SD-, from July 2021	404-405
1.7.2 Fuse assignment for fuse holder D -SD-, from July 2021	406
1.8 Fuse holder D -SD-, from January 2022	406-408
1.8.1 Fitting location of fuse holder D -SD-, from January 2022	406-407
1.8.2 Fuse assignment for fuse holder D -SD-, from January 2022	408
803 -- Fitting locations: Relays - 3	409-415
1. Relays	409-415
1.1 Relays on fuse holder B -SB-, from November 2019	410
1.1.1 Relays on fuse holder B -SB-, from November 2019	410
1.2 Relays on fuse holder C -SC-, from November 2019	411-412
1.2.1 Relays on fuse holder C -SC-, LHD models, from November 2019	412
1.2.2 Relays on fuse holder C -SC-, RHD models, from November 2019	412
1.3 Relay and fuse carrier 3 -SR3-, from November 2019	413
1.3.1 Relay and fuse carrier 3 -SR3-, from November 2019	413
1.4 Single relay in luggage compartment, from November 2019	414-415
1.4.1 Single relay in luggage compartment, from November 2019	414-415
804 -- Fitting locations: front part of vehicle - 3	416-438
1. Fitting location: front part of vehicle	416-438
1.1 Front, view from front	421
1.2 Front, view from left	422
1.3 Front, view from right	423
1.4 1.0 l petrol engine, DKRF	424-426
1.4.1 1.0l petrol engine, DKRF, from front	425
1.4.2 1.0l petrol engine, DKRF, from above	425
1.4.3 1.0l petrol engine, DKRF, from rear	426
1.5 1.0l petrol engine, DLAA	427-429
1.5.1 1.0l petrol engine, DLAA, from front	428
1.5.2 1.0l petrol engine, DLAA, from above	428
1.5.3 1.0l petrol engine, DLAA, from rear	429
1.6 1.5l petrol engine, DPCA	430-433
1.6.1 1.5l petrol engine, DPCA, from front	431
1.6.2 1.5l petrol engine, DPCA, from above	431
1.6.3 1.5l petrol engine, DPCA, from right	432
1.6.4 1.5l petrol engine, DPCA, from rear	433
1.7 Manual gearbox	434-436
1.7.1 Manual gearbox, 02S	435
1.7.2 Manual gearbox, 0AJ, 0C9	436
1.8 Dual clutch gearbox	437-438
1.8.1 Dual clutch gearbox, 0CW	437-438
805 -- Fitting locations: middle part of vehicle - 3	439-484
1. Fitting locations: middle part of vehicle	439-484
1.1 At front of interior	450-466
1.1.1 Front left of interior, LHD models	451-452
1.1.2 Front left of interior, RHD models	453
1.1.3 Left footwell, LHD models	454
1.1.4 Right footwell, RHD models	455
1.1.5 Front right of interior, LHD models	456
1.1.6 Front right of interior, RHD models	457
1.1.7 Dash panel, LHD models	458
1.1.8 Dash panel, RHD models	459
1.1.9 Steering wheel	460
1.1.10 Steering column	460-461
1.1.11 Front centre console, LHD models	462
1.1.12 Front centre console, RHD models	463
1.1.13 Left front seat, LHD models	464
1.1.14 Left front seat, RHD models	464
1.1.15 Right front seat, LHD models	465
1.1.16 Right front seat, RHD models	466
1.2 Rear interior	467-468

1.2.1 Rear interior, view from left	468
1.2.2 Rear interior, view from right	468
1.3 Roof	469
1.3.1 Roof	469
1.4 Doors	470-477
1.4.1 Driver door, left-hand drive models	471-472
1.4.2 Driver door, right-hand drive models	473-474
1.4.3 Front passenger door, left-hand drive models	475-476
1.4.4 Front passenger door, right-hand drive models	477
1.5 Heater and air conditioning unit	478-484
1.5.1 Air conditioning system, KH6, part 1	479-480
1.5.2 Air conditioning system, KH6, part 2	481
1.5.3 Climatronic, 9AK, part 1	482
1.5.4 Climatronic, 9AK, part 2	483-484
806 -- Fitting locations: rear part of vehicle - 3	485-490
1. Fitting locations: rear part of vehicle	485-490
1.1 Rear lid	486
1.2 Rear bumper	487
1.3 Rear side, view from left	488
1.4 Rear side, view from right	489-490
807 --Fitting locations: vehicle underbody - 3	491-492
1. Fitting locations: vehicle underbody	491-492
1.1 Underbody	491-492
830 --Connector views: parts with prefix A to D - 3	493-496
1. Connector views: parts with prefix A to D	493-496
1.1 Starter -B-	493
1.1.1 Connector -T1mt-	493
1.2 Alternator with voltage regulator -CX1-	493
1.2.1 Connector -T2w-	494
1.3 Ignition/starter switch -D-	494
1.3.1 Connector -T6h-	494
1.4 Immobiliser reader coil -D2-	495-496
1.4.1 Connector -T2x-	495-496
831 --Connector views: parts with prefix E - 3	497-526
1. Connector views: parts with prefix E	497-526
1.1 Driver side belt switch -E24-	498
1.1.1 Connector -T2gx-	498
1.1.2 Connector -T2z-	498
1.2 Front passenger side belt switch -E25-	499
1.2.1 Connector -T2aa-	499
1.3 Glove compartment light switch -E26-	500
1.3.1 Connector -T3e-	500
1.4 Convertible roof actuation button -E137-	501
1.4.1 Connector -T4l-	501
1.5 Driver seat lumbar support adjustment switch -E176-	502
1.5.1 Connector -T6j-	502
1.6 Front passenger seat lumbar support adjustment switch -E177-	503
1.6.1 Connector -T6k-	503
1.7 Key operated switch to deactivate airbag on front passenger side -E224-	504
1.7.1 Connector -T6i-	504
1.8 Driver side interior locking button for central locking system -E308-	505
1.8.1 Connector -T4o-	505
1.9 Starter button -E378-	506
1.9.1 Connector -T4n-	506
1.10 Operating unit for window regulator in driver door -E512-	507
1.10.1 Connector -T10l-	507
1.11 Electromechanical parking brake button -E538-	508
1.11.1 Connector -T12a-	508
1.12 Central switch for window regulators -E643-	509
1.12.1 Connector -T4p-	509
1.13 Front passenger side window regulator button -E716-	510
1.13.1 Connector -T4k-	510
1.14 Rotary light switch -EX1-	511
1.14.1 Connector -T10m-	511
1.15 Selector mechanism -EX2-	512
1.15.1 Connector -T10a-	512

1.16 Hazard warning light switch -EX3-	513
1.16.1 Connector -T6m-	513
1.17 Interior mirror -EX5-	514
1.17.1 Connector -T8ad-	514
1.18 Driver exterior door handle -EX6-	515
1.18.1 Connector -T4ca-	515
1.19 Front passenger exterior door handle -EX7-	516
1.19.1 Connector -T4cb-	516
1.20 Exterior mirror adjuster -EX11-	517
1.20.1 Connector -T6l-	517
1.21 Tank flap release -EX13-	518
1.21.1 Connector -T2af-	518
1.22 Heater and air conditioning controls -EX21-	519-520
1.22.1 Connector -T20e-	519
1.22.2 Connector -T16j-	520
1.22.3 Connector -T16k-	521
1.23 Switch module 1 in centre console -EX23-	521
1.23.1 Connector -T10n-	521
1.24 Switch module 2 in centre console -EX30-	522
1.24.1 Connector -T10o-	522
1.25 Rear lid handle -EX37-	523-526
1.25.1 Connector -T4m-	523
1.25.2 Connector -T4at-	524
1.25.3 Connector -T2ew-	525
1.25.4 Connector -T2y-	525-526
832 - -Connector views: parts with prefix F - 3	527-537
1. Connector views: parts with prefix F	527-537
1.1 Brake light switch -F-	527
1.1.1 Connector -T4q-	527
1.2 Reversing light switch -F4-	528
1.2.1 Connector -T2al-	528
1.3 Brake fluid level warning contact -F34-	528
1.3.1 Connector -T2ak-	529
1.4 Driver vanity mirror contact switch -F147-	529
1.4.1 Connector -T2ag-	529
1.5 Front passenger vanity mirror contact switch -F148-	530
1.5.1 Connector -T2ah-	530
1.6 Left latch switch for convertible roof -F169-	531
1.6.1 Connector -T2ad-	531
1.7 Right latch switch for convertible roof -F170-	532
1.7.1 Connector -T2ae-	532
1.8 Bonnet contact switch -F266-	533
1.8.1 Connector -T2ai-	533
1.9 Bonnet contact switch 2 -F329-	534
1.9.1 Connector -T2aj-	534
1.10 Belt switch for seat row 2, driver side -F390-	535
1.10.1 Connector -T2ab-	535
1.11 Belt switch for seat row 2, passenger side -F392-	536-537
1.11.1 Connector -T2ac-	536-537
833 - -Connector views: parts with prefix G - 3	538-607
1. Connector views: parts with prefix G	538-607
1.1 Oil pressure sender -G10-	540
1.1.1 Connector -T3f-	540
1.2 Ambient temperature sensor -G17-	541
1.2.1 Connector -T2an-	541
1.3 Engine speed sender -G28-	541
1.3.1 Connector -T3w-	542
1.4 Coolant shortage indicator sender -G32-	542
1.4.1 Connector -T2ap-	542
1.5 Windscreen washer fluid level sender -G33-	543
1.5.1 Connector -T2aq-	543
1.6 Front right brake pad wear sender -G35-	544
1.6.1 Connector -T2au-	544
1.7 Rear right speed sensor -G44-	545
1.7.1 Connector -T2ax-	545
1.8 Front right speed sensor -G45-	546

1.8.1 Connector -T2az-	546
1.9 Rear left speed sensor -G46-	547
1.9.1 Connector -T2ba-	547
1.10 Front left speed sensor -G47-	548
1.10.1 Connector -T2bb-	548
1.11 Knock sensor 1 -G61-	549-550
1.11.1 Connector -T2bg-	549
1.11.2 Connector -T2bf-	550
1.12 Coolant temperature sender -G62-	551
1.12.1 Connector -T2bh-	551
1.12.2 Connector -T2bi-	551
1.13 Rear left vehicle level sender -G76-	552
1.13.1 Connector -T4w-	552
1.14 Front left vehicle level sender -G78-	553
1.14.1 Connector -T4bx-	553
1.15 Engine outlet coolant temperature sender -G82-	554
1.15.1 Connector -T2bk-	554
1.16 Radiator outlet coolant temperature sender -G83-	555
1.16.1 Connector -T2bl-	555
1.17 Sunlight penetration photosensor -G107-	556
1.17.1 Connector -T6n-	556
1.18 Seat occupied sensor on front passenger side -G128-	557
1.18.1 Connector -T2am-	557
1.19 Left vent temperature sender -G150-	558
1.19.1 Connector -T2av-	558
1.20 Right vent temperature sender -G151-	559
1.20.1 Connector -T2aw-	559
1.21 Side airbag crash sensor on driver side -G179-	560
1.21.1 Connector -T2ao-	560
1.22 Side airbag crash sensor on front passenger side -G180-	561
1.22.1 Connector -T2gu-	561
1.23 Crash sensor for front airbag -G190-	562
1.23.1 Connector -T2gw-	562
1.24 Footwell vent temperature sender -G192-	563
1.24.1 Connector -T2gl-	563
1.25 Rear left parking aid sender -G203-	564
1.25.1 Connector -T3j-	564
1.26 Rear centre left parking aid sender -G204-	565
1.26.1 Connector -T3k-	565
1.27 Rear centre right parking aid sender -G205-	566
1.27.1 Connector -T3l-	566
1.28 Rear right parking aid sender -G206-	567
1.28.1 Connector -T3m-	567
1.29 Air quality sensor -G238-	568
1.29.1 Connector -T3n-	568
1.30 Fuel pressure sender -G247-	569
1.30.1 Connector -T3o-	569
1.31 Front right parking aid sender -G252-	570
1.31.1 Connector -T3p-	570
1.32 Front centre right parking aid sender -G253-	571
1.32.1 Connector -T3q-	571
1.33 Front centre left parking aid sender -G254-	572
1.33.1 Connector -T3r-	572
1.34 Front left parking aid sender -G255-	573
1.34.1 Connector -T3s-	573
1.35 Oil level and oil temperature sender -G266-	574-575
1.35.1 Connector -T3u-	574
1.35.2 Connector -T3v-	575
1.36 Front right vehicle level sender -G289-	576
1.36.1 Connector -T4s-	576
1.37 Evaporator temperature sensor -G308-	576
1.37.1 Connector -T2gm-	577
1.38 Front left body acceleration sender -G341-	577
1.38.1 Connector -T2ar-	577
1.39 Front right body acceleration sender -G342-	578
1.39.1 Connector -T2as-	578

1.40 Rear body acceleration sender -G343-	579
1.40.1 Connector -T2at-	579
1.41 Rain and light sensor -G397-	580
1.41.1 Connector -T3am-	580
1.42 Exhaust gas pressure sensor 1 -G450-	581
1.42.1 Connector -T3bw-	581
1.43 Clutch position sender -G476-	582
1.43.1 Connector -T5b-	582
1.44 Front left sender for park assist steering on left side of vehicle -G568-	583
1.44.1 Connector -T3ac-	583
1.45 Front right sender for park assist steering on right side of vehicle -G569-	584
1.45.1 Connector -T3ad-	584
1.46 Anti-theft alarm sensor -G578-	585
1.46.1 Connector -T4u-	585
1.47 Vacuum sender -G608-	586
1.47.1 Connector -T3x-	586
1.48 Gearbox neutral position sender -G701-	587
1.48.1 Connector -T3ah-	587
1.49 Rear left park assist steering sender -G716-	588
1.49.1 Connector -T3aj-	588
1.50 Rear right park assist steering sender -G717-	589
1.50.1 Connector -T3ak-	589
1.51 Pressure sender for refrigerant circuit -G805-	590
1.51.1 Connector -T3al-	590
1.52 Inlet camshaft position sender -G1002-	591-592
1.52.1 Connector -T3bg-	591
1.52.2 Connector -T3bx-	592
1.53 Exhaust camshaft position sender -G1003-	593
1.53.1 Connector -T3bf-	593
1.54 Rear centre side airbag crash sensor -G1122-	593
1.54.1 Connector -T2bm-	594
1.55 Fuel delivery unit -GX1-	594
1.55.1 Connector -T5c-	594
1.56 Accelerator pedal module -GX2-	595
1.56.1 Connector -T6p-	595
1.57 Throttle valve module -GX3-	596-597
1.57.1 Connector -T6q-	596
1.57.2 Connector -T6r-	597
1.58 Lambda probe 1 after catalytic converter -GX7-	598
1.58.1 Connector -T4ad-	598
1.59 Intake manifold sender -GX9-	598-599
1.59.1 Connector -T4bw-	599
1.59.2 Connector -T3ai-	599
1.60 Lambda probe 1 before catalytic converter -GX10-	600-601
1.60.1 Connector -T6o-	600
1.60.2 Connector -T4y-	601
1.61 Charge pressure sender -GX26-	602
1.61.1 Connector -T4bn-	602
1.61.2 Connector -T3y-	602
1.62 Engine temperature regulation module -GX33-	603
1.62.1 Connector -T5s-	603
1.63 Charge pressure control module -GX34-	604
1.63.1 Connector -T6ad-	604
1.64 Pressure sensor for activated charcoal filter air flushing -GX44-	605-607
1.64.1 Connector -T4br-	605
1.64.2 Connector -T4bo-	606-607
834 - -Connector views: parts with prefix H to I - 3	608-610
1. Connector views: parts with prefix H to I	608-610
1.1 Alarm horn -H12-	608
1.1.1 Connector -T3an-	608
1.2 Front parking aid warning buzzer -H22-	608
1.2.1 Connector -T2bn-	608
1.3 Left horn -H33-	609-610
1.3.1 Connector -T2bo-	609-610
835 - -Connector views: parts with prefix J - 3	611-662
1. Connector views: parts with prefix J	611-662

1.1 ABS control unit -J104-	612
1.1.1 Connector -T46a-	612
1.2 Fresh air blower control unit -J126-	613
1.2.1 Connector -T4af-	613
1.2.2 Connector -T2gn-	613
1.3 Airbag control unit -J234-	614
1.3.1 Connector -T90a-	614
1.4 Electronically controlled damping control unit -J250-	615
1.4.1 Connector -T47a-	615
1.5 Convertible roof actuation control unit -J256-	616-617
1.5.1 Connector -T6t-	616
1.5.2 Connector -T20k-	617
1.5.3 Connector -T10u-	618
1.6 Convertible roof actuation hydraulic pump relay -J321-	618
1.6.1 Connector -T9a-	618
1.7 Trailer detector control unit -J345-	619-620
1.7.1 Connector -T10t-	619
1.7.2 Connector -T6ab-	620
1.7.3 Connector -T24a-	621
1.8 Auxiliary heater control unit -J364-	621-622
1.8.1 Connector -T2eu-	621
1.8.2 Connector -T6u-	622
1.9 Battery monitor control unit -J367-	623
1.9.1 Connector -T2fe-	623
1.10 Driver door control unit -J386-	624-625
1.10.1 Connector -T20j-	624
1.10.2 Connector -T32b-	624
1.10.3 Connector -T6v-	625
1.10.4 Connector -T16h-	626
1.11 Front passenger door control unit -J387-	626-628
1.11.1 Connector -T20m-	627
1.11.2 Connector -T16i-	627
1.11.3 Connector -T6w-	628
1.11.4 Connector -T32c-	629
1.12 Wiper motor control unit -J400-	629
1.12.1 Connector -T4bc-	629
1.13 Adaptive cruise control unit -J428-	630
1.13.1 Connector -T7a-	630
1.14 Parking aid control unit -J446-	631-632
1.14.1 Connector -T26a-	631
1.14.2 Connector -T18a-	632
1.15 Multifunction steering wheel control unit -J453-	633
1.15.1 Connector -T6al-	633
1.15.2 Connector -T5t-	633
1.16 Power steering control unit -J500-	634-635
1.16.1 Connector -T2bq-	634
1.16.2 Connector -T3bc-	635
1.17 Onboard supply control unit -J519-	636-637
1.17.1 Connector -T73b-	636
1.17.2 Connector -T46b-	637
1.17.3 Connector -T73a-	637
1.18 Digital sound package control unit -J525-	638
1.18.1 Connector -T38a-	638
1.19 Steering column electronics control unit -J527-	639-640
1.19.1 Connector -T16d-	639
1.19.2 Connector -T14s-	640
1.19.3 Connector -T12h-	641
1.20 Data bus diagnostic interface -J533-	641
1.20.1 Connector -T20f-	641
1.21 Fuel pump control unit -J538-	642
1.21.1 Connector -T5g-	642
1.22 Hydraulic pump relay 2 for convertible roof -J588-	643
1.22.1 Connector -T9b-	643
1.23 Engine/motor control unit -J623-	644-645
1.23.1 Connector -T94a-	644
1.23.2 Connector -T60a-	645

1.24 Display unit for front information display and operating unit control unit -J685-	646
1.24.1 Connector -T12b-	646
1.24.2 Connector -T5l-	646
1.25 Mechatronic unit for dual clutch gearbox -J743-	647
1.25.1 Connector -T25a-	647
1.26 Control unit for cornering light and headlight range control -J745-	648
1.26.1 Connector -T20h-	648
1.27 Control unit for electronic steering column lock -J764-	649
1.27.1 Connector -T4al-	649
1.28 Lane change assist control unit -J769-	650
1.28.1 Connector -T8k-	650
1.29 Lane change assist control unit 2 -J770-	651
1.29.1 Connector -T8l-	651
1.30 Control unit 1 for information electronics -J794-	652-657
1.30.1 Connector -T8af-	652
1.30.2 Connector -T8n-	653
1.30.3 Connector -T12e-	654
1.30.4 Connector -T12f-	654
1.30.5 Connector -T12g-	655
1.30.6 Connector -T2fh-	656
1.30.7 Connector -T5p-	656
1.30.8 Connector -T5r-	657
1.30.9 Connector -T4bm-	658
1.31 Emergency call module control unit and communication unit -J949-	658-660
1.31.1 Connector -T36a-	659
1.31.2 Connector -T2fc-	659
1.31.3 Connector -T4bl-	660
1.32 Interface for entry and start system -J965-	661
1.32.1 Connector -T40a-	661
1.33 Control unit for steering wheel contact detection -J1158-	661-662
1.33.1 Connector -T5u-	662
836 - -Connector views: parts with prefix K to M - 3	663-691
1. Connector views: parts with prefix K to M	663-691
1.1 Central locking SAFELOCK function warning lamp -K133-	663
1.1.1 Connector -T2br-	663
1.2 Front left footwell light -K268-	664
1.2.1 Connector -T2bs-	664
1.3 Front right footwell light -K269-	665
1.3.1 Connector -T2bt-	665
1.4 Dash panel insert -KX2-	666
1.4.1 Connector -T18b-	666
1.5 Left fog light bulb -L22-	667
1.5.1 Connector -T2bz-	667
1.6 Right fog light bulb -L23-	668
1.6.1 Connector -T2ca-	668
1.7 Centre console illumination bulb -L150-	669
1.7.1 Connector -T2bw-	669
1.8 Driver door storage compartment illumination bulb -L160-	670
1.8.1 Connector -T2bx-	670
1.9 Front passenger door storage compartment illumination bulb -L161-	671
1.9.1 Connector -T2by-	671
1.10 Light for driver side interior door handle illumination -L219-	672
1.10.1 Connector -T2bu-	672
1.11 Light for passenger side interior door handle illumination -L220-	673
1.11.1 Connector -T2bv-	673
1.12 Light conductor for contour lighting in radiator grille, front right -L362-	674
1.12.1 Connector -T6s-	674
1.13 Light conductor for contour lighting in radiator grille, front left -L363-	675
1.13.1 Connector -T6ao-	675
1.14 High-level brake light bulb -M25-	676
1.14.1 Connector -T2cb-	676
1.15 Front left headlight -MX1-	677-678
1.15.1 Connector -T14t-	677
1.15.2 Connector -T10r-	678
1.16 Front right headlight -MX2-	679
1.16.1 Connector -T14u-	679

1.16.2 Connector -T10s-	679
1.17 Left tail light cluster -MX3-	680-681
1.17.1 Connector -T8p-	680
1.17.2 Connector -T8o-	681
1.18 Right tail light cluster -MX4-	682
1.18.1 Connector -T8r-	682
1.18.2 Connector -T8q-	682
1.19 Left tail light cluster 2 -MX5-	683-684
1.19.1 Connector -T8u-	683
1.19.2 Connector -T8s-	684
1.20 Right tail light cluster 2 -MX6-	685
1.20.1 Connector -T8y-	685
1.20.2 Connector -T8x-	685
1.21 Left light module -MX7-	686-687
1.21.1 Connector -T4ag-	686
1.21.2 Connector -T8aa-	687
1.21.3 Connector -T6am-	688
1.22 Right light module -MX8-	688-691
1.22.1 Connector -T4ah-	689
1.22.2 Connector -T8ab-	689
1.22.3 Connector -T6an-	690-691
837 - -Connector views: parts with prefix N - 3	692-731
1. Connector views: parts with prefix N	692-731
1.1 Injector, cylinder 1 -N30-	693
1.1.1 Connector -T2cj-	693
1.1.2 Connector -T2ci-	694
1.2 Injector, cylinder 2 -N31-	694-695
1.2.1 Connector -T2cl-	694
1.2.2 Connector -T2ck-	695
1.3 Injector, cylinder 3 -N32-	696
1.3.1 Connector -T2co-	696
1.3.2 Connector -T2cn-	696
1.4 Injector, cylinder 4 -N33-	697
1.4.1 Connector -T2cp-	697
1.5 Ignition coil 1 with output stage -N70-	698
1.5.1 Connector -T4am-	698
1.6 Activated charcoal filter solenoid valve 1 -N80-	699-700
1.6.1 Connector -T2fl-	699
1.6.2 Connector -T2fj-	700
1.7 Airbag igniter on driver side -N95-	701
1.7.1 Connector -T2gq-	701
1.8 Ignition coil 2 with output stage -N127-	701
1.8.1 Connector -T4ai-	702
1.9 Airbag igniter 1 on front passenger side -N131-	702
1.9.1 Connector -T3ao-	702
1.10 Rear belt tensioner igniter on driver side -N196-	703
1.10.1 Connector -T2ce-	703
1.11 Rear belt tensioner igniter on passenger side -N197-	704
1.11.1 Connector -T2cf-	704
1.12 Side airbag igniter on driver side -N199-	705
1.12.1 Connector -T3ap-	705
1.13 Side airbag igniter on front passenger side -N200-	706
1.13.1 Connector -T3bv-	706
1.14 Camshaft control valve 1 -N205-	707-708
1.14.1 Connector -T2fr-	707
1.14.2 Connector -T2fs-	708
1.15 Fuel pressure regulating valve -N276-	709
1.15.1 Connector -T2ch-	709
1.16 Air conditioner compressor regulating valve -N280-	709-710
1.16.1 Connector -T2d-	710
1.16.2 Connector -T2cg-	710
1.17 Fuel metering valve -N290-	711
1.17.1 Connector -T2gy-	711
1.18 Ignition coil 3 with output stage -N291-	712
1.18.1 Connector -T4aj-	712
1.19 Ignition coil 4 with output stage -N292-	713

1.19.1 Connector -T4ak-	713
1.20 Exhaust camshaft control valve 1 -N318-	714-715
1.20.1 Connector -T2cm-	714
1.20.2 Connector -T2gz-	715
1.21 Front left shock absorber damping adjustment valve -N336-	716
1.21.1 Connector -T2cq-	716
1.22 Front right shock absorber damping adjustment valve -N337-	716
1.22.1 Connector -T2cr-	717
1.23 Rear left shock absorber damping adjustment valve -N338-	717
1.23.1 Connector -T2cs-	717
1.24 Rear right shock absorber damping adjustment valve -N339-	718
1.24.1 Connector -T2ct-	718
1.25 Valve for oil pressure control -N428-	719-720
1.25.1 Connector -T2cy-	719
1.25.2 Connector -T2cz-	720
1.26 Piston cooling jet control valve -N522-	721
1.26.1 Connector -T2hb-	721
1.27 Inlet cam actuator for cylinder 2 -N583-	721
1.27.1 Connector -T3aq-	722
1.28 Exhaust cam actuator for cylinder 2 -N587-	722
1.28.1 Connector -T3ar-	722
1.29 Inlet cam actuator for cylinder 3 -N591-	723
1.29.1 Connector -T3as-	723
1.30 Exhaust cam actuator for cylinder 3 -N595-	724
1.30.1 Connector -T3at-	724
1.31 Trigger for driver side roll-over bar -N646-	725
1.31.1 Connector -T3au-	725
1.32 Trigger for passenger side roll-over bar -N647-	726
1.32.1 Connector -T3av-	726
1.33 Inlet camshaft control valve 1 -N727-	727
1.33.1 Connector -T2ha-	727
1.34 Front left seat belt -NX10-	728-729
1.34.1 Connector -T2cc-	728
1.34.2 Connector -T5m-	729
1.35 Front right seat belt -NX11-	730-731
1.35.1 Connector -T5n-	730
1.35.2 Connector -T2cd-	730-731
839 - -Connector views: parts with prefix R - 3	732-763
1. Connector views: parts with prefix R	732-763
1.1 Front left loudspeaker -R2-	733
1.1.1 Connector -T4an-	733
1.2 Front right loudspeaker -R3-	733
1.2.1 Connector -T4au-	733
1.3 Rear left loudspeaker -R4-	734
1.3.1 Connector -T4av-	734
1.4 Rear right loudspeaker -R5-	735
1.4.1 Connector -T4aw-	735
1.5 Front left treble loudspeaker -R20-	736-737
1.5.1 Connector -T2dn-	736
1.5.2 Connector -T2do-	737
1.6 Front left bass loudspeaker -R21-	738
1.6.1 Connector -T4ao-	738
1.6.2 Connector -T4ap-	738
1.7 Front right treble loudspeaker -R22-	739-740
1.7.1 Connector -T2dq-	739
1.7.2 Connector -T2dr-	740
1.8 Front right bass loudspeaker -R23-	741
1.8.1 Connector -T4ar-	741
1.8.2 Connector -T4as-	741
1.9 Telephone microphone -R38-	742
1.9.1 Connector -T4ax-	742
1.10 GPS aerial -R50-	743
1.10.1 Connector -T2di-	743
1.11 Remote control receiver for auxiliary heater -R64-	744-745
1.11.1 Connector -T6y-	744
1.11.2 Connector -T2ev-	745

1.12 Radio aerial 2 -R93-	746
1.12.1 Connector -T2fb-	746
1.13 Rear bumper aerial for entry and start system -R136-	746
1.13.1 Connector -T2dk-	747
1.14 Interior aerial 1 for entry and start system -R138-	747
1.14.1 Connector -T2dl-	747
1.15 Interior aerial 2 for entry and start system -R139-	748
1.15.1 Connector -T2dm-	748
1.16 Amplitude modulation (AM) frequency filter -R177-	749-750
1.16.1 Connector -T2ey-	749
1.16.2 Connector -T3bh-	750
1.17 Frequency modulation (FM) frequency filter in negative wire -R178-	751
1.17.1 Connector -T2ex-	751
1.17.2 Connector -T3bi-	751
1.18 Frequency modulation (FM) frequency filter in positive wire -R179-	752-753
1.18.1 Connector -T1mu-	752
1.18.2 Connector -T1nj-	753
1.19 Auxiliary heater aerial -R182-	754
1.19.1 Connector -T2dj-	754
1.20 GSM aerial -R205-	754
1.20.1 Connector -T2ds-	755
1.21 Subwoofer -R211-	755
1.21.1 Connector -T4aq-	755
1.22 Front camera for driver assist systems -R242-	756
1.22.1 Connector -T12c-	756
1.23 Storage compartment with interface for mobile telephone -R265-	757-758
1.23.1 Connector -T6z-	757
1.23.2 Connector -T2ez-	758
1.24 LTE aerial 1 -R297-	759
1.24.1 Connector -T2dt-	759
1.25 LTE aerial 2 -R306-	759
1.25.1 Connector -T2du-	760
1.26 Transmission and reception stabilisation control unit -R308-	760-761
1.26.1 Connector -T4bk-	760
1.26.2 Connector -T2dv-	761
1.26.3 Connector -T2fa-	762
1.27 Loudspeaker for emergency call module -R335-	762-763
1.27.1 Connector -T2o-	762-763
840 - -Connector views: parts with prefix S to U - 3	764-823
1. Connector views: parts with prefix S to U	764-823
1.1 Coupling point on front left exterior door handle -TGVL-	765-766
1.1.1 Connector -T10b-	765
1.1.2 Connector -T10y-	765
1.1.3 Connector -T2j-	766
1.1.4 Connector -T2ge-	767
1.2 Coupling point on front right exterior door handle -TGVR-	767-769
1.2.1 Connector -T10c-	768
1.2.2 Connector -T2k-	768
1.2.3 Connector -T2gf-	769
1.2.4 Connector -T10z-	770
1.3 Coupling point in luggage compartment, left -THRL-	770-771
1.3.1 Connector -T8b-	770
1.3.2 Connector -T8c-	771
1.4 Coupling point in luggage compartment, right -THRR-	772-774
1.4.1 Connector -T2l-	772
1.4.2 Connector -T2m-	773
1.4.3 Connector -T10d-	773
1.4.4 Connector -T10e-	774
1.5 Coupling point in front left seat -TISVL-	775
1.5.1 Connector -T4f-	775
1.5.2 Connector -T4g-	775
1.6 Coupling point in front right seat -TISVR-	776-777
1.6.1 Connector -T4cd-	776
1.6.2 Connector -T4ce-	777
1.7 Coupling point in interior, below left -TIUL-	778-785
1.7.1 Connector -T17l-	778

1.7.2 Connector -T17d-	779
1.7.3 Connector -T17j-	780
1.7.4 Connector -T17b-	780
1.7.5 Connector -T17i-	781
1.7.6 Connector -T17a-	782
1.7.7 Connector -T17m-	782
1.7.8 Connector -T17e-	783
1.7.9 Connector -T17c-	784
1.7.10 Connector -T17k-	784
1.7.11 Connector -T17h-	785
1.7.12 Connector -T17n-	786
1.8 Coupling point in interior, below right -TIUR-	786-788
1.8.1 Connector -T17o-	787
1.8.2 Connector -T17g-	787
1.8.3 Connector -T17p-	788
1.8.4 Connector -T17f-	789
1.9 Coupling point in engine compartment -TM-	789-790
1.9.1 Connector -T2r-	789
1.9.2 Connector -T2gv-	790
1.10 Coupling point in engine compartment, left -TML-	791-795
1.10.1 Connector -T14o-	791
1.10.2 Connector -T14n-	792
1.10.3 Connector -T6d-	792
1.10.4 Connector -T6e-	793
1.10.5 Connector -T4d-	794
1.10.6 Connector -T4c-	794
1.10.7 Connector -T8e-	795
1.10.8 Connector -T8h-	796
1.11 Coupling point 2 for engine prewiring harness -TMOVO2-	796-797
1.11.1 Connector -T4e-	796
1.11.2 Connector -T4bp-	797
1.12 Coupling point 1 in centre console -TS34-	798
1.12.1 Connector -T20d-	798
1.12.2 Connector -T20a-	799
1.13 Coupling point for convertible roof -TS50-	799-800
1.13.1 Connector -T10p-	799
1.13.2 Connector -T10x-	800
1.14 Coupling point for front left seat -TSVL-	801-803
1.14.1 Connector -T3c-	801
1.14.2 Connector -T3a-	802
1.14.3 Connector -T17q-	802
1.14.4 Connector -T17r-	803
1.15 Coupling point for front right seat -TSVR-	804-806
1.15.1 Connector -T3d-	804
1.15.2 Connector -T3b-	805
1.15.3 Connector -T17s-	805
1.15.4 Connector -T17t-	806
1.16 Coupling point in front left door -TTIVL-	807-809
1.16.1 Connector -T4h-	807
1.16.2 Connector -T4i-	808
1.16.3 Connector -T2s-	808
1.16.4 Connector -T2t-	809
1.17 Coupling point in front right door -TTIVR-	810-812
1.17.1 Connector -T4j-	810
1.17.2 Connector -T4cc-	811
1.17.3 Connector -T2u-	811
1.17.4 Connector -T2v-	812
1.18 Coupling point for front left door -TTVL-	813
1.18.1 Connector -T27a-	813
1.18.2 Connector -T27b-	813
1.19 Coupling point for front right door -TTVR-	814-815
1.19.1 Connector -T27c-	814
1.19.2 Connector -T27d-	815
1.20 Trailer socket -U10-	816
1.20.1 Connector -T13a-	816
1.21 12 V socket 2 -U18-	816

1.21.1 Connector -T3aw-	817
1.22 Diagnostic connection -U31-	817
1.22.1 Connector -T16f-	817
1.23 USB charging socket 1 -U37-	818-819
1.23.1 Connector -T4ba-	818
1.23.2 Connector -T4cf-	819
1.24 USB connection 1 -U41-	820-823
1.24.1 Connector -T4bb-	820-821
1.24.2 Connector -T4cg-	822
1.24.3 Connector -T5o-	822-823
841 --Connector views: parts with prefix V - 3	824-850
1. Connector views: parts with prefix V	824-850
1.1 Washer pump -V5-	825
1.1.1 Connector -T2ef-	825
1.2 Metering pump -V54-	825
1.2.1 Connector -T2eg-	825
1.3 Air recirculation flap control motor -V113-	826
1.3.1 Connector -T6ak-	826
1.4 Convertible roof actuation hydraulic pump -V118-	827
1.4.1 Connector -T2dz-	827
1.5 Driver side window regulator motor -V147-	828
1.5.1 Connector -T3ax-	828
1.6 Front passenger side window regulator motor -V148-	829
1.6.1 Connector -T3ay-	829
1.7 Charge air cooling pump -V188-	830
1.7.1 Connector -T3ba-	830
1.8 Vacuum pump for brakes -V192-	831-832
1.8.1 Connector -T6aa-	831
1.8.2 Connector -T2ea-	832
1.9 Left parking brake motor -V282-	833
1.9.1 Connector -T2eb-	833
1.10 Right parking brake motor -V283-	833
1.10.1 Connector -T2ec-	834
1.11 Rear driver side window regulator motor -V471-	834
1.11.1 Connector -T6b-	834
1.12 Rear passenger side window regulator motor -V472-	835
1.12.1 Connector -T6c-	835
1.13 Lumbar support for driver seat -VX2-	836-837
1.13.1 Connector -T4bd-	836
1.13.2 Connector -T4bi-	837
1.14 Lumbar support for front passenger seat -VX3-	838
1.14.1 Connector -T4bj-	838
1.14.2 Connector -T4be-	838
1.15 Driver side exterior mirror -VX4-	839-840
1.15.1 Connector -T2fd-	839
1.15.2 Connector -T2fz-	840
1.16 Passenger side exterior mirror -VX5-	841
1.16.1 Connector -T2fw-	841
1.17 Driver door lock unit -VX21-	841
1.17.1 Connector -T8ac-	842
1.18 Front passenger door lock unit -VX22-	842
1.18.1 Connector -T8ah-	842
1.19 Rear lid lock unit -VX25-	843
1.19.1 Connector -T4r-	843
1.20 Air distribution flap -VX33-	844
1.20.1 Connector -T6aj-	844
1.21 Front left temperature flap -VX34-	845
1.21.1 Connector -T6af-	845
1.22 Front right temperature flap -VX35-	846
1.22.1 Connector -T6ag-	846
1.23 Defroster flap -VX47-	847
1.23.1 Connector -T6ai-	847
1.24 Air recirculation flap -VX52-	848
1.24.1 Connector -T6ah-	848
1.25 Radiator fan -VX57-	849-850
1.25.1 Connector -T4bf-	849-850

842 - -Connector views: parts with prefix W to Z - 3	851-867
1. Connector views: parts with prefix W to Z	851-867
1.1 Luggage compartment light -W3-	851
1.1.1 Connector -T2ej-	851
1.2 Glove compartment light -W6-	852
1.2.1 Connector -T2ek-	852
1.3 Front passenger side illuminated vanity mirror -W14-	853
1.3.1 Connector -T2eh-	853
1.4 Driver side illuminated vanity mirror -W20-	854
1.4.1 Connector -T2ei-	854
1.5 Light for driver door background lighting -W86-	855
1.5.1 Connector -T2el-	855
1.6 Light for passenger door background lighting -W87-	856
1.6.1 Connector -T2em-	856
1.7 Light 2 for driver door background lighting -W97-	857
1.7.1 Connector -T2en-	857
1.8 Light 2 for passenger door background lighting -W98-	858
1.8.1 Connector -T2eo-	858
1.9 Front interior light -WX1-	859-860
1.9.1 Connector -T12d-	859
1.9.2 Connector -T6ac-	860
1.10 Left number plate light -X4-	861
1.10.1 Connector -T2ep-	861
1.11 Right number plate light -X5-	861
1.11.1 Connector -T2eq-	862
1.12 Left washer jet heater element -Z20-	862
1.12.1 Connector -T2er-	862
1.13 Right washer jet heater element -Z21-	863
1.13.1 Connector -T2es-	863
1.14 Windscreen heater for front sensors -Z113-	864
1.14.1 Connector -T2et-	864
1.15 Seat heating (driver side) -ZX15-	865
1.15.1 Connector -T4bg-	865
1.16 Seat heating (front passenger side) -ZX16-	866-867
1.16.1 Connector -T4bh-	866-867