



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testing and measuring instruments during a road test	1
2 Repair notes	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
3 Battery	4
3.1 Battery - general notes	4
3.2 Types of battery	4
27 - Starter, current supply, CCS	5
1 Battery	5
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	7
1.3 Disconnecting and connecting battery	9
1.4 Removing and installing battery tray	11
1.5 Checking battery	12
1.6 Charging battery	12
1.7 Removing and installing earth wire with battery monitor control unit J367	12
2 Alternator	14
2.1 Assembly overview – alternator	14
2.2 Removing and installing alternator	15
2.3 Checking alternator	23
2.4 Removing and installing poly V-belt pulley	23
2.5 Removing and installing voltage regulator	31
3 Starter	35
3.1 Assembly overview – starter	35
3.2 Removing and installing starter	36
3.3 Checking starter	40
90 - Gauges, instruments	41
1 Dash panel insert	41
1.1 Assembly overview – dash panel insert	41
1.2 Removing and installing dash panel insert KX2	41
2 Horn	44
2.1 Assembly overview – horn	44
2.2 Removing and installing left horn H33/right horn H34	44
92 - Windscreen wash/wipe system	46
1 Windscreen wiper system	46
1.1 Assembly overview – windscreen wiper system	46
1.2 Moving wipers to service position	48
1.3 Removing and installing wiper blade	49
1.4 Removing and installing wiper arms	50
1.5 Adjusting wiper arms	51
1.6 Removing and installing wiper motor V	53
1.7 Removing and installing rain and light sensor	54
2 Windscreen washer system	58
2.1 Assembly overview – windscreen washer system	58



2.2	Removing and installing washer fluid reservoir	60
2.3	Removing and installing windscreen washer fluid level sender	62
2.4	Removing and installing windscreen washer pump	63
2.5	Removing and installing spray jets	64
2.6	Adjusting spray jets	65
3	Washer fluid lines	67
94	Lights, bulbs, switches - exterior	68
1	Headlights	68
1.1	Assembly overview – headlight	68
1.2	Removing and installing headlight	71
1.3	Adjusting headlights	72
1.4	Adjusting headlight installation position	73
1.5	Removing and installing output module 1 for LED headlight A31/A27	73
1.6	Daytime running lights	74
2	Tail light cluster	78
2.1	Assembly overview – tail light cluster in body	78
2.2	Assembly overview – tail light clusters in rear lid	78
2.3	Removing and installing tail light in rear lid	79
2.4	Adjusting installation position of tail light	80
2.5	Removing and installing tail light cluster	81
2.6	Removing and installing tail light bulb M2/M4	83
2.7	Removing and installing rear fog light bulb L46/L47	83
2.8	Removing and installing brake and tail light bulb M21/M22	83
2.9	Removing and installing reversing light bulb	83
2.10	Removing and installing turn signal bulb	84
3	High-level brake light	85
3.1	Assembly overview – high-level brake light	85
3.2	Removing and installing high-level brake light	85
4	Additional exterior lights	88
4.1	Removing and installing light conductor for contour lighting in radiator grille [L362]/[L363]	88
4.2	Removing and installing number plate light X4/X5	89
4.3	Removing and installing turn signal repeater bulb [L131]/[L132]	90
4.4	Removing and installing entry light in exterior mirror -W52/-W53-	90
5	Entry and start authorisation system	92
5.1	Overview of fitting locations – entry and start authorisation system	92
5.2	Overview of fitting locations – keyless entry system	93
5.3	Removing and installing entry and start authorisation control unit J518	93
5.4	Removing and installing door exterior handle contact sensor G415/G416	95
5.5	Removing and installing interior aerial 1 for entry and start authorisation R138	95
5.6	Removing and installing interior aerial 2 for entry and start system R139	96
5.7	Removing and installing rear bumper aerial for entry and start system R136	96
5.8	Removing and installing aerial for entry and start system R134/R135	97
6	Steering column switch module	98
6.1	Assembly overview – steering column switch module	98
6.2	Removing and installing lock cylinder	100
6.3	Removing and installing ignition key withdrawal lock solenoid N376	102
6.4	Removing and installing ignition/starter switch	102
6.5	Removing and installing steering column switch module	104
6.6	Removing and installing steering column electronics control unit J527	106
6.7	Removing and installing turn signal switch E2	110
6.8	Removing and installing cruise control system switch E45	111
6.9	Removing and installing intermittent wiper switch E22	111
6.10	Removing and installing base for steering column combination switch	111
6.11	Removing and installing steering lock housing	112



7	Automatic headlight range control	115
7.1	Assembly overview - automatic headlight range control	115
7.2	Removing and installing cornering light and headlight range control unit J745	116
96	Lights, bulbs, switches - interior	119
1	Lights	119
1.1	Overview of fitting locations – lights in dash panel	119
1.2	Overview of fitting locations – lights in front doors	120
1.3	Overview of fitting locations - lights in centre console	121
1.4	Overview of fitting locations – lights in luggage compartment	122
1.5	Overview of fitting locations – lights in roof trim	123
1.6	Removing and installing glove compartment light W6	124
1.7	Removing and installing front footwell light K268/K269	125
1.8	Removing and installing front footwell illumination bulb L151/L152	127
1.9	Removing and installing centre console illumination bulb L150	127
1.10	Removing and installing Central locking SAFELock function warning lamp K133	128
1.11	Removing and installing light for interior door handle illumination L219/L220	128
1.12	Removing and installing light 2 for door background lighting W97/W98	129
1.13	Removing and installing light for door ambient lighting W86/W87	130
1.14	Removing and installing door storage compartment illumination bulb L160/L161	130
1.15	Removing and installing selector lever position display Y26	131
1.16	Removing and installing luggage compartment light W3	132
1.17	Removing and installing illuminated vanity mirror W20/W14	132
1.18	Renewing front interior light bulb W1/W13/W19	133
2	Controls	135
2.1	Overview of fitting locations - controls in dash panel	136
2.2	Overview of fitting locations - controls in front doors	136
2.3	Overview of fitting locations - controls in centre console	137
2.4	Overview of fitting locations - controls in roof trim	139
2.5	Removing and installing rotary light switch EX1	140
2.6	Removing and installing TCS and ESP button E256	140
2.7	Removing and installing parking aid button E266	141
2.8	Removing and installing park assist steering button E581	141
2.9	Removing and installing front passenger airbag warning lamp K145	141
2.10	Removing and installing Start/Stop operation button E693	141
2.11	Removing and installing driving mode selection button E735	141
2.12	Removing and installing switch module in centre console EX23/EX30	141
2.13	Removing and installing hazard warning light switch EX3	142
2.14	Removing and installing buttons for seat heating E653/E654	143
2.15	Removing and installing glove compartment light switch E26	143
2.16	Removing and installing switch for exterior mirror adjuster EX11	144
2.17	Removing and installing operating unit for window regulator in driver door EX36	145
2.18	Removing and installing front passenger side window regulator button E716	146
2.19	Removing and installing driver side interior locking button for central locking system E308	147
2.20	Removing and installing door contact switch F2/F3	148
2.21	Removing and installing electromechanical parking brake button E538/auto-hold button E540	148
2.22	Removing and installing convertible roof actuation button E137	149
2.23	Removing and installing central switch for window regulators E643	150
2.24	Removing and installing starter button E378	150
2.25	Removing and installing rear lid contact switch	151
2.26	Removing and installing vanity mirror contact switch F147/F148	151
2.27	Removing and installing front interior light/reading light	151
2.28	Removing and installing front reading light button E633/E634	152
2.29	Removing and installing emergency assistance call button E276	152
3	Anti-theft alarm	153



3.1	Assembly overview – interior monitor	153
3.2	Removing and installing alarm horn H12	153
3.3	Removing and installing anti-theft alarm sensor G578	154
4	Immobiliser	156
4.1	Removing and installing immobiliser control unit	156
4.2	Removing and installing immobiliser reader coil	156
5	Towing bracket	158
5.1	Assembly overview - socket, trailer detector control unit	158
5.2	Trailer socket	158
5.3	Removing and installing trailer detector control unit J345	159
6	Cigarette lighter, socket	160
6.1	Removing and installing cigarette lighter U1	160
6.2	Removing and installing socket illumination bulb L42	160
6.3	Removing and installing rear cigarette lighter illumination bulb L32	160
6.4	Removing and installing electric socket U	160
97 - Wiring		161
1	Relay carriers, fuse holders, electronics boxes	161
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	161
1.2	Removing and installing electronics box	163
1.3	Removing and installing relay and fuse holder in electronics box	165
1.4	Removing and installing relay and fuse holder behind dash panel on driver side	168
2	Control units	171
2.1	Overview of fitting locations - control units	171
2.2	Removing and installing onboard supply control unit J519	173
2.3	Removing and installing data bus diagnostic interface J533	178
2.4	Removing and installing bracket for onboard supply control unit J519	180
2.5	Removing and installing parking aid control unit J446/park assist steering control unit J791	182
3	Connectors	184
3.1	Repairing electrical wiring harnesses and plug-in connections	184
4	Releasing and dismantling connector housings	185
5	Repairing aerial wires	186
6	Fibre optic cables	187