



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 Identification of heater and air conditioning unit	2
3 General information	4
3.1 Type plates, R1234yf	4
3.2 Type plates, R134a	4
4 Technical data	5
4.1 Refrigerant capacities, R1234yf	5
4.2 Refrigerant capacities, R134a	5
4.3 Refrigerant oil capacities, R1234yf	5
4.4 Refrigerant oil capacities, R134a	5
4.5 Oil distribution	6
5 Electrical components	7
5.1 Access to diagnoses	7
87 - Air conditioning system	8
1 Safety information and repair notes	8
1.1 Safety information	8
1.2 Repair instructions	8
2 Overview of fitting locations - air conditioning system	9
2.1 Overview of fitting locations – components not located in passenger compartment	9
2.2 Overview of fitting locations - components located in front section of passenger compartment	11
3 Refrigerant circuit	14
3.1 System overview - refrigerant circuit	14
3.2 Assembly overview – refrigerant lines	16
3.3 Assembly overview – condenser	18
3.4 Removing and installing pressure sender for refrigerant circuit [G805]	19
3.5 Removing and installing expansion valve	20
3.6 Removing and installing condenser	21
3.7 Disconnecting and connecting refrigerant lines on condenser	22
3.8 Removing and installing desiccant bag or cartridge	23
3.9 Removing and installing evacuating and charging valves on low and high-pressure side	27
3.10 Removing and installing refrigerant line with internal heat exchanger	28
3.11 Removing and installing refrigerant line from condenser to evaporator	30
3.12 Removing and installing refrigerant line from air conditioner compressor to condenser	32
3.13 Removing and installing refrigerant line from internal heat exchanger to air conditioner compressor	32
3.14 Commissioning air conditioning system after filling refrigerant circuit	33
4 Air conditioner compressor	35
4.1 Assembly overview – air conditioner compressor	35
4.2 Assembly overview - pulley	35
4.3 Removing air conditioning compressor from and installing on bracket	36
4.4 Removing and installing air conditioner compressor	37
4.5 Removing refrigerant lines from and installing to air conditioner compressor	39
4.6 Removing and installing air conditioning system magnetic clutch [N25]	41
5 Control motors	46
5.1 Overview of fitting locations - front control motors, Climatronic	46
5.2 Overview of fitting locations - front control motors, air conditioning system	48



5.3	Assembly overview – control motors, Climatronic	48
5.4	Assembly overview – control motors, air conditioning system	51
5.5	Removing and installing air distribution flap control motor [VX33]	53
5.6	Removing and installing control motor for front left temperature flap [VX34]	54
5.7	Removing and installing control motor for front right temperature flap [VX35]	56
5.8	Removing and installing control motor for fresh air and air recirculation flap [VX96]	57
5.9	Removing and installing air recirculation flap control motor [V113]	58
5.10	Removing and installing control motor for defroster flap [VX47]	59
5.11	Removing and installing air distribution flap actuator	61
5.12	Removing and installing fresh air/air recirculation, air flow flap actuator	62
6	Front heater and air conditioning unit	64
6.1	Assembly overview – heater and air conditioning unit	64
6.2	Assembly overview - add-on parts of heater and air conditioning unit and of air intake box	66
6.3	Assembly overview – evaporator housing	67
6.4	Removing and installing evaporator	68
6.5	Removing and installing auxiliary air heater element [Z35]	69
6.6	Removing and installing heater and air conditioning unit	70
6.7	Removing and installing bracket for heater and air conditioning unit	73
6.8	Dismantling and assembling heater and air conditioning unit	75
6.9	Removing and installing air distribution housing	75
6.10	Removing and installing dust and pollen filter	77
6.11	Removing and installing fresh air blower [V2]	77
6.12	Removing and installing fresh air blower control unit [J126]	78
6.13	Removing and installing heat exchanger	79
6.14	Removing and installing coolant pipes on heat exchanger	86
6.15	Removing and installing evaporator temperature sensor [G308]	87
6.16	Removing and installing condensation drain	88
6.17	Checking condensation drain	90
7	Air duct	92
7.1	Assembly overview – air duct and air distribution in passenger compartment	92
7.2	Removing and installing driver side footwell vents	93
7.3	Removing and installing front passenger side footwell vents	94
7.4	Removing and installing rear footwell vent	95
7.5	Removing and installing fresh air intake	96
7.6	Removing and installing cover for fresh air intake	97
7.7	Removing and installing air intake duct	98
7.8	Removing and installing air duct for defroster vent	98
7.9	Removing and installing air duct for centre dash panel vent	99
7.10	Removing and installing air duct for rear centre console vent	99
7.11	Removing and installing air duct for rear centre console vent	100
8	Operating and display unit	101
8.1	Overview of fitting locations – operating and display unit	101
8.2	Removing and installing operating and display unit, front	101
9	Other controlling and regulating components	102
9.1	Removing and installing sunlight penetration photosensor [G107]	102
9.2	Removing and installing air quality sensor [G238]	102
9.3	Removing and installing ambient temperature sensor [G17]	103
9.4	Removing and installing humidity sender for air conditioning system [G260]	103
9.5	Removing and installing left vent temperature sender [G150]	103
9.6	Removing and installing right vent temperature sender [G151]	104
9.7	Removing and installing footwell vent temperature sender [G192]	105
9.8	Removing and installing heater and air conditioning system control unit	106