



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on a high-voltage system	1
1.4 Safety precautions when working in the vicinity of high-voltage components	2
2 Identification	3
2.1 Allocation of PR number - brakes	3
3 Technical data	5
3.1 Technical data for brakes	5
4 Brake test	8
4.1 General information	8
4.2 Checking vehicles with front-wheel drive	8
45 - Anti-lock brake system	9
1 General information	9
1.1 Repair instructions for repair work on ABS	9
2 Overview of fitting locations	12
2.1 Overview of fitting locations – ABS/ESP	12
3 Control unit and hydraulic unit	15
3.1 Assembly overview – control unit and hydraulic unit	15
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	19
3.3 Separating control unit from hydraulic unit	31
3.4 Fitting control unit to hydraulic unit	33
3.5 Connecting brake lines to hydraulic unit	35
4 Sensors	38
4.1 Assembly overview – speed sensor on front axle	38
4.2 Assembly overview – speed sensors on rear axle	39
4.3 Removing and installing speed sensors on front axle G45/G47	39
4.4 Removing and installing speed sensors on rear axle G44/G46	40
4.5 Checking ABS sensor ring	41
46 - Brakes - mechanism	43
1 Front brake	43
1.1 Assembly overview – front brake	43
1.2 Removing and installing brake pads	47
1.3 Removing and installing brake caliper	54
1.4 Removing and installing brake disc	60
1.5 Removing and installing brake splash plate	62
2 Rear brake	65
2.1 Assembly overview - rear brakes	65
2.2 Removing and installing brake pads	72
2.3 Removing and installing brake caliper	79
2.4 Removing and installing brake carrier	84
2.5 Removing and installing brake disc	85
2.6 Removing and installing brake shoes	86
2.7 Resetting drum brakes	95
2.8 Removing and installing brake splash plate	96
3 Parking brake	98
3.1 Assembly overview – parking brake	98
3.2 Removing and installing handbrake lever	100
3.3 Removing and installing handbrake warning switch F9	102



3.4	Adjusting parking brake	103
3.5	Removing and installing rear brake cable	105
4	Brake pedal	113
4.1	Assembly overview – brake pedal	113
4.2	Separating brake pedal from and joining to brake servo	116
4.3	Removing and installing mounting bracket	118
4.4	Removing and installing brake pedal	121
4.5	Removing and installing mounting of brake pedal on push rod	122
47	Brakes - hydraulics	123
1	Front brake caliper	123
1.1	Assembly overview – front brake caliper	123
1.2	Removing and installing brake caliper piston	125
2	Rear brake caliper	127
2.1	Assembly overview – rear brake caliper	127
2.2	Removing and installing brake caliper piston	129
3	Brake servo and brake master cylinder	132
3.1	Assembly overview – brake servo/brake master cylinder	132
3.2	Removing and installing brake light switch	137
3.3	Removing and installing brake servo	138
3.4	Removing and installing brake master cylinder	147
3.5	Removing and installing brake fluid reservoir	156
4	Vacuum system	165
4.1	Assembly overview – vacuum pump	165
4.2	Checking non-return valve	170
4.3	Removing and installing vacuum sender G608	171
4.4	Checking vacuum system	172
4.5	Removing and installing electric vacuum pump	178
5	Hydraulic system	180
5.1	General notes on brake fluid	180
5.2	Bleeding hydraulic system following standard procedure	180
5.3	Subsequent bleeding of hydraulic system	182
5.4	Leakage test	183