



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when working on subframe	1
2 Repair notes	2
2.1 Leaks at shock absorbers	2
2.2 Noises from shock absorbers	2
2.3 Steering rack	3
2.4 Gaskets and seals	3
2.5 Nuts and bolts	3
2.6 Electrical components	4
3 Evaluating accident vehicles	5
3.1 Check list for evaluating running gear on accident vehicles	5
4 Disposal	7
4.1 Releasing gas and draining front gas-filled shock absorbers	7
4.2 Releasing gas and draining rear gas-filled shock absorbers	8
40 - Front suspension	10
1 Front axle	10
1.1 Overview of fitting locations – front axle	10
2 Subframe	13
2.1 Assembly overview – subframe	13
2.2 Removing and installing subframe without steering rack	13
2.3 Removing and installing subframe with steering rack	15
2.4 Fixing subframe in position	20
2.5 Lowering subframe	24
3 Anti-roll bar	28
3.1 Assembly overview – anti-roll bar	28
3.2 Removing and installing anti-roll bar	28
3.3 Removing and installing coupling rod	31
4 Suspension strut, upper suspension link	32
4.1 Assembly overview – suspension strut, upper suspension link	32
4.2 Removing and installing suspension strut	33
4.3 Repairing suspension strut	44
5 Lower suspension link, swivel joint	48
5.1 Assembly overview – lower suspension link, swivel joint	48
5.2 Removing and installing lower suspension link	49
5.3 Checking swivel joint	52
5.4 Removing and installing swivel joint	52
5.5 Renewing bonded rubber bush for lower suspension link	55
6 Wheel bearing	67
6.1 Assembly overview – wheel bearing assembly	67
6.2 Removing and installing wheel bearing housing	68
6.3 Removing and installing wheel bearing unit	73
7 Drive shaft	81
7.1 Overview - drive shaft	81
7.2 Assembly overview – drive shaft	82
7.3 Removing and installing drive shaft	90
7.4 Removing and installing joint	103
7.5 Removing and installing drive shaft heat shield	106
7.6 Dismantling and assembling drive shaft	107



7.7	Tensioning clamp for boot	130
7.8	Checking outer constant velocity joint	131
7.9	Checking inner constant velocity joint	133
42	- Rear suspension	136
1	Rear axle	136
1.1	Overview – rear axle	136
1.2	Removing and installing rear axle	138
1.3	Securing vehicle to support arms of lifting platform	141
2	Axle beam	143
2.1	Assembly overview – axle beam	143
2.2	Renewing bonded rubber bush for axle beam	144
2.3	Removing and installing cladding for axle beam	154
2.4	Removing and installing stone deflector for axle beam	155
3	Suspension strut, shock absorber, spring	158
3.1	Assembly overview – suspension strut, shock absorber, spring	158
3.2	Removing and installing shock absorber	161
3.3	Repairing shock absorber	163
3.4	Removing and installing spring	169
4	Wheel bearing assembly, trailing arm	172
4.1	Assembly overview – wheel bearing assembly	172
4.2	Removing and installing wheel bearing unit	173
43	- Self-levelling suspension	180
1	Electronic damping control	180
1.1	Overview of fitting locations - electronically controlled damping system	180
1.2	Removing and installing electronically controlled damping control unit J250	180
2	Vehicle level sender	182
2.1	Assembly overview – rear vehicle level senders	182
2.2	Removing and installing rear vehicle level senders G76/G77	182
44	- Wheels, tyres, vehicle geometry	185
1	Wheels, tyres	185
1.1	Removing wheel	185
1.2	Installing wheel	185
2	Wheel alignment	187
2.1	Notes for wheel alignment	187
2.2	Conditions for testing	187
2.3	Preparations for testing	188
2.4	Specifications for wheel alignment	189
2.5	Setting vehicle to initial position for wheel alignment	192
2.6	Wheel alignment procedure	192
2.7	Necessity of wheel alignment	193
2.8	Vehicle data sticker	194
2.9	Adjusting camber at front wheels	194
2.10	Adjusting camber on rear axle	196
2.11	Adjusting toe at rear axle	196
2.12	Adjusting front axle toe	196
2.13	Checking maximum steering wheel angle	197
3	Adaptive cruise control	198
3.1	Calibrating adaptive cruise control	198
4	Calibrating front camera for assist systems	203
48	- Steering	211
1	Steering wheel	211



1.1	Assembly overview – steering wheel	211
1.2	Removing and installing steering wheel	211
2	Steering column	213
2.1	Assembly overview – steering column	213
2.2	Removing and installing steering column	214
2.3	Handling and transporting steering column	220
2.4	Removing and installing intermediate steering shaft	221
2.5	Repairing steering column	222
2.6	Removing and installing control unit for electronic steering column lock J764	223
2.7	Removing and installing power steering control unit J500	224
3	Steering rack	229
3.1	Assembly overview – steering rack	229
3.2	Removing and installing steering rack	230
3.3	Removing and installing track rod	235
3.4	Removing and installing track rod ball joint	239
4	Sensors	242
4.1	Removing and installing steering angle sender G85	242