



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
98 - Assist systems	4
1 Fitting locations	4
1.1 Overview of fitting locations – senders, sensors and control units in front section of vehicle	4
1.2 Overview of fitting locations – senders, sensors and control units in centre section of vehicle	5
1.3 Overview of fitting locations – senders, sensors and control units in rear section of vehicle	6
2 Senders/sensors/control units	9
2.1 Removing and installing front parking aid senders G252/G253/G254/G255	9
2.2 Removing and installing rear parking aid senders G203/G204/G205/G206	11
2.3 Removing and installing front park assist steering sender G568/G569	13
2.4 Removing and installing rear park assist steering sender G716/G717	14
2.5 Removing and installing adaptive cruise control unit J428	15
2.6 Removing and installing front parking aid warning buzzer H22	16
2.7 Removing and installing parking aid control unit J446	18
2.8 Removing and installing lane change assist warning lamp in right exterior mirror K311/lane change assist warning lamp in left exterior mirror K312	19
2.9 Removing and installing lane change assist control unit J769/J770	19
2.10 Removing and installing reversing camera R189	20
2.11 Removing and installing front camera for driver assist systems R242	20
3 Adaptive cruise control	23
3.1 Components of adaptive cruise control	23
3.2 Calibrating adaptive cruise control	23
4 Parking aid/park assist steering/autonomous parking system	28
4.1 Components of parking aid/park assist steering/autonomous parking system	28
5 Lane change assist	29
5.1 Components of lane change assist	29
6 Reversing camera system	30
6.1 Overview of reversing camera system	30
6.2 Calibrating reversing camera system	30
7 Front camera for assist systems	36
7.1 Components of front camera for assist systems	36
7.2 Calibrating front camera for assist systems	36