



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testing and measuring instruments during a road test	1
2 Repair instructions	2
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 Routing and attachment of lines	2
3 Battery	4
3.1 Battery - general notes	4
3.2 Types of battery	4
27 - Starter, current supply, CCS	5
1 Battery	5
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	7
1.3 Disconnecting and connecting battery	9
1.4 Removing and installing battery tray	10
1.5 Checking battery	11
1.6 Charging battery	11
1.7 Removing and installing earth wire with battery monitor control unit J367	11
1.8 Adapting battery monitor control unit J367	12
2 Alternator	13
2.1 Assembly overview – alternator	13
2.2 Removing and installing alternator	13
2.3 Checking alternator	15
2.4 Removing and installing poly V-belt pulley	15
2.5 Removing and installing voltage regulator	22
3 Starter	26
3.1 Assembly overview – starter	26
3.2 Removing and installing starter	27
3.3 Checking starter	30
4 Start/stop system	31
4.1 General description - start/stop system	31
90 - Gauges, instruments	32
1 Dash panel insert	32
1.1 Assembly overview – dash panel insert	32
1.2 Removing and installing dash panel insert KX2	32
2 Horn	36
2.1 Assembly overview – horn	36
2.2 Removing and installing treble horn H2 and bass horn H7	36
92 - Windscreen wash/wipe system	38
1 Windscreen wiper system	38
1.1 Assembly overview – windscreen wiper system	38
1.2 Moving wipers to service position	40
1.3 Removing and installing wiper blade	40
1.4 Removing and installing wiper arms	41
1.5 Adjusting wiper arms	43
1.6 Removing and installing wiper motor Vxx	44



1.7	Removing and installing rain and light sensor	46
2	Windscreen washer system	51
2.1	Assembly overview – windscreen washer system	51
2.2	Removing and installing washer fluid reservoir	52
2.3	Removing and installing windscreen washer pump	53
2.4	Removing and installing spray jets	53
2.5	Adjusting spray jets	54
3	Rear window wiper system	56
3.1	Assembly overview – rear window wiper system	56
3.2	Removing and installing wiper blade	57
3.3	Removing and installing wiper arm	57
3.4	Adjusting wiper arm	58
3.5	Removing and installing rear window wiper motor V12	59
4	Rear window washer system	61
4.1	Assembly overview – rear window washer system	61
4.2	Removing and installing washer fluid reservoir	61
4.3	Removing and installing rear window washer pump	62
4.4	Removing and installing spray jet	62
4.5	Adjusting spray jet	63
5	Washer fluid lines	64
5.1	Repairing washer fluid lines	64
94	Lights, bulbs, switches - exterior	65
1	Headlights	65
1.1	Assembly overview – headlight	65
1.2	Removing and installing headlight	70
1.3	Adjusting headlights	72
1.4	Removing and installing LED modules for daytime running light and side light L176/L177	72
1.5	Adjusting headlight installation position	73
1.6	Installing repair kit for headlight housing	74
1.7	Converting headlights from driving on right to driving on left	76
1.8	Converting headlights from driving on left to driving on right	76
1.9	Removing and installing headlight range control motor V48/V49	77
1.10	Removing and installing output module 1 for LED headlights A27/A31	81
2	Fog lights	83
2.1	Assembly overview - fog lights	83
2.2	Removing and installing fog light	83
2.3	Adjusting fog lights	84
3	Tail light cluster	85
3.1	Assembly overview – tail light cluster in body	85
3.2	Assembly overview – tail light clusters in rear lid	85
3.3	Removing and installing tail light cluster	86
3.4	Removing and installing tail light in rear lid	88
3.5	Adjusting installation position of tail light	88
4	High-level brake light	90
4.1	Assembly overview – high-level brake light	90
4.2	Removing and installing high-level brake light	90
5	Entry and start authorisation system	92
5.1	Overview of fitting locations – entry and start authorisation system	92
5.2	Overview of fitting locations – keyless entry system	93
5.3	Removing and installing entry and start authorisation control unit J518	93
5.4	Removing and installing contact sensor for front left exterior door handle G605/G606	95
5.5	Removing and installing interior aerial 1 for entry and start authorisation R138	95
5.6	Removing and installing interior aerial 2 for entry and start system R139	96



5.7	Removing and installing entry and start authorisation aerial R200/R201	96
5.8	Removing and installing rear bumper aerial for entry and start system R136	97
6	Steering column switch module	98
6.1	Assembly overview – steering column switch module	98
6.2	Removing and installing lock cylinder	100
6.3	Removing and installing ignition key withdrawal lock solenoid N376	102
6.4	Removing and installing ignition/starter switch	103
6.5	Removing and installing steering column switch module	104
6.6	Removing and installing steering column electronics control unit J527	109
6.7	Removing and installing turn signal switch E2	111
6.8	Removing and installing cruise control system switch E45	115
6.9	Removing and installing intermittent wiper switch E22	115
6.10	Removing and installing base for steering column combination switch	115
6.11	Removing and installing steering lock housing	116
7	Automatic headlight range control	119
7.1	Assembly overview - automatic headlight range control	119
7.2	Removing and installing headlight range control unit	120
8	Towing bracket	122
8.1	Assembly overview – socket, trailer detector control unit	122
8.2	Removing and installing trailer detector control unit J345	122
8.3	Trailer socket	123
9	Additional exterior lights	124
9.1	Assembly overview - lights in exterior mirror	124
9.2	Removing and installing entry light in exterior mirror	124
9.3	Removing and installing turn signal	125
9.4	Removing and installing number plate light X4/X5	126
9.5	Removing and installing light conductor for contour lighting in radiator grille, front L362/ L363	127
96	Lights, bulbs, switches - interior	129
1	Lights	129
1.1	Overview of fitting locations – lights in dash panel	129
1.2	Overview of fitting locations – lights in front doors	130
1.3	Overview of fitting locations - lights in centre console	131
1.4	Overview of fitting locations – lights in luggage compartment	132
1.5	Overview of fitting locations – lights in roof trim	133
1.6	Removing and installing glove compartment light W6	135
1.7	Removing and installing footwell light W9/W10	136
1.8	Removing and installing Central locking SAFELOCK function warning lamp K133	137
1.9	Removing and installing storage compartment illumination bulb L120	137
1.10	Removing and installing interior door handle illumination bulb L146/L147	138
1.11	Removing and installing bulb for background lighting in front door L164/L165	139
1.12	Removing and installing light for left dash panel background lighting L229	139
1.13	Removing and installing light for right dash panel background lighting L230	140
1.14	Removing and installing light for centre dashboard background lighting L231	141
1.15	Removing and installing selector lever position display Y26	141
1.16	Removing and installing luggage compartment light W3	141
1.17	Removing and installing illuminated vanity mirror W20/W14	142
2	Controls	145
2.1	Overview of fitting locations – controls in dash panel	146
2.2	Overview of fitting locations – controls in front doors	148
2.3	Overview of fitting locations – controls in rear doors	148
2.4	Overview of fitting locations - controls in centre console	149
2.5	Overview of fitting locations – controls in luggage compartment	150
2.6	Overview of fitting locations – controls in roof trim	151



2.7	Removing and installing rotary light switch EX1	154
2.8	Removing and installing headlight range control regulator E102	154
2.9	Removing and installing TCS and ESP button E256	156
2.10	Removing and installing parking aid button E266	156
2.11	Removing and installing park assist steering button E581	156
2.12	Removing and installing Start/Stop operation button E693	156
2.13	Removing and installing driving mode selection button E735	156
2.14	Removing and installing front passenger side airbag deactivated warning lamp K145	157
2.15	Removing and installing centre console switch module	158
2.16	Removing and installing hazard warning light switch EX3	158
2.17	Removing and installing buttons for seat heating E653/E654	159
2.18	Removing and installing exterior mirror adjuster EX11	159
2.19	Removing and installing operating unit for window regulator in driver door E512	160
2.20	Removing and installing window regulator switch in front passenger door E107	161
2.21	Removing and installing driver side interior locking button for central locking system E308	162
2.22	Removing and installing door contact switch F2/F3	163
2.23	Removing and installing rear door contact switches F10/F11	163
2.24	Removing and installing starter button E378	163
2.25	Removing and installing rear lid contact switch	164
2.26	Removing and installing vanity mirror contact switch F147/F148	164
2.27	Removing and installing sunroof button E325	164
2.28	Removing and installing front interior light/reading light	165
2.29	Removing and installing rear interior light/reading light	169
3	Anti-theft alarm	172
3.1	Assembly overview – interior monitor	172
3.2	Removing and installing alarm horn H12	172
3.3	Removing and installing anti-theft alarm sensor G578	173
4	Immobiliser	175
4.1	Removing and installing immobiliser control unit	175
4.2	Removing and installing immobiliser reader coil	175
5	Cigarette lighter, socket	177
5.1	Removing and installing cigarette lighter U1	177
5.2	Removing and installing socket illumination bulb L42	177
5.3	Removing and installing bulb for illuminating cigarette lighter	177
5.4	Removing and installing electric socket U	177
97 - Wiring		178
1	Relay carriers, fuse holders, electronics boxes	178
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	178
1.2	Assembly overview - fuse holder A SA	180
1.3	Removing and installing electronics box	182
1.4	Removing and installing relay and fuse holder in electronics box	183
1.5	Removing and installing relay and fuse holder behind dash panel on driver side	185
1.6	Removing and installing fuse holder A SA	188
2	Control units	191
2.1	Overview of fitting locations - control units	191
2.2	Removing and installing onboard supply control unit J519	192
2.3	Removing and installing data bus diagnostic interface J533	193
2.4	Removing and installing bracket for onboard supply control unit J519	194
2.5	Removing and installing parking aid control unit J446/park assist steering control unit J791	194
3	Connectors	196
3.1	Repairing electrical wiring harnesses and plug-in connections	196
4	Releasing and dismantling connector housings	197
5	Repairing aerial wires	198



6	Fibre optic cables	199
7	Vehicle diagnosis, testing and information systems	200