



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
50 - Body - front	2
1 Lock carrier	2
1.1 Assembly overview – lock carrier	2
1.2 Removing and installing lock carrier	4
1.3 Moving to and back from service position	6
2 Wings	9
2.1 Assembly overview – wing	9
2.2 Removing and installing wing	10
3 Bulkhead	15
3.1 Assembly overview – bulkhead	15
3.2 Assembly overview – plenum chamber cover	15
3.3 Removing and installing bulkhead	16
3.4 Removing and installing plenum chamber cover	18
55 - Bonnet, rear lid	20
1 Bonnet	20
1.1 Assembly overview – bonnet	20
1.2 Assembly overview – Bowden cable	21
1.3 Removing and installing bonnet	23
1.4 Adjusting bonnet	25
1.5 Removing and installing bonnet lock	30
1.6 Removing and installing bonnet lock release lever	32
1.7 Removing and installing striker pin	35
1.8 Removing and installing hinges	37
1.9 Renewing hinges	37
1.10 Removing and installing insulation	39
1.11 Removing and installing bonnet stay	40
1.12 Removing and installing Bowden cable	42
2 Rear lid	48
2.1 Assembly overview – rear lid	48
2.2 Removing and installing rear lid	50
2.3 Adjusting rear lid	52
2.4 Removing and installing bonnet lock	57
2.5 Removing and installing operating mechanism	58
2.6 Removing and installing hinges	60
2.7 Removing and installing striker pin	62
2.8 Removing and installing rear lid seal	63
2.9 Removing and installing gas strut	63
2.10 Releasing gas from gas strut	64
3 Tank flap unit	66
3.1 Assembly overview – tank flap unit	66
3.2 Removing and installing tank flap unit	66
3.3 Removing and installing fuel tank flap	70
57 - Front doors, door components, central locking	72
1 Door	72
1.1 Assembly overview – door	72
1.2 Removing and installing inner door seal	75



1.3	Removing and installing outer door seal	77
1.4	Removing and installing door	78
1.5	Adjusting door	81
1.6	Adjusting striker pin	82
1.7	Removing and installing door arrester	84
2	Door components	86
2.1	Assembly overview – door components	86
2.2	Assembly overview – window regulator	88
2.3	Assembly overview – door handle and door lock	88
2.4	Removing and installing window regulator motor	90
2.5	Removing and installing window regulator	92
2.6	Removing and installing inner door cover	94
2.7	Removing and installing striker pin	96
2.8	Removing and installing cap on door handle	98
2.9	Removing and installing lock cylinder	104
2.10	Removing and installing door handle	107
2.11	Removing and installing mounting bracket	108
2.12	Removing and installing door lock	111
2.13	Removing and installing window channel	115
2.14	Removing and installing outer window slot seal	118
2.15	Removing and installing window slot inner seal	120
3	Central locking	121
3.1	Overview of fitting locations – central locking system	121
3.2	Removing and installing ignition key battery	123
3.3	Removing and installing cap on ignition key	125
3.4	Removing and installing tank filler flap locking motor V155	126
58	Rear doors, door components	128
1	Door	128
1.1	Assembly overview – door	128
1.2	Removing and installing door	131
1.3	Adjusting door	133
1.4	Adjusting striker pin	135
1.5	Removing and installing door arrester	137
1.6	Removing and installing inner door seal	138
1.7	Removing and installing outer door seal	140
2	Door components	142
2.1	Assembly overview – door components	142
2.2	Assembly overview – window regulator	144
2.3	Assembly overview – door handle and door lock	144
2.4	Removing and installing window regulator motor	145
2.5	Removing and installing window regulator	148
2.6	Removing and installing window crank	150
2.7	Removing and installing inner door cover	152
2.8	Removing and installing striker pin	154
2.9	Removing and installing cap on door handle	155
2.10	Removing and installing door handle	159
2.11	Removing and installing mounting bracket	161
2.12	Removing and installing door lock	164
2.13	Removing and installing window channel	168
2.14	Removing and installing outer window slot seal	171
2.15	Removing and installing window slot inner seal	172
60	Sunroof	174
1	Sliding sunroof	174



1.1	Assembly overview – sliding sunroof	174
1.2	Assembly overview - sunroof seals	176
1.3	Assembly overview – sunroof roller blind	176
1.4	Removing and installing glass panel	177
1.5	Adjusting sunroof panel	179
1.6	Removing and installing front trim for sliding sunroof	181
1.7	Removing and installing wind deflector	182
1.8	Removing and installing sunroof roller blind	185
1.9	Removing and installing sliding sunroof frame	192
1.10	Removing and installing J245sliding sunroof adjustment control unit	201
1.11	Removing and installing sunroof motor V1	203
1.12	Manual operation	205
1.13	Removing and installing slotted guide	206
1.14	Removing and installing sliding sunroof seals	210
1.15	Programming sliding sunroof adjustment control unit J245	217
63	- Bumpers	218
1	Bumper, front	218
1.1	Assembly overview – bumper cover	218
1.2	Assembly overview – bumper carrier	222
1.3	Removing and installing bumper cover	223
1.4	Installing holder for parking aid sender	225
1.5	Installing retainer for parking aid sender	231
2	Bumper, rear	236
2.1	Assembly overview – bumper cover	236
2.2	Assembly overview – bumper carrier	238
2.3	Removing and installing bumper cover	239
2.4	Removing and installing bumper carrier	241
2.5	Installing holder for parking aid sender	243
2.6	Installing retainer for parking aid sender	249
2.7	Removing and installing forced ventilation for passenger compartment	253
2.8	Checking forced ventilation for passenger compartment	255
64	- Glazing	256
1	Repair notes	256
1.1	Minimum drying times for bonded windows	256
1.2	Window repair	257
1.3	Installation instructions for bonded windows	257
1.4	Preparing old undamaged windows for installing	259
1.5	Preparing new windows for installing	260
1.6	Preparing body flange for installing	263
1.7	Cleaning off excess adhesive	264
2	Windscreen	265
2.1	Assembly overview – windscreen	265
2.2	Removing and installing windscreen	266
3	Rear windscreen	274
3.1	Assembly overview – rear window	274
3.2	Removing and installing rear window	275
4	Side windows	280
4.1	Assembly overview - rear side windows	280
4.2	Removing and installing rear side window	281
5	Door windows	285
5.1	Assembly overview - front door window	285
5.2	Assembly overview - rear door window	285
5.3	Removing and installing front door window	286



5.4	Removing and installing rear door window	290
66	- Exterior equipment	294
1	Radiator grille and front trim	294
1.1	Assembly overview – radiator grille	294
1.2	Removing and installing radiator grille	295
2	Spoiler	297
2.1	Assembly overview – spoiler	297
2.2	Removing and installing spoiler	297
3	Mouldings, trims, extensions	304
3.1	Assembly overview - covers	304
3.2	Assembly overview - wheel arch covers	305
3.3	Assembly overview - side member trim	306
3.4	Removing and installing A-pillar trim	307
3.5	Removing and installing B-pillar trim on door	309
3.6	Removing and installing C-pillar trim on door	312
3.7	Removing and installing step moulding	314
3.8	Removing and installing covers	317
3.9	Removing and installing wheel arch covers	321
3.10	Removing and installing side member trim	326
4	Noise insulation	330
4.1	Assembly overview - noise insulation	330
5	Underbody cladding	331
5.1	Overview of fitting locations - underbody cladding	331
5.2	Removing and installing underbody cladding	333
5.3	Removing and installing centre underbody panels	334
5.4	Removing and installing rear underbody cladding	337
6	Exterior mirror	339
6.1	Assembly overview – exterior mirror	339
6.2	Removing and installing exterior mirror	340
6.3	Removing and installing mirror glass	343
6.4	Removing and installing mirror adjustment unit	345
6.5	Removing and installing mirror cover	347
6.6	Removing and installing mirror frame	349
6.7	Removing and installing turn signal	350
7	Wheel housing liner	352
7.1	Assembly overview – front wheel housing liner	352
7.2	Assembly overview – rear wheel housing liner	353
7.3	Removing and installing front wheel housing liner	354
7.4	Removing and installing rear wheel housing liner	355
8	Lettering and badges	356
8.1	Renewing lettering and badges on sides	356
8.2	Removing and installing lettering and badges for radiator grille	359
8.3	Removing and installing lettering at rear	361
8.4	Renewing badge at rear	362
9	Towing bracket	365
9.1	Assembly overview – towing bracket	365
9.2	Removing and installing towing bracket	365
10	Heat shields	367
10.1	Overview of fitting locations – heat shields	367
10.2	Removing and installing underbody heat shield	368
10.3	Removing and installing heat shield for centre exhaust system	369
10.4	Removing and installing heat shield for rear silencer	370