



Contents

00 - Technical data	1
1 Basic instructions	1
1.1 Original joint	1
1.2 Used joining techniques	1
2 Vehicle identification data	3
2.1 Vehicle identification number	3
2.2 Type plate	4
2.3 Vehicle data sticker	5
3 Safety information	7
4 Moulded foam inserts	8
5 Galvanized body parts, high- and higher-strength and hot-formed body panels	10
6 Laser welding	13
7 Gaps/shut lines	14
7.1 Body, front	14
7.2 Body, centre	15
7.3 Body, rear	18
8 Body dimensions	21
8.1 Body, front	21
8.2 Body, centre	23
8.3 Body, rear	27
8.4 Body dimension for floor panel	29
9 Straightening bracket set	33
9.1 Overview	33
10 Portal gauge	34
10.1 Setup overview of complete body	34
50 - Body - front	35
1 Overview of parts	35
2 Renewing right bracket	36
2.1 Tools	37
2.2 Removing	37
2.3 Installing	38
3 Repairing threads for securing subframe	42
3.1 Contents of thread repair kit	43
3.2 Repairing threads	44
4 Renewing mounting bracket for subframe	48
4.1 Tools	49
4.2 Removing	49
4.3 Installing	50
5 Renewing front longitudinal member end plate	54
5.1 Tools	55
5.2 Removing	55
5.3 Installing	56
6 Renewing upper wheel housing longitudinal member	59
6.1 Tools	60
6.2 Removing	60
6.3 Installing	62
7 Renewing upper wheel housing longitudinal member - part section	67
7.1 Tools	68
7.2 Removing	68



7.3	Installing	70
8	Renewing hinge reinforcement for bonnet	75
8.1	Tools	76
8.2	Removing	76
8.3	Installing	77
9	Renewing upper inner wheel housing longitudinal member	80
9.1	Tools	81
9.2	Removing	81
9.3	Installing	83
10	Renewing upper inner wheel housing longitudinal member - part section	87
10.1	Tools	88
10.2	Removing	88
10.3	Installing	90
11	Renewing front wheel housing	94
11.1	Tools	95
11.2	Removing	95
11.3	Installing	97
12	Renewing front wheel housing (part section)	103
12.1	Tools	104
12.2	Removing	104
12.3	Installing	105
13	Renewing front longitudinal member	108
13.1	Tools	109
13.2	Removing	109
13.3	Installing	112
14	Renewing front longitudinal member (left part section)	118
14.1	Tools	119
14.2	Removing	119
14.3	Installing	120
15	Renewing front longitudinal member (right part section)	124
15.1	Tools	125
15.2	Removing	125
15.3	Installing	126
16	Renewing studs	130
51 - Body - centre		132
1	Overview of parts	132
2	Renewing roof - vehicles without tilting sunroof	133
2.1	Tools	134
2.2	Removing	134
2.3	Installing	139
3	Renewing roof - vehicles with tilting sunroof	151
3.1	Tools	152
3.2	Removing	152
3.3	Installing	156
4	Renewing front cross member for roof	167
4.1	Tools	168
4.2	Removing	168
4.3	Installing	169
5	Renewing rear roof cross member	172
5.1	Tools	173
5.2	Removing	173
5.3	Installing	174



6	Renewing roof side member	178
6.1	Tools	179
6.2	Removing	180
6.3	Installing	183
7	Renewing A-pillar	189
7.1	Tools	190
7.2	Moulded foam inserts	191
7.3	Removing	191
7.4	Installing	192
8	Renewing upper A-pillar reinforcement (part section repair)	197
8.1	Tools	198
8.2	Moulded foam inserts	199
8.3	Removing	199
8.4	Installing	201
9	Renewing lower A-pillar reinforcement	210
9.1	Tools	211
9.2	Moulded foam inserts	211
9.3	Removing	211
9.4	Installing	212
10	Renewing B-pillar	217
10.1	Tools	219
10.2	Type plate	219
10.3	Moulded foam inserts	220
10.4	Removing	220
10.5	Installing	222
11	Renewing B-pillar reinforcement	228
11.1	Tools	229
11.2	Type plate	229
11.3	Moulded foam inserts	230
11.4	Removing	230
11.5	Installing	232
12	Renewing outer side member	237
12.1	Tools	238
12.2	Type plate	238
12.3	Moulded foam inserts	239
12.4	Removing	239
12.5	Installing	241
13	Renewing side member reinforcement	247
13.1	Tools	248
13.2	Moulded foam inserts	248
13.3	Removing	248
13.4	Installing	250
14	Renewing inner mounting for seat inner cross member	255
14.1	Tools	256
14.2	Removing	256
14.3	Installing	257
15	Renewing seat cross member	260
15.1	Tools	261
15.2	Removing	261
15.3	Installing	262
16	Renewing outer mounting for seat outer cross member	265
16.1	Tools	266
16.2	Removing	266
16.3	Installing	268



53 - Body - rear	274
1 Overview of parts	274
2 Renewing rear cross panel	275
2.1 Tools	276
2.2 Removing	276
2.3 Installing	278
3 Renewing rear cross member	283
3.1 Tools	284
3.2 Removing	284
3.3 Installing	285
4 Renewing tail light mounting	291
4.1 Tools	292
4.2 Removing	292
4.3 Installing	293
5 Renewing lower corner part	297
5.1 Tools	298
5.2 Removing	298
5.3 Installing	299
6 Renewing luggage compartment floor	303
6.1 Tools	304
6.2 Moulded foam inserts	304
6.3 Removing	304
6.4 Installing	306
7 Renewing left floor panel	310
7.1 Tools	311
7.2 Removing	311
7.3 Installing	312
8 Renewing rear end plate for longitudinal member	315
8.1 Tools	316
8.2 Removing	316
8.3 Installing	317
9 Renewing rear longitudinal member (part section)	320
9.1 Tools	321
9.2 Removing	321
9.3 Installing	322
10 Renewing rear longitudinal member (part section – second parting cut)	325
10.1 Tools	326
10.2 Moulded foam inserts	326
10.3 Removing	326
10.4 Installing	329
11 Permitted parting cuts on side panel	339
12 Renewing side panel (part section)	340
12.1 Tools	341
12.2 Moulded foam inserts	342
12.3 Removing	342
12.4 Installing	344
13 Renewing outer wheel housing liner	349
13.1 Tools	350
13.2 Moulded foam inserts	350
13.3 Removing	350
13.4 Installing	351
14 Renewing lock reinforcement	356



14.1	Tools	357
14.2	Removing	357
14.3	Installing	359