

Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when working on air conditioning systems	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	1
1.4 Safety precautions when working on cooling system	2
1.5 Safety precautions when handling refrigerants	2
2 General information	4
2.1 Type plates	4
3 Repair notes	6
3.1 General repair instructions	6
3.2 Fitting radiator and condensers	6
3.3 Working on refrigerant circuit	6
3.4 Refrigerant circuit seals	7
4 Technical data	8
4.1 Refrigerant capacity	8
4.2 Refrigerant oil capacities	8
4.3 Oil distribution	8
80 - Heating	10
1 Heater	10
87 - Air conditioning system	11
1 Overview of fitting locations - air conditioning system	11
1.1 Overview of fitting locations - components not located in passenger compartment	11
1.2 Overview of fitting locations - components located in front section of passenger compartment	12
2 Refrigerant circuit	15
2.1 System overview - refrigerant circuit	15
2.2 Assembly overview – condenser	17
2.3 Removing and installing refrigerant circuit pressure sender G805	19
2.4 Removing and installing expansion valve	20
2.5 Removing and installing condenser	23
2.6 Removing and installing desiccant bag or cartridge	27
2.7 Removing and installing evacuating and charging valves on low and high-pressure side	39
2.8 Commissioning air conditioning system after filling refrigerant circuit	41
2.9 Removing and installing refrigerant line from condenser to air conditioner compressor	42
2.10 Removing and installing refrigerant line from condenser to evaporator	44
2.11 Removing and installing refrigerant line from air conditioner compressor to evaporator	47
3 Air conditioner compressor	50
3.1 Assembly overview – drive unit of air conditioner compressor	50
3.2 Assembly overview - pulley	54
3.3 Removing air conditioning compressor from and installing on bracket	58
3.4 Removing and installing air conditioner compressor	60
3.5 Checking high-pressure safety valve on air conditioner compressor	65
3.6 Removing and installing pulley	66
4 Control motors	72
4.1 Overview of fitting locations – control motors at front	72
4.2 Removing and installing defroster flap VX47	77
4.3 Removing and installing front left temperature flap VX34	79
4.4 Removing and installing front right temperature flap VX35	82
4.5 Removing and installing fresh air and air recirculation flap VX96	84



4.6	Removing and installing air distribution flap VX33	87
4.7	Removing and installing fresh air and air recirculation flap control motor V154	88
4.8	Removing and installing air distribution flap adjustment unit	90
4.9	Removing and installing temperature flap actuator	91
5	Front heater and air conditioning unit	94
5.1	Assembly overview – heater and air conditioning unit	94
5.2	Assembly overview – evaporator housing	96
5.3	Removing and installing evaporator	98
5.4	Checking auxiliary air heater element Z35	99
5.5	Removing and installing auxiliary air heater element Z35	100
5.6	Removing and installing heater and air conditioning unit	101
5.7	Removing and installing holder for heater and air conditioning unit	107
5.8	Dismantling and assembling heater and air conditioning unit	107
5.9	Removing and installing air distribution housing	108
5.10	Removing and installing dust and pollen filter	109
5.11	Removing and installing fresh air blower V2	111
5.12	Removing and installing fresh air blower control unit J126	112
5.13	Removing and installing heat exchanger	113
5.14	Removing and installing coolant pipes on heat exchanger	121
5.15	Removing and installing evaporator temperature sensor G308	124
5.16	Removing and installing flexible shafts	126
5.17	Removing and installing condensation drain	129
5.18	Checking condensation drain	132
5.19	Fresh air blower series resistor with overheating fuse N24	132
6	Air duct	133
6.1	Assembly overview – air duct and air distribution in passenger compartment	133
6.2	Removing and installing driver side footwell vents	137
6.3	Removing and installing front passenger side footwell vents	139
6.4	Removing and installing rear footwell vent	140
6.5	Removing and installing fresh air intake	141
6.6	Removing and installing cover for fresh air intake	142
6.7	Removing and installing air intake duct	142
6.8	Removing and installing air duct for defroster vent	143
6.9	Removing and installing air duct for centre vent	144
7	Operating and display unit	145
7.1	Overview of operating and display unit	145
7.2	Removing and installing operating and display unit	148
8	Other controlling and regulating components	150
8.1	Removing and installing sunlight penetration photosensor G107	150
8.2	Removing and installing ambient temperature sensor G17	150
8.3	Removing and installing humidity sender for air conditioning system G260	151
8.4	Removing and installing left vent temperature sender G150	151
8.5	Removing and installing right vent temperature sender G151	153
8.6	Removing and installing footwell vent temperature sender G192	155