



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
<b>2 Identification</b>	<b>2</b>
<b>3 Technical data</b>	<b>3</b>
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
<b>4 Overview - power transmission</b>	<b>4</b>
<b>5 Electrical components</b>	<b>5</b>
<b>6 Repair notes</b>	<b>6</b>
6.1 General repair instructions	6
<b>30 - Clutch</b>	<b>10</b>
<b>1 Clutch mechanism</b>	<b>10</b>
1.1 Assembly overview - clutch release mechanism	10
1.2 Repairing clutch release mechanism	12
<b>2 Clutch</b>	<b>14</b>
2.1 Assembly overview - clutch	14
2.2 Removing and installing clutch	16
<b>34 - Controls, housing</b>	<b>31</b>
<b>1 Selector mechanism</b>	<b>31</b>
<b>2 Removing and installing gearbox</b>	<b>32</b>
<b>3 Transporting gearbox</b>	<b>33</b>
<b>4 Gear oil</b>	<b>34</b>
<b>5 Securing to engine and gearbox support</b>	<b>35</b>
<b>6 Dismantling and assembling gearbox</b>	<b>37</b>
6.1 Schematic overview - gearbox	37
6.2 Assembly overview - gearbox	37
6.3 Assembly overview - gearbox housing cover	38
6.4 Assembly overview - clutch housing	39
6.5 Assembly overview - shafts, differential, selector mechanism	40
6.6 Assembly overview - selector forks	42
6.7 Repairing selector forks	43
6.8 Dismantling and assembling gearbox	48
<b>7 Gearbox housing, clutch housing</b>	<b>61</b>
7.1 Assembly overview - gearbox housing and clutch housing	61
7.2 Repairing clutch housing	63
<b>35 - Gears, shafts</b>	<b>66</b>
<b>1 Input shaft</b>	<b>66</b>
1.1 Assembly overview - input shaft	66
1.2 Dismantling and assembling input shaft	68
1.3 Renewing input shaft seal	82
<b>2 Output shaft</b>	<b>85</b>
2.1 Assembly overview - output shaft	85
2.2 Dismantling and assembling output shaft	88
<b>39 - Final drive - differential</b>	<b>96</b>
<b>1 Oil seals</b>	<b>96</b>
<b>2 Differential</b>	<b>97</b>



2.1	Assembly overview - differential .....	97
2.2	Dismantling and assembling differential .....	98
2.3	Adjusting differential .....	110