

001 - 1.0l petrol engine , DLAA,DLAC	1-18
1. 1.0l petrol engine , DLAA,DLAC	1
2. Fuse holder B	2
3. Fuse holder B	3
4. Fuse holder C	4
5. Oil level and oil temperature sender, Engine/motor control unit, Radiator fan	5
6. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	6
7. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	7
8. Brake light switch, Clutch position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	8
9. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	9
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Knock sensor 1, Fuel pump control unit, Engine/motor control unit	10
11. Intake manifold sender, Coolant temperature sender, Engine outlet coolant temperature sender, Inlet camshaft position sender, Engine/motor control unit	11
12. Pressure sensor for activated charcoal filter air flushing, Fuel pressure sender, Exhaust camshaft position sender, Engine/motor control unit	12
13. Throttle valve module, Engine speed sender, Exhaust gas pressure sensor 1, Engine/motor control unit	13
14. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	14
15. Engine/motor control unit, Fuel metering valve, Charge air cooling pump	15
16. Engine temperature regulation module, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	16
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet camshaft control valve 1	17
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	18
002 - 1.0l petrol engine , DXUA	19-36
1. 1.0l petrol engine , DXUA	19
2. Fuse holder B	20
3. Fuse holder B	21
4. Fuse holder C	22
5. Engine/motor control unit	23
6. Oil level and oil temperature sender, Data bus diagnostic interface, Engine/motor control unit, Radiator fan, Vacuum pump for brakes	24
7. Onboard supply control unit, Engine/motor control unit	25
8. Brake light switch, Steering column electronics control unit, Fuel pump control unit, Engine/motor control unit, Interface for entry and start system	26
9. Accelerator pedal module, Engine/motor control unit	27
10. Radiator outlet coolant temperature sender, Clutch position sender, Gearbox neutral position sender, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	28
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	29
12. Oil pressure sender, Charge pressure sender, Engine/motor control unit, Charge pressure positioner	30
13. Intake manifold sender, Hall sender, Hall sender 3, Engine/motor control unit	31
14. Throttle valve module, Engine speed sender, Fuel pressure sender, Engine/motor control unit	32
15. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	33
16. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Valve for oil pressure control	34
17. Engine/motor control unit, Charge air cooling pump	35
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	36
003 - 1.5l petrol engine , DPCA	37-58
1. 1.5l petrol engine , DPCA	37
2. Fuse holder B	38
3. Fuse holder B, Vacuum pump for brakes	39
4. Fuse holder C	40
5. Engine/motor control unit	41
6. Accelerator pedal module, Oil level and oil temperature sender, Engine/motor control unit	42
7. Clutch position sender. Gearbox neutral position sender. Engine/motor control unit. Mechatronic	43

unit for dual clutch gearbox	
8. Radiator outlet coolant temperature sender, Fuel pump control unit, Engine/motor control unit, Exhaust flap control unit, Radiator fan	44
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	45
10. Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	46
11. Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	47
12. Brake light switch, Pressure sensor for activated charcoal filter air flushing, Engine/motor control unit	48
13. Engine/motor control unit	49
14. Oil pressure sender, Charge pressure sender, Charge pressure control module, Engine/motor control unit	50
15. Intake manifold sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	51
16. Engine speed sender, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	52
17. Throttle valve module, Coolant temperature sender, Engine outlet coolant temperature sender, Engine/motor control unit	53
18. Engine temperature regulation module, Knock sensor 1, Engine/motor control unit, Injector, cylinder 1, Fuel metering valve	54
19. Engine/motor control unit, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Charge air cooling pump	55
20. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3	56
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Exhaust cam actuator for cylinder 3, Inlet camshaft control valve 1, Spark plug 1, Spark plug 2	57
22. Engine/motor control unit, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 3, Spark plug 4	58
004 - Dual clutch gearbox 0CW , (0EG)	59-63
1. Dual clutch gearbox 0CW , (0EG)	59
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	60
3. Onboard supply control unit, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	61
4. Selector mechanism, Onboard supply control unit, Mechatronic unit for dual clutch gearbox	62
5. Selector mechanism, Ignition key withdrawal lock solenoid	63
005 - Battery, starter and alternator	64-66
1. Battery, starter and alternator	64
2. Battery, Battery monitor control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder A, Fuse holder B	65
3. Starter, Alternator with voltage regulator, Switch module 1 in centre console, Onboard supply control unit, Fuse holder B	66
006 - Electromechanical steering	67-69
1. Electromechanical steering	67
2. Power steering control unit, Data bus diagnostic interface, Fuse holder A	68
3. Power steering control unit, Onboard supply control unit, Data bus diagnostic interface	69
007 - Brake system	70-75
1. Brake system	70
2. ABS control unit, Fuse holder B	71
3. Vacuum sender, ABS control unit	72
4. Rear right speed sensor, Front right speed sensor, Rear left speed sensor, Front left speed sensor, ABS control unit	73
5. Brake fluid level warning contact, ABS control unit, Onboard supply control unit	74
6. Parking brake pressure switch, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	75
008 - Airbag systems , (L0L)	76-85
1. Airbag systems , (L0L)	76
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Driver seat belt tensioner igniter 1, Fuse holder C	77
3. Airbag control unit, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	78
4. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear belt tensioner igniter on passenger side	79
5. Key-operated switch to deactivate airbag on front passenger side. Airbag control unit. Steering	80

column electronics control unit, Airbag igniter on driver side	
6. Twin belt buckle, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Emergency call module control unit and communication unit	81
7. Airbag control unit, Front left seat belt, Front right seat belt, Diagnostic connection	82
8. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side	83
9. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side	84
10. Rear belt switch, passenger side, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	85
009 - Bonnet contact switch	86-87
1. Bonnet contact switch	86
2. Bonnet contact switch, Bonnet contact switch 2, Onboard supply control unit	87
010 - Headlights , (8IT)	88-90
1. Headlights , (8IT)	88
2. Headlight range control regulator, Onboard supply control unit, Front left headlight, Fuse holder C	89
3. Onboard supply control unit, Front left headlight, Front right headlight	90
011 - Headlights , (8IV)	91-95
1. Headlights , (8IV)	91
2. Front left headlight, Fuse holder C	92
3. Light conductor for contour lighting in radiator grille, front left, Front left headlight, Front right headlight	93
4. Onboard supply control unit, Light conductor for contour lighting in radiator grille, front right, Front right headlight	94
5. Rear right vehicle level sender, Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	95
012 - Fuses in interior	96-116
1. Fuses in interior	96
2. Fuse holder A, Fuse holder C	97
3. Heater and air conditioning controls, Anti-theft alarm sensor, Alarm horn, Front right seat belt, Fuse holder C	98
4. Seat heating control unit, Fuse holder C	99
5. Rain and light sensor, Steering column electronics control unit, Front left seat belt, Fuse holder C	100
6. Steering column electronics control unit, Dash panel insert, Fuse holder C	101
7. Driver door control unit, Front passenger door control unit, Control unit 1 for information electronics, Rear driver side door control unit, Rear passenger side door control unit, Fuse holder C	102
8. ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder C	103
9. Adaptive cruise control unit, Parking aid control unit, Power steering control unit, Fuse holder C	104
10. Rotary light switch, Lane change assist control unit, Lane change assist control unit 2, Front left headlight, Front camera for driver assist systems, Fuse holder C	105
11. Exterior mirror adjuster, Headlight range control regulator, Reversing light switch, Front right headlight, Fuse holder C, Diagnostic connection, Automatic anti-dazzle interior mirror	106
12. Clutch position sender, Pressure sender for refrigerant circuit, Fuse holder B, Fuse holder C, Rear window wiper motor	107
13. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse holder C, 12 V socket	108
14. Fresh air blower control unit, Sliding sunroof adjustment control unit, Trailer detector control unit, Digital sound package control unit, Fuse holder C	109
15. Rear lid handle, Trailer detector control unit, Display unit for front information display and operating unit control unit, Telephone bracket, Fuse holder C	110
16. Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system, Fuse holder C, USB charging socket 1	111
17. Selector mechanism, Ignition key withdrawal lock solenoid, Fuse holder C	112
18. Fuse holder C, Washer pump	113
19. Fuse holder C	114
20. Onboard supply control unit	115
21. Onboard supply control unit	116
013 - Earthing concept in interior	117-137
1. Earthing concept in interior	117
2. Rear lid handle, Operating unit for preparation for mobile telephone, Display unit for front information display and operating unit control unit. Control unit 1 for information electronics.	118

Telephone bracket, USB connection 1	
3. Parking aid control unit, Digital sound package control unit, Emergency call module control unit and communication unit, Front camera for driver assist systems, Left footwell light, Heated seat cushion for front left seat, Heated backrest for front left seat	119
4. Fresh air blower control unit, Data bus diagnostic interface, Rear driver side door control unit, USB charging socket 1, Fresh air blower, Rear left door lock unit	120
5. Anti-theft alarm sensor, Alarm horn, Interface for entry and start system, Fuse holder C, Front interior light	121
6. Rain and light sensor, Control unit for cornering light and headlight range control, Diagnostic connection, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Automatic anti-dazzle interior mirror	122
7. Headlight range control regulator, Steering column electronics control unit, Front left headlight, Front right headlight	123
8. Brake light switch, Onboard supply control unit, Control unit for electronic steering column lock	124
9. Exterior mirror adjuster, Driver side interior locking button for central locking system, Windscreen wiper	125
10. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side interior door handle illumination bulb, Light for front left door contour lighting, Driver door lock unit	126
11. Front passenger door control unit, Front passenger side interior door handle illumination bulb, Light for front right door contour lighting, Driver side exterior mirror	127
12. Driver exterior door handle, Front passenger exterior door handle, Passenger side exterior mirror, Front passenger door lock unit	128
13. Sliding sunroof adjustment control unit, Seat heating control unit, Right footwell light, Heated seat cushion for front right seat, Heated backrest for front right seat	129
14. Rear passenger side door control unit, Rear right door lock unit	130
15. Rotary light switch, Heater and air conditioning controls, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Storage compartment illumination bulb in front centre console	131
16. Selector mechanism, Hazard warning light switch, Switch module 1 in centre console, Starter button, Dash panel insert, Fuse holder B, 12 V socket	132
17.	133
18. Trailer detector control unit, Lane change assist control unit, Lane change assist control unit 2, Front left seat belt, Frequency modulation (FM) frequency filter in negative wire, Trailer socket	134
19. Left tail light cluster 2, Rear window wiper motor, Rear lid lock unit, Left number plate light, Right number plate light, Heated rear window	135
20. Exhaust flap control unit, Left tail light cluster, Right tail light cluster 2, High-level brake light bulb	136
21. Fuel pump control unit, Right tail light cluster, Front right seat belt, Rear interior light	137
014 - Fuses in engine compartment	138-147
1. Fuses in engine compartment	138
2. Battery, Starter, Alternator with voltage regulator, Power steering control unit, Fuse holder A, Fuse holder C	139
3. ABS control unit, Battery monitor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	140
4. Heater and air conditioning controls, Fuse holder B, Air conditioner compressor	141
5. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Fuel pump control unit, Exhaust flap control unit, Fuse holder B, Radiator fan	142
6. Brake light switch, Clutch position sender, Engine/motor control unit, Fuse holder B, Vacuum pump for brakes	143
7. Engine/motor control unit, Fuse holder B	144
8. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Camshaft control valve 1, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Exhaust camshaft control valve 1	145
9. Activated charcoal filter solenoid valve 1, Valve for oil pressure control, Piston cooling jet control valve, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet camshaft control valve 1	146
10. Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Charge air cooling pump	147
015 - Earthing concept in engine compartment	148-153
1. Earthing concept in engine compartment	148
2. Ignition coil 1 with output stage, Ignition coil 2 with output stage, Charge air cooling pump	149
3. Bonnet contact switch, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Vacuum pump for brakes	150
4. Brake light switch, Oil level and oil temperature sender, Pressure sender for refrigerant circuit, Mechatronic unit for dual clutch gearbox, Right fog light bulb, Front right headlight	151
5. Bonnet contact switch 2, Clutch position sender, Bass horn, Adaptive cruise control unit, Front left headlight. Air conditioner compressor	152

6. Battery, ABS control unit, Engine/motor control unit, Left fog light bulb, Radiator fan	153
016 - Horn	154-155
1. Horn	154
2. Bass horn, Onboard supply control unit	155
017 - Lane change assist , (7Y1)	156-159
1. Lane change assist , (7Y1)	156
2. Lane change assist control unit, Lane change assist control unit 2, Fuse holder C	157
3. Onboard supply control unit, Data bus diagnostic interface, Lane change assist control unit	158
4. Driver side exterior mirror, Passenger side exterior mirror	159
018 - Entry and start authorisation , (4F2),(4I3)	160-167
1. Entry and start authorisation , (4F2),(4I3)	160
2. Control unit for electronic steering column lock, Interface for entry and start system, Fuse holder C	161
3. Onboard supply control unit, Data bus diagnostic interface, Interface for entry and start system, Telephone bracket	162
4. Starter button, Engine/motor control unit, Interface for entry and start system, Rear bumper aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	163
5. Interface for entry and start system	164
6. Interface for entry and start system	165
7. Driver exterior door handle	166
8. Front passenger exterior door handle	167
019 - Window wash/wipe system	168-172
1. Window wash/wipe system	168
2. Fuse holder C	169
3. Windscreen washer fluid level sender, Onboard supply control unit, Steering column electronics control unit, Windscreen wiper	170
4. Onboard supply control unit, Washer pump	171
5. Rear window wiper motor	172
020 - Multifunction steering wheel	173-175
1. Multifunction steering wheel	173
2. Tiptronic switch in steering wheel to shift down, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side	174
3. Tiptronic switch in steering wheel to shift up, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	175
021 - Climatronic , (9AK)	176-183
1. Climatronic , (9AK)	176
2. Heater and air conditioning controls, Fuse holder B, Fuse holder C	177
3. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender	178
4. Heater and air conditioning controls, Sunlight penetration photosensor, Pressure sender for refrigerant circuit, Fresh air blower control unit	179
5. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface	180
6. Heater and air conditioning controls, Air conditioner compressor	181
7. Heater and air conditioning controls, Air distribution flap, Front left temperature flap, Front right temperature flap	182
8. Heater and air conditioning controls, Footwell vent temperature sender, Evaporator temperature sensor, Defroster flap, Fresh air and air recirculation flap	183
022 - Air conditioning system , (9AB)	184-189
1. Air conditioning system , (9AB)	184
2. Fuse holder B, Fuse holder C	185
3. Heater and air conditioning controls, Sunlight penetration photosensor, Onboard supply control unit, Data bus diagnostic interface	186
4. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioner compressor	187
5. Heater and air conditioning controls, Evaporator temperature sensor, Fresh air blower series resistor with overheating fuse, Fresh air blower	188
6. Heater and air conditioning controls, Fresh air and air recirculation flap control motor	189
023 - Door control units, driver side	190-208
1. Door control units, driver side	190
2. Exterior mirror adjuster, Driver door control unit, Fuse holder C	191
3. Exterior mirror adjuster, Driver door control unit	192
4. Exterior mirror adjuster, Driver door control unit	193
5. Operating unit for window regulator in driver door, Driver door control unit	194
6. Driver side interior locking button for central locking system, Driver door control unit	195
7. Driver door control unit. Driver side exterior mirror	196

8. Driver door control unit, Onboard supply control unit, Driver side exterior mirror	197
9. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver door lock unit	198
10. Onboard supply control unit, Driver door lock unit	199
11. Onboard supply control unit	200
12. Onboard supply control unit	201
13. Onboard supply control unit, Coupling point for front right door	202
14. Coupling point for front right door	203
15. Coupling point for front right door	204
16. Operating unit for window regulator in rear left door, Rear driver side door control unit, Coupling point for front right door	205
17. Rear driver side door control unit, Rear left door lock unit	206
18. Operating unit for window regulator in rear right door, Coupling point for rear right door, Rear right door lock unit	207
19. Coupling point for rear right door	208
024 - Door control units, passenger side	209-221
1. Door control units, passenger side	209
2. Window regulator switch in front passenger door, Front passenger door control unit, Fuse holder C	210
3. Front passenger door control unit, Passenger side exterior mirror	211
4. Front passenger door control unit, Passenger side exterior mirror	212
5. Front passenger door control unit, Onboard supply control unit, Front passenger door lock unit	213
6. Onboard supply control unit, Front passenger door lock unit	214
7. Onboard supply control unit	215
8. Onboard supply control unit, Coupling point for front left door	216
9. Coupling point for front left door	217
10. Operating unit for window regulator in rear right door, Rear passenger side door control unit, Coupling point for front left door	218
11. Rear passenger side door control unit, Rear right door lock unit	219
12. Operating unit for window regulator in rear left door, Coupling point for rear left door, Rear left door lock unit	220
13. Coupling point for rear left door	221
025 - Parking aid (PDC) , (7X2),(7X5)	222-228
1. Parking aid (PDC) , (7X2),(7X5)	222
2. Parking aid control unit, Data bus diagnostic interface, Fuse holder C	223
3. Switch module 1 in centre console, Parking aid control unit, Onboard supply control unit	224
4. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Front parking aid warning buzzer, Parking aid control unit	225
5. Rear right parking aid sender, Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit	226
6. Front centre right parking aid sender, Front centre left parking aid sender, Front left parking aid sender, Parking aid control unit	227
7. Front right parking aid sender, Front left sender for park assist steering on left side of vehicle, Front right sender for park assist steering on right side of vehicle, Parking aid control unit	228
026 - Reversing camera (Rear Assist) , (KA1)	229-230
1. Reversing camera (Rear Assist) , (KA1)	229
2. Rear lid handle, Onboard supply control unit, Control unit 1 for information electronics, Fuse holder C	230
027 - Radiator fan	231-232
1. Radiator fan	231
2. Engine/motor control unit, Fuse holder B, Radiator fan	232
028 - Seat heating , (4A3)	233-236
1. Seat heating , (4A3)	233
2. Seat heating control unit, Fuse holder C, Heated seat cushion for front left seat, Heated backrest for front left seat	234
3. Seat heating control unit, Heated seat cushion for front right seat, Heated backrest for front right seat	235
4. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface	236
029 - Adaptive chassis control DCC , (2H5)	237-238
1. Adaptive chassis control DCC , (2H5)	237
2. Switch module 1 in centre console, Onboard supply control unit	238
030 - Adaptive cruise control , (6K2),(6K4)	239-241
1. Adaptive cruise control , (6K2),(6K4)	239
2. Adaptive cruise control unit, Data bus diagnostic interface, Fuse holder C	240
3. Onboard supply control unit, Front camera for driver assist systems	241
031 - 12 V sockets	242-243

1. 12 V sockets	242
2. Fuse holder C, 12 V socket	243
032 - Front camera for driver assist systems , (QK1)	244-246
1. Front camera for driver assist systems , (QK1)	244
2. Adaptive cruise control unit, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	245
3. Onboard supply control unit, Data bus diagnostic interface, Front camera for driver assist systems	246
033 - Steering column electronics	247-252
1. Steering column electronics	247
2. Steering column electronics control unit, Fuse holder C	248
3. Onboard supply control unit, Steering column electronics control unit	249
4. Onboard supply control unit, Steering column electronics control unit	250
5. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	251
6. Airbag control unit, Steering column electronics control unit, Engine/motor control unit	252
034 - Sound system , (9VG),(I8I)	253-257
1. Sound system , (9VG),(I8I)	253
2. Onboard supply control unit, Digital sound package control unit, Fuse holder C	254
3. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	255
4. Digital sound package control unit, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	256
5. Digital sound package control unit, Rear left bass loudspeaker, Rear right bass loudspeaker, Front left bass loudspeaker, Front right bass loudspeaker	257
035 - Anti-theft alarm system , (7AS)	258-259
1. Anti-theft alarm system , (7AS)	258
2. Anti-theft alarm sensor, Alarm horn, Onboard supply control unit, Fuse holder C	259
036 - Fuel system	260-262
1. Fuel system	260
2. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Fuse holder B	261
3. Fuel tank filler flap central locking actuator, Onboard supply control unit	262
037 - Dash panel insert	263-266
1. Dash panel insert	263
2. Immobiliser reader coil, Parking brake pressure switch, Emergency call module control unit and communication unit, Dash panel insert, Fuse holder C	264
3. Fuel delivery unit, Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert	265
4. Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit	266
038 - Multimedia system	267-271
1. Multimedia system	267
2. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	268
3. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Dash panel insert, Telephone microphone	269
4. Onboard supply control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Radio aerial 2	270
5. Control unit 1 for information electronics, Roof aerial, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	271
039 - Airbag systems , (L0R)	272-281
1. Airbag systems , (L0R)	272
2. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse holder C, Diagnostic connection	273
3. Airbag control unit, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Rear belt tensioner igniter on driver side, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter	274
4. Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Airbag igniter 1 on front passenger side, Rear belt tensioner igniter on passenger side	275
5. Key-operated switch to deactivate airbag on front passenger side, Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side	276
6. Twin belt buckle, Side airbag crash sensor on driver side, Side airbag crash sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Emergency call module control unit and communication unit	277

7. Airbag control unit, Front left seat belt, Front right seat belt	278
8. Driver side belt switch, Airbag control unit, Side airbag igniter on driver side	279
9. Front passenger side belt switch, Seat occupied sensor on front passenger side, Airbag control unit, Side airbag igniter on front passenger side	280
10. Rear belt switch, driver side, Rear seat occupied sensor on driver side, Rear seat occupied sensor on passenger side, Rear seat occupied sensor, centre, Airbag control unit	281
040 - Interior lights	282-285
1. Interior lights	282
2. Onboard supply control unit, Front interior light, Rear interior light	283
3. Driver vanity mirror contact switch, Onboard supply control unit, Luggage compartment light, Driver side illuminated vanity mirror	284
4. Front passenger vanity mirror contact switch, Front passenger side illuminated vanity mirror	285
041 - Tail light clusters	286-290
1. Tail light clusters	286
2. Reversing light switch, Onboard supply control unit, Left tail light cluster, Right tail light cluster, Fuse holder C	287
3. Onboard supply control unit, Left tail light cluster 2	288
4. Right tail light cluster 2, Left number plate light, Right number plate light	289
5. High-level brake light bulb	290
042 - Heated rear window	291-292
1. Heated rear window	291
2. Onboard supply control unit, Heated rear window	292
043 - Data bus diagnostic interface and diagnostic connector	293-295
1. Data bus diagnostic interface and diagnostic connector	293
2. Airbag control unit, Fuse holder C, Diagnostic connection	294
3. Onboard supply control unit, Data bus diagnostic interface, Diagnostic connection	295
044 - Mobile telephone systems , (9ZV)	296-297
1. Mobile telephone systems , (9ZV)	296
2. Control unit 1 for information electronics, Telephone bracket, Fuse holder C	297
045 - Background lighting , (QQ3)	298-302
1. Background lighting , (QQ3)	298
2. Onboard supply control unit, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Storage compartment illumination bulb in front centre console	299
3. Driver door control unit, Driver side interior door handle illumination bulb, Light for front left door contour lighting	300
4. Front passenger door control unit, Front passenger side interior door handle illumination bulb, Light for front right door contour lighting	301
5. Coupling point for front right door	302
046 - Light switch	303-305
1. Light switch	303
2. Rotary light switch, Fuse holder C	304
3. Rotary light switch, Hazard warning light switch, Onboard supply control unit	305
047 - Rear lid remote release	306-307
1. Rear lid remote release	306
2. Rear lid handle, Onboard supply control unit, Rear lid lock unit	307
048 - Interior mirror , (4L6)	308-309
1. Interior mirror , (4L6)	308
2. Onboard supply control unit, Fuse holder C, Automatic anti-dazzle interior mirror	309
049 - Trailer coupling , (1D2)	310-313
1. Trailer coupling , (1D2)	310
2. Trailer detector control unit, Fuse holder C	311
3. Trailer detector control unit, Trailer socket	312
4. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface	313
050 - Sliding sunroof , (3FB)	314-316
1. Sliding sunroof , (3FB)	314
2. Sliding sunroof adjustment control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	315
3. Sunroof switch, Sliding sunroof adjustment control unit, Sliding sunroof motor	316
051 - Sound system , (9VG),(8AR)	317-321
1. Sound system , (9VG),(8AR)	317
2. Onboard supply control unit, Digital sound package control unit, Fuse holder C	318
3. Digital sound package control unit, Data bus diagnostic interface	319
4. Digital sound package control unit, Control unit 1 for information electronics, Front left treble loudspeaker, Front right treble loudspeaker, Subwoofer	320
5. Digital sound package control unit. Rear left bass loudspeaker. Rear right bass loudspeaker.	321

Front left bass loudspeaker, Front right bass loudspeaker	
052 - Sound system , (8RE),(8RL)	322-324
1. Sound system , (8RE),(8RL)	322
2. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker, Front right treble loudspeaker, Front right bass loudspeaker	323
3. Control unit 1 for information electronics, Rear left bass loudspeaker, Rear right bass loudspeaker	324
053 - Footwell lights , (6T1)	325-326
1. Footwell lights , (6T1)	325
2. Onboard supply control unit, Left footwell light, Right footwell light	326
054 - Fog light , (8WH)	327-328
1. Fog light , (8WH)	327
2. Onboard supply control unit, Left fog light bulb, Right fog light bulb	328
055 - Rain and light sensor , (8N6)	329-330
1. Rain and light sensor , (8N6)	329
2. Rain and light sensor, Onboard supply control unit, Fuse holder C	330
056 - USB connections for data transfer	331-333
1. USB connections for data transfer	331
2. Onboard supply control unit, Fuse holder C, USB connection 1	332
3. Control unit 1 for information electronics, USB charging socket 1, USB connection 1	333
057 - Emergency call module , (EL2),(EL5),(NZ2),(NZ4)	334-338
1. Emergency call module , (EL2),(EL5),(NZ2),(NZ4)	334
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Dash panel insert, Fuse holder C	335
3. Airbag control unit, Onboard supply control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Loudspeaker for emergency call module	336
4. Emergency call module control unit and communication unit, Roof aerial, LTE aerial 2	337
5. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	338
058 - Data bus network for powertrain CAN bus	339-341
1. Data bus network for powertrain CAN bus	339
2. Selector mechanism, ABS control unit, Airbag control unit, Parking aid control unit, Onboard supply control unit, Data bus diagnostic interface	340
3. Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	341
059 - Data bus network for running gear CAN bus , (AW4)	342-343
1. Data bus network for running gear CAN bus , (AW4)	342
2. ABS control unit, Parking aid control unit, Power steering control unit, Data bus diagnostic interface	343
060 - Data bus network for extended CAN bus	344-346
1. Data bus network for extended CAN bus	344
2. Adaptive cruise control unit, Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control, Lane change assist control unit, Front camera for driver assist systems	345
3. Front left headlight, Front right headlight	346
061 - Data bus network for convenience CAN bus	347-350
1. Data bus network for convenience CAN bus	347
2. Heater and air conditioning controls, Trailer detector control unit, Onboard supply control unit, Digital sound package control unit, Data bus diagnostic interface	348
3. Control unit for electronic steering column lock, Emergency call module control unit and communication unit, Interface for entry and start system, Dash panel insert	349
4. Sliding sunroof adjustment control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	350
062 - Data bus network for infotainment CAN bus , (AW4)	351-352
1. Data bus network for infotainment CAN bus , (AW4)	351
2. Digital sound package control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	352
063 - Headlights , (8IT)	353-355
1. Headlights , (8IT)	353
2. Headlight range control regulator, Onboard supply control unit, Front left headlight, Fuse holder C	354
3. Onboard supply control unit, Front left headlight, Front right headlight	355
064 - Fuses in interior	356-376
1. Fuses in interior	356
2. Fuse holder A, Fuse holder C	357
3. Heater and air conditioning controls, Anti-theft alarm sensor, Alarm horn, Front right seat belt, Fuse holder C	358

4. Seat heating control unit, Fuse holder C	359
5. Rain and light sensor, Steering column electronics control unit, Front left seat belt, Fuse holder C	360
6. Steering column electronics control unit, Dash panel insert, Fuse holder C	361
7. Driver door control unit, Front passenger door control unit, Control unit 1 for information electronics, Rear driver side door control unit, Rear passenger side door control unit, Fuse holder C	362
8. ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder C	363
9. Adaptive cruise control unit, Parking aid control unit, Power steering control unit, Fuse holder C	364
10. Rotary light switch, Lane change assist control unit, Lane change assist control unit 2, Front left headlight, Front camera for driver assist systems, Fuse holder C	365
11. Exterior mirror adjuster, Headlight range control regulator, Reversing light switch, Front right headlight, Fuse holder C, Diagnostic connection, Automatic anti-dazzle interior mirror	366
12. Clutch position sender, Pressure sender for refrigerant circuit, Fuse holder B, Fuse holder C, Rear window wiper motor	367
13. Airbag control unit, Warning lamp for airbag deactivated on front passenger side, Fuse holder C, 12 V socket	368
14. Fresh air blower control unit, Sliding sunroof adjustment control unit, Trailer detector control unit, Digital sound package control unit, Fuse holder C	369
15. Rear lid handle, Trailer detector control unit, Display unit for front information display and operating unit control unit, Telephone bracket, Fuse holder C, USB charging socket 1, USB connection 1	370
16. Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system, Fuse holder C	371
17. Selector mechanism, Ignition key withdrawal lock solenoid, Fuse holder C	372
18. Fuse holder C, Washer pump	373
19. Fuse holder C	374
20. Onboard supply control unit	375
21. Onboard supply control unit	376
065 - Earthing concept in interior	377-397
1. Earthing concept in interior	377
2. Rear lid handle, Operating unit for preparation for mobile telephone, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Telephone bracket, USB connection 1	378
3. Parking aid control unit, Digital sound package control unit, Emergency call module control unit and communication unit, Front camera for driver assist systems, Left footwell light, Heated seat cushion for front left seat, Heated backrest for front left seat	379
4. Fresh air blower control unit, Data bus diagnostic interface, Rear driver side door control unit, USB charging socket 1, Fresh air blower, Rear left door lock unit	380
5. Anti-theft alarm sensor, Alarm horn, Interface for entry and start system, Fuse holder C, Front interior light	381
6. Rain and light sensor, Control unit for cornering light and headlight range control, Diagnostic connection, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Automatic anti-dazzle interior mirror	382
7. Headlight range control regulator, Steering column electronics control unit, Front left headlight, Front right headlight	383
8. Brake light switch, Onboard supply control unit, Control unit for electronic steering column lock	384
9. Exterior mirror adjuster, Driver side interior locking button for central locking system, Windscreen wiper	385
10. Driver door control unit, Central locking SAFELOCK function warning lamp, Driver side interior door handle illumination bulb, Light for front left door contour lighting, Driver door lock unit	386
11. Front passenger door control unit, Front passenger side interior door handle illumination bulb, Light for front right door contour lighting, Driver side exterior mirror	387
12. Driver exterior door handle, Front passenger exterior door handle, Passenger side exterior mirror, Front passenger door lock unit	388
13. Sliding sunroof adjustment control unit, Seat heating control unit, Right footwell light, Heated seat cushion for front right seat, Heated backrest for front right seat	389
14. Rear passenger side door control unit, Rear right door lock unit	390
15. Rotary light switch, Heater and air conditioning controls, Light 1 for dash panel contour lighting, Light 2 for dash panel contour lighting, Light 3 for dash panel contour lighting, Storage compartment illumination bulb in front centre console	391
16. Selector mechanism, Hazard warning light switch, Switch module 1 in centre console, Starter button, Dash panel insert, Fuse holder B, 12 V socket	392
17.	393

18. Trailer detector control unit, Lane change assist control unit, Lane change assist control unit	394
2, Front left seat belt, Frequency modulation (FM) frequency filter in negative wire, Trailer socket	
19. Left tail light cluster 2, Rear window wiper motor, Rear lid lock unit, Left number plate light, Right number plate light, Heated rear window	395
20. Exhaust flap control unit, Left tail light cluster, Right tail light cluster 2, High-level brake light bulb	396
21. Fuel pump control unit, Right tail light cluster, Front right seat belt, Rear interior light	397
066 - Door control units, driver side	398-416
1. Door control units, driver side	398
2. Exterior mirror adjuster, Driver door control unit, Fuse holder C	399
3. Exterior mirror adjuster, Driver door control unit	400
4. Exterior mirror adjuster, Driver door control unit	401
5. Operating unit for window regulator in driver door, Driver door control unit	402
6. Driver side interior locking button for central locking system, Driver door control unit	403
7. Driver door control unit, Driver side exterior mirror	404
8. Driver door control unit, Onboard supply control unit, Driver side exterior mirror	405
9. Onboard supply control unit, Central locking SAFELOCK function warning lamp, Driver door lock unit	406
10. Onboard supply control unit, Driver door lock unit	407
11. Onboard supply control unit	408
12. Onboard supply control unit	409
13. Onboard supply control unit, Coupling point for front right door	410
14. Coupling point for front right door	411
15. Coupling point for front right door	412
16. Operating unit for window regulator in rear left door, Rear driver side door control unit, Coupling point for front right door	413
17. Rear driver side door control unit, Rear left door lock unit	414
18. Operating unit for window regulator in rear right door, Coupling point for rear right door, Rear right door lock unit	415
19. Coupling point for rear right door	416
067 - Door control units, passenger side	417-429
1. Door control units, passenger side	417
2. Window regulator switch in front passenger door, Front passenger door control unit, Fuse holder C	418
3. Front passenger door control unit, Passenger side exterior mirror	419
4. Front passenger door control unit, Passenger side exterior mirror	420
5. Front passenger door control unit, Onboard supply control unit, Front passenger door lock unit	421
6. Onboard supply control unit, Front passenger door lock unit	422
7. Onboard supply control unit	423
8. Onboard supply control unit, Coupling point for front left door	424
9. Coupling point for front left door	425
10. Operating unit for window regulator in rear right door, Rear passenger side door control unit, Coupling point for front left door	426
11. Rear passenger side door control unit, Rear right door lock unit	427
12. Operating unit for window regulator in rear left door, Coupling point for rear left door, Rear left door lock unit	428
13. Coupling point for rear left door	429
068 - USB connections for data transfer	430-432
1. USB connections for data transfer	430
2. Onboard supply control unit, Fuse holder C, USB charging socket 1, USB connection 1	431
3. Control unit 1 for information electronics, USB connection 1	432
801 - - Fitting locations: Earth points - 3	433-449
1. Earth points	433-449
1.1 Earth points in front part of vehicle	434-441
1.1.1 Front from left	435
1.1.2 Front from right	436
1.1.3 1.0l petrol engine, DLAA, DLAC	437
1.1.4 1.0l petrol engine, DUXA	438
1.1.5 1.5l petrol engine, DPCA	439
1.1.6 Manual gearbox	440
1.1.7 Dual clutch gearbox, 0CW	441
1.2 Earth points in middle part of vehicle	442-445
1.2.1 Front left of interior, LHD models	442
1.2.2 Front left of interior, RHD models	443
1.2.3 Front right of interior, LHD models	444
1.2.4 Front right of interior, RHD models	445
1.3 Earth points in rear part of vehicle	446-449

1.3.1 Left luggage compartment	447
1.3.2 Right of luggage compartment	447
1.3.3 Rear side, view from right	448-449
802 - - Fitting locations: Fuses - 3	450-463
1. Fuses	450-463
1.1 Fuse holder A -SA-, from September 2021	450-454
1.1.1 Fitting location of fuse holder A -SA-, from September 2021	450-451
1.1.2 Fuse assignment for fuse holder A -SA-, from September 2021	452-454
1.2 Fuse holder B -SB-, from September 2021	455-457
1.2.1 Fitting location of fuse holder B -SB-, from September 2021	455
1.2.2 Fuse assignment for fuse holder B -SB-, from September 2021	456-457
1.3 Fuse holder C -SC-, from September 2021	458-463
1.3.1 Fitting location of fuse holder C -SC-, left-hand drive models, from September 2021	458
1.3.2 Fitting location of fuse holder C -SC-, right-hand drive models, from September 2021	459
1.3.3 Fuse assignment for fuse holder C -SC-, from September 2021	460-463
803 - - Fitting locations: Relays - 3	464-467
1. Relays	464-467
1.1 Relay on fuse holder B -SB-, from September 2021	464
1.1.1 Relay on fuse holder B -SB-, from September 2021	464
1.2 Relays on fuse holder C -SC-, from September 2021	465-467
1.2.1 Relays on fuse holder C -SC-, left-hand drive models, from September 2021	466
1.2.2 Relays on fuse holder C -SC-, right-hand drive models, from September 2021	466-467
804 - - Fitting locations: front part of vehicle - 3	468-490
1. Fitting location: front part of vehicle	468-490
1.1 Front, view from front	473
1.2 Front, view from left	474
1.3 Front, view from right	475
1.4 1.0l petrol engine, DLAA, DLAC	476-478
1.4.1 1.0l petrol engine, DLAA, DLAC, from front	477
1.4.2 1.0l petrol engine, DLAA, DLAC, from above	477
1.4.3 1.0l petrol engine, DLAA, DLAC, from rear	478
1.5 1.0l petrol engine, DXUA	479-481
1.5.1 1.0l petrol engine, DXUA, from front	480
1.5.2 1.0l petrol engine, DXUA, from above	480
1.5.3 1.0l petrol engine, DXUA, from rear	481
1.6 1.5l petrol engine, DPCA	482-485
1.6.1 1.5l petrol engine, DPCA, from front	483
1.6.2 1.5l petrol engine, DPCA, from above	483
1.6.3 1.5l petrol engine, DPCA, from right	484
1.6.4 1.5l petrol engine, DPCA, from rear	485
1.7 Manual gearbox	486-488
1.7.1 Manual gearbox, 0AJ	487
1.7.2 Manual gearbox, 0DF	488
1.8 Dual clutch gearbox	489-490
1.8.1 Dual clutch gearbox, 0CW	489-490
805 - - Fitting locations: middle part of vehicle - 3	491-536
1. Fitting locations: middle part of vehicle	491-536
1.1 At front of interior	500-516
1.1.1 Front left of interior, LHD models	501-502
1.1.2 Front left of interior, RHD models	503-504
1.1.3 Left footwell, LHD models	505
1.1.4 Right footwell, RHD models	506
1.1.5 Front right of interior, LHD models	507
1.1.6 Front right of interior, RHD models	508
1.1.7 Dash panel, LHD models	509
1.1.8 Dash panel, RHD models	510
1.1.9 Steering wheel	511
1.1.10 Steering column	511-512
1.1.11 Front centre console, LHD models	513-514
1.1.12 Front centre console, RHD models	515
1.1.13 Left front seat	516
1.1.14 Right front seat	516
1.2 Rear interior	517-518
1.2.1 Rear interior, view from left	518
1.2.2 Rear interior, view from right	518
1.3 Roof	519-522

1.3.1 Roof, part 1	520-521
1.3.2 Roof, part 2, without sliding/tilting sunroof	522
1.3.3 Roof, part 2, with sliding/tilting sunroof	522
1.4 Doors	523-529
1.4.1 Driver door, left-hand drive models	524-525
1.4.2 Driver door, right-hand drive models	526
1.4.3 Front passenger door, left-hand drive models	527
1.4.4 Front passenger door, right-hand drive models	528
1.4.5 Rear left door	529
1.4.6 Rear right door	529
1.5 Heater and air conditioning unit	530-534
1.5.1 Air conditioning system, 9AB, part 1	531
1.5.2 Air conditioning system, 9AB, part 2	532
1.5.3 Climatronic, 9AK, part 1	533
1.5.4 Climatronic, 9AK, part 2	534
1.6 Connector assignments	535-536
1.6.1 Onboard supply control unit -J519-	535-536
806 - - Fitting locations: rear part of vehicle - 3	537-542
1. Fitting locations: rear part of vehicle	537-542
1.1 Rear lid	538
1.2 Rear bumper	539
1.3 Rear side, view from left	540
1.4 Rear side, view from right	541-542
807 - -Fitting locations: vehicle underbody - 3	543-545
1. Fitting locations: vehicle underbody	543-545
1.1 Front of underbody	543
1.2 Rear underbody	544-545
830 - -Connector views: parts with prefix A to D - 2	546-548
1. Connector views: parts with prefix A to D	546-548
1.1 Starter -B-	546
1.1.1 Connector -T1jr-	546
1.2 Alternator with voltage regulator -CX1-	546
1.2.1 Connector -T2w-	546
1.3 Immobiliser reader coil -D2-	547-548
1.3.1 Connector -T2x-	547-548
831 - -Connector views: parts with prefix E - 3	549-576
1. Connector views: parts with prefix E	549-576
1.1 Driver side belt switch -E24-	549
1.1.1 Connector -T2y-	549
1.2 Front passenger side belt switch -E25-	550
1.2.1 Connector -T2fv-	550
1.3 Headlight range control regulator -E102-	551
1.3.1 Connector -T7a-	551
1.4 Key operated switch to deactivate airbag on front passenger side -E224-	552
1.4.1 Connector -T6e-	552
1.5 Rear belt switch, driver side -E258-	553
1.5.1 Connector -T2ag-	553
1.6 Rear belt switch, passenger side -E259-	554
1.6.1 Connector -T2ah-	554
1.7 Driver side interior locking button for central locking system -E308-	555
1.7.1 Connector -T4u-	555
1.8 Starter button -E378-	556
1.8.1 Connector -T6g-	556
1.9 Operating unit for preparation for mobile telephone -E508-	557
1.9.1 Connector -T6h-	557
1.10 Rotary light switch -EX1-	558
1.10.1 Connector -T10p-	558
1.11 Selector mechanism -EX2-	559
1.11.1 Connector -T10t-	559
1.12 Hazard warning light switch -EX3-	560
1.12.1 Connector -T6f-	560
1.13 Driver exterior door handle -EX6-	561
1.13.1 Connector -T4ac-	561
1.14 Front passenger exterior door handle -EX7-	562
1.14.1 Connector -T4ad-	562
1.15 Exterior mirror adjuster -EX11-	563-564

1.15.1 Connector -T10q-	563
1.15.2 Connector -T6i-	564
1.16 Heater and air conditioning controls -EX21-	565-568
1.16.1 Connector -T16f-	565
1.16.2 Connector -T16g-	566
1.16.3 Connector -T16h-	566
1.16.4 Connector -T16i-	567
1.16.5 Connector -T20a-	568
1.16.6 Connector -T5d-	568
1.17 Switch module 1 in centre console -EX23-	569-570
1.17.1 Connector -T10r-	569
1.17.2 Connector -T6z-	570
1.18 Window regulator switch in front passenger door -EX27-	571
1.18.1 Connector -T4v-	571
1.19 Operating unit for window regulator in rear right door -EX28-	571
1.19.1 Connector -T4w-	572
1.20 Operating unit for window regulator in rear left door -EX29-	572
1.20.1 Connector -T4x-	572
1.21 Operating unit for window regulator in driver door -EX36-	573
1.21.1 Connector -T10s-	573
1.22 Rear lid handle -EX37-	574-576
1.22.1 Connector -T2ev-	574
1.22.2 Connector -T2m-	575
1.22.3 Connector -T4bd-	576
832 - -Connector views: parts with prefix F - 3	577-587
1. Connector views: parts with prefix F	577-587
1.1 Brake light switch -F-	577
1.1.1 Connector -T4z-	577
1.2 Reversing light switch -F4-	578
1.2.1 Connector -T2aj-	578
1.3 Brake fluid level warning contact -F34-	578
1.3.1 Connector -T2af-	578
1.4 Driver vanity mirror contact switch -F147-	579
1.4.1 Connector -T2ac-	579
1.5 Front passenger vanity mirror contact switch -F148-	580
1.5.1 Connector -T2ad-	580
1.6 Fuel tank filler flap central locking actuator -F219-	581
1.6.1 Connector -T2z-	581
1.7 Parking brake pressure switch -F234-	582
1.7.1 Connector -T2aa-	582
1.8 Bonnet contact switch -F266-	583
1.8.1 Connector -T2ab-	583
1.9 Bonnet contact switch 2 -F329-	584
1.9.1 Connector -T2ae-	584
1.10 Twin belt buckle -FX4-	585-587
1.10.1 Connector -T4s-	585
1.10.2 Connector -T4t-	586-587
833 - -Connector views: parts with prefix G - 3	588-656
1. Connector views: parts with prefix G	588-656
1.1 Oil pressure sender -G10-	590
1.1.1 Connector -T3a-	590
1.2 Ambient temperature sensor -G17-	591
1.2.1 Connector -T2an-	591
1.3 Engine speed sender -G28-	591
1.3.1 Connector -T3q-	591
1.4 Coolant shortage indicator sender -G32-	592
1.4.1 Connector -T2ax-	592
1.5 Windscreen washer fluid level sender -G33-	593
1.5.1 Connector -T2ay-	593
1.6 Hall sender -G40-	594
1.6.1 Connector -T3aw-	594
1.7 Rear right speed sensor -G44-	595
1.7.1 Connector -T2az-	595
1.8 Front right speed sensor -G45-	596
1.8.1 Connector -T2ba-	596
1.9 Rear left speed sensor -G46-	597

1.9.1 Connector -T2bc-	597
1.10 Front left speed sensor -G47-	598
1.10.1 Connector -T2bd-	598
1.11 Knock sensor 1 -G61-	599-600
1.11.1 Connector -T2bf-	599
1.11.2 Connector -T2bg-	600
1.12 Coolant temperature sender -G62-	601
1.12.1 Connector -T2bh-	601
1.12.2 Connector -T2bi-	601
1.13 Rear right vehicle level sender -G77-	602
1.13.1 Connector -T3ag-	602
1.14 Engine outlet coolant temperature sender -G82-	603
1.14.1 Connector -T2bk-	603
1.15 Radiator outlet coolant temperature sender -G83-	604-605
1.15.1 Connector -T2bl-	604
1.15.2 Connector -T2bm-	605
1.16 Sunlight penetration photosensor -G107-	606
1.16.1 Connector -T6j-	606
1.17 Seat occupied sensor on front passenger side -G128-	606
1.17.1 Connector -T2fw-	607
1.18 Left vent temperature sender -G150-	607
1.18.1 Connector -T2al-	607
1.19 Right vent temperature sender -G151-	608
1.19.1 Connector -T2am-	608
1.20 Rear seat occupied sensor on driver side -G177-	609
1.20.1 Connector -T2ao-	609
1.21 Rear seat occupied sensor on passenger side -G178-	610
1.21.1 Connector -T2ap-	610
1.22 Side airbag crash sensor on driver side -G179-	611
1.22.1 Connector -T2aq-	611
1.23 Side airbag crash sensor on front passenger side -G180-	612
1.23.1 Connector -T2ar-	612
1.24 Crash sensor for front airbag -G190-	613
1.24.1 Connector -T2as-	613
1.25 Footwell vent temperature sender -G192-	614
1.25.1 Connector -T2at-	614
1.26 Rear left parking aid sender -G203-	615
1.26.1 Connector -T3f-	615
1.27 Rear centre left parking aid sender -G204-	616
1.27.1 Connector -T3g-	616
1.28 Rear centre right parking aid sender -G205-	617
1.28.1 Connector -T3h-	617
1.29 Rear right parking aid sender -G206-	618
1.29.1 Connector -T3i-	618
1.30 Fuel pressure sender -G247-	619
1.30.1 Connector -T3j-	619
1.31 Front right parking aid sender -G252-	620
1.31.1 Connector -T3k-	620
1.32 Front centre right parking aid sender -G253-	621
1.32.1 Connector -T3l-	621
1.33 Front centre left parking aid sender -G254-	622
1.33.1 Connector -T3m-	622
1.34 Front left parking aid sender -G255-	623
1.34.1 Connector -T3n-	623
1.35 Rear side airbag crash sensor on driver side -G256-	624
1.35.1 Connector -T2au-	624
1.36 Rear side airbag crash sensor on passenger side -G257-	625
1.36.1 Connector -T2av-	625
1.37 Oil level and oil temperature sender -G266-	626-627
1.37.1 Connector -T3o-	626
1.37.2 Connector -T3p-	627
1.38 Hall sender 3 -G300-	628
1.38.1 Connector -T3ax-	628
1.39 Evaporator temperature sensor -G308-	628
1.39.1 Connector -T2aw-	629
1.40 Rain and light sensor -G397-	629

1.40.1 Connector -T3s-	629
1.41 Exhaust gas pressure sensor 1 -G450-	630
1.41.1 Connector -T3t-	630
1.42 Clutch position sender -G476-	631
1.42.1 Connector -T5e-	631
1.43 Front left sender for park assist steering on left side of vehicle -G568-	632
1.43.1 Connector -T3u-	632
1.44 Front right sender for park assist steering on right side of vehicle -G569-	633
1.44.1 Connector -T3v-	633
1.45 Anti-theft alarm sensor -G578-	634
1.45.1 Connector -T4ab-	634
1.46 Vacuum sender -G608-	635
1.46.1 Connector -T3y-	635
1.47 Gearbox neutral position sender -G701-	636
1.47.1 Connector -T3ab-	636
1.48 Rear left park assist steering sender -G716-	637
1.48.1 Connector -T3ae-	637
1.49 Rear right park assist steering sender -G717-	638
1.49.1 Connector -T3af-	638
1.50 Pressure sender for refrigerant circuit -G805-	639
1.50.1 Connector -T3ah-	639
1.51 Inlet camshaft position sender -G1002-	640-641
1.51.1 Connector -T3b-	640
1.51.2 Connector -T3c-	641
1.52 Exhaust camshaft position sender -G1003-	642
1.52.1 Connector -T3d-	642
1.53 Rear seat occupied sensor, centre -G1010-	642
1.53.1 Connector -T2ak-	643
1.54 Fuel delivery unit -GX1-	643
1.54.1 Connector -T5f-	643
1.55 Accelerator pedal module -GX2-	644
1.55.1 Connector -T6l-	644
1.56 Throttle valve module -GX3-	645-646
1.56.1 Connector -T6m-	645
1.56.2 Connector -T6n-	646
1.57 Lambda probe 1 after catalytic converter -GX7-	647
1.57.1 Connector -T4ak-	647
1.58 Intake manifold sender -GX9-	647-648
1.58.1 Connector -T3ad-	648
1.58.2 Connector -T4al-	648
1.59 Lambda probe 1 before catalytic converter -GX10-	649-650
1.59.1 Connector -T4ag-	649
1.59.2 Connector -T6k-	650
1.60 Charge pressure sender -GX26-	651
1.60.1 Connector -T3r-	651
1.60.2 Connector -T4ai-	651
1.61 Engine temperature regulation module -GX33-	652
1.61.1 Connector -T5h-	652
1.62 Charge pressure control module -GX34-	653
1.62.1 Connector -T6o-	653
1.63 Pressure sensor for activated charcoal filter air flushing -GX44-	654-656
1.63.1 Connector -T4af-	654
1.63.2 Connector -T4aj-	655-656