



Contents

00 - Technical data	1
1 Brake allocation via PR No.	1
1.1 Front brakes	1
1.2 Rear brakes	2
2 Technical data for brakes	3
2.1 Brake master cylinder and brake booster	3
2.2 Front brakes	3
2.3 Rear brakes (disc brakes)	3
3 Brake test	4
3.1 General	4
3.2 Test for vehicles with front-wheel drive	4
3.3 Test for vehicles with four-wheel drive via an all-wheel drive coupling	4
3.4 Testing the electromechanical parking brake	5
45 - Anti-lock brake system	7
1 General notes on anti-lock brake system	7
2 Notes for repair work on anti-lock brake system	8
3 Connecting VAS 5051 and selecting functions	9
4 Electrical/electronic components and locations	11
4.1 ABS TRW (ABS/EDL/TCS/ESP)	11
5 Assembly overview - hydraulic unit	13
5.1 ABS TRW (ABS/EDL/TCS/ESP), left-hand drive vehicle	13
5.2 ABS TRW (ABS/EDL/TCS/ESP), right-hand drive vehicle	19
6 Removing and installing parts of ABS system on front and rear axle	27
6.1 Removing and installing parts of ABS system on front axle	27
6.2 Removing and installing parts of anti-lock brake system on rear axle (front-wheel drive)	28
6.3 Removing and installing parts of anti-lock brake system on rear axle (four-wheel drive)	29
7 Removing and installing parts of ESP system	31
7.1 Removing and installing ESP sensor unit G419	31
7.2 Removing and installing steering angle sender G85	32
46 - Brakes - mechanism	33
1 Repairing front brakes	33
1.1 Assembly overview - front brakes FN 3	33
1.2 Removing and installing brake pads or linings	34
1.3 Removing and installing brake caliper	37
2 Repairing rear brakes	39
2.1 Assembly overview - rear brake CII 41	39
2.2 Removing and installing brake pads or linings	40
2.3 Removing and installing brake caliper	43
3 Overview of electromechanical parking brake components	46
3.1 Removing and installing control unit for electromechanical parking brake J540	47
3.2 Removing and installing parking brake motor	47
4 Assembly overview - brake pedal	50
4.1 Assembly overview - brake pedal, left-hand drive	50
4.2 Assembly overview - brake pedal, RHD	52
47 - Brakes - hydraulics	61
1 Repairing front brake calipers	61
1.1 Assembly overview - brake caliper FN 3	61
1.2 Removing and installing piston for brake caliper FN 3	61



2	Repairing rear brake calipers	65
2.1	Assembly overview - brake caliper CII 41	65
2.2	Removing and installing brake caliper piston	66
2.3	Pre-bleeding brake caliper	68
3	Pressurised leak test	69
3.1	Test prerequisites:	69
4	Bleeding brake system	70
4.1	Bleeding brake system with the brake filling and bleeding equipment VAS 5234	70
4.2	Changing brake fluid	72
5	Assembly overview - brake booster/brake master cylinder	73
5.1	Assembly overview - brake booster/brake master cylinder (left-hand drive vehicle)	73
5.2	Assembly overview - brake servo and brake master cylinder, RHD up to model year 2015	75
5.3	Assembly overview - brake servo and brake master cylinder, RHD from model year 2016	77
5.4	Vacuum pump for brake booster (vehicles with diesel engine)	78
5.5	Vacuum pump for brake booster (vehicles with petrol engine)	79
5.6	Checking brake booster vacuum system	79
5.7	Checking non-return valve :	83
5.8	Removing and installing vacuum sender G608	83
5.9	Assembly overview - electric vacuum pump	83
6	Removing and installing brake light switch F	86
6.1	Removing and installing brake light switch F , left-hand drive	86
6.2	Removing and installing brake light switch F , right-hand drive	86
7	Removing and installing brake master cylinder	88
7.1	Removing and installing brake master cylinder, LHD	88
7.2	Removing and installing brake master cylinder, RHD	90
8	Removing and installing brake booster	95
8.1	Removing and installing brake booster, LHD	95
8.2	Removing and installing brake booster, right-hand drive vehicle	97
8.3	Removing and installing brake servo, RHD vehicles with diesel engine from model year 2016	102
9	Brake lines	107
9.1	Separating point on underbody	107
9.2	Repairing brake lines	107