



Contents

00 - Technical data	1
1 Checklist for evaluating running gear of accident vehicles	1
2 General information	3
40 - Front suspension	4
1 Appraisal of accident vehicles	4
2 Servicing front suspension	5
2.1 Overview - front axle	5
2.2 Raising wheel suspension to unladen position	6
3 Subframe, anti-roll bar, suspension links	8
3.1 Assembly overview: subframe, anti-roll bar, suspension links	8
3.2 Repairing thread in longitudinal member	11
3.3 Fixing position of subframe	11
3.4 Lowering subframe	13
3.5 Removing and installing subframe without steering rack	17
3.6 Removing and installing subframe with steering rack	21
3.7 Repairing subframe	26
3.8 Checking swivel joint	38
3.9 Removing and installing swivel joint	38
3.10 Removing and installing suspension link with mounting bracket	42
3.11 Removing and installing suspension link with mounting bracket (left side for vehicles with DSG or automatic gearboxes)	45
3.12 Renewing bonded rubber bush for suspension link	50
3.13 Renewing mounting bracket with suspension link bush	52
3.14 Removing and installing anti-roll bar	54
4 Assembly overview - wheel bearings	60
4.1 Removing and installing wheel bearing unit	62
4.2 Removing and installing wheel bearing housing	64
5 Assembly overview: suspension strut	69
5.1 Removing and installing suspension strut	70
5.2 Repairing suspension strut	76
6 Removing and installing drive shafts	79
6.1 Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft	79
6.2 Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft	80
6.3 Removing and installing drive shaft with constant velocity joint	82
6.4 Removing and installing left drive shaft with (push-on) constant velocity slip joint	85
6.5 Removing and installing right drive shaft with (push-on) constant velocity slip joint	90
6.6 Removing and installing drive shafts with triple roller joint AAR3300i (pushed onto gearbox stub shaft)	96
6.7 Removing and installing drive shafts with triple roller joint AAR3300i (pushed into gearbox)	102
7 Repairing drive shaft - overview of drive shafts	107
7.1 Heat shields for drive shafts	108
8 Assembly overview: drive shaft with VL107 constant velocity joint (bolt-on)	109
8.1 Dismantling and assembling drive shaft with VL107 constant velocity joint	111
8.2 Checking outer constant velocity joint	115
8.3 Checking inner constant velocity joint	116
9 Assembly overview: drive shaft with VL107 constant velocity slip joint	118
9.1 Dismantling and assembling drive shaft with VL107 constant velocity slip joint	120
9.2 Checking outer constant velocity joint	124
10 Assembly overview: drive shaft with triple roller joint AAR3300i	126
10.1 Dismantling and assembling drive shaft with triple roller joint AAR3300i	128



11	Assembly overview: drive shaft with triple roller joint AAR3300i for 6-speed automatic gearbox 09M, four-wheel drive	133
11.1	Dismantling and assembling drive shaft with triple roller joint AAR3300i for 6-speed automatic gearbox 09M, four-wheel drive	135
42	Rear suspension	140
1	Appraisal of accident vehicles	140
2	Repairing rear suspension (front-wheel drive)	141
2.1	Overview - rear axle	141
2.2	Rear axle in unladen position	143
3	Assembly overview: subframe up to model year 2010 (front-wheel drive)	145
3.1	Removing and installing rear axle	145
3.2	Repairing subframe	149
4	Assembly overview: transverse link, track rod up to model year 2010 (front-wheel drive)	154
4.1	Assembly overview: rear left vehicle level sender G76 , front-wheel drive	157
4.2	Removing and installing rear left vehicle level sender G76	157
4.3	Removing and installing upper transverse link	158
4.4	Removing and installing lower transverse link	160
4.5	Removing and installing track rod	162
5	Allocation of track rods to trailing arms (front- and four-wheel drive)	165
6	Assembly overview: subframe, transverse link, track rod, from model year 2011 (front-wheel drive)	167
6.1	Assembly overview: rear left vehicle level sender G76 (front-wheel drive)	169
6.2	Removing and installing rear left vehicle level sender G76	169
6.3	Removing and installing rear axle	170
6.4	Removing and installing upper transverse link	173
6.5	Removing and installing lower transverse link	175
6.6	Removing and installing track rod	177
7	Assembly overview: wheel bearing housing, trailing arm (front-wheel drive)	180
7.1	Removing and installing wheel bearing housing	181
7.2	Renewing bonded rubber bush for wheel bearing housing	185
7.3	Removing and installing wheel bearing/wheel hub unit	187
7.4	Removing and installing trailing arm with mounting bracket	190
7.5	Repairing trailing arm	194
8	Assembly overview: shock absorber, coil spring (front-wheel drive)	197
8.1	Removing and installing coil spring	197
8.2	Removing and installing shock absorbers	199
8.3	Repairing shock absorber	201
9	Assembly overview: anti-roll bar (front-wheel drive)	203
9.1	Removing and installing anti-roll bar	203
10	Repairing rear suspension (four-wheel drive)	206
10.1	Overview - rear axle	206
10.2	Rear axle in unladen position	208
11	Assembly overview: subframe, final drive (four-wheel drive)	210
11.1	Removing and installing rear axle	210
11.2	Repairing subframe, up to Week 21/2012	215
11.3	Repairing subframe, as of Week 22/2012	223
12	Assembly overview: transverse link, track rod (four-wheel drive)	237
12.1	Overview - rear left vehicle level sender G76	240
12.2	Removing and installing rear left vehicle level sender G76	240
12.3	Removing and installing upper transverse link	241
12.4	Removing and installing lower transverse link	243
12.5	Removing and installing track rod	245



13	Assembly overview: wheel bearing housing, trailing arm (four-wheel drive)	249
13.1	Removing and installing wheel bearing housing	251
13.2	Renewing bonded rubber bush for wheel bearing housing	254
13.3	Removing and installing wheel bearing/wheel hub unit	257
13.4	Removing and installing trailing arm with mounting bracket	258
13.5	Repairing trailing arm	261
14	Assembly overview: shock absorber, coil spring (four-wheel drive)	264
14.1	Removing and installing coil spring	264
14.2	Removing and installing shock absorbers	266
14.3	Repairing shock absorber	268
15	Assembly overview: anti-roll bar (four-wheel drive)	270
15.1	Removing and installing anti-roll bar	270
16	Assembly overview: drive shaft	273
16.1	Loosening and tightening twelve-point head bolt, with ribbing, securing drive shaft	274
16.2	Loosening and tightening twelve-point head bolt, without ribbing, securing drive shaft	276
16.3	Removing and installing drive shaft	277
16.4	Dismantling and assembling drive shaft	281
16.5	Checking inner constant velocity joint	285
43	Self-levelling suspension	287
1	Appraisal of accident vehicles	287
2	Components of adaptive chassis control DCC and fitting locations	288
2.1	Shock absorber damping adjustment button E387	289
2.2	Removing and installing front left body acceleration sender G341	289
2.3	Removing and installing front right body acceleration sender G342	290
2.4	Renewing bracket for front left/right body acceleration sender G341/G342	291
2.5	Assembly overview: front left/right vehicle level sender G78/G289 for adaptive chassis control DCC	293
2.6	Removing and installing front left/right vehicle level sender G78/G289	294
2.7	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	295
2.8	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, front-wheel drive	296
2.9	Assembly overview: rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	297
2.10	Removing and installing rear left vehicle level sender G76 for adaptive chassis control DCC, four-wheel drive	298
2.11	Removing and installing electronically controlled damping control unit J250	299
2.12	Basic setting of adaptive chassis control DCC	299
2.13	Cable routing left front axle	300
2.14	Cable routing right front axle	301
2.15	Cable routing rear axle	302
3	Assembly overview: suspension strut for adaptive chassis control DCC	303
3.1	Removing and installing suspension strut for adaptive chassis control DCC	305
4	Assembly overview: shock absorber for adaptive chassis control DCC (front-wheel drive)	313
4.1	Removing and installing rear body acceleration sender G343 (front-wheel drive)	314
4.2	Removing and installing shock absorber for adaptive chassis control DCC (front-wheel drive)	315
4.3	Repairing shock absorber for adaptive chassis control DCC (front-wheel drive)	317
5	Assembly overview: shock absorber for adaptive chassis control DCC (four-wheel drive)	320
5.1	Removing and installing rear body acceleration sender G343 (four-wheel drive)	321
5.2	Removing and installing shock absorber for adaptive chassis control DCC (four-wheel drive)	322
5.3	Repairing shock absorber for adaptive chassis control DCC (four-wheel drive)	324



44 - Wheels, tyres, vehicle geometry	327
1 Appraisal of accident vehicles	327
2 Torque settings for wheels	328
3 Vehicle alignment check	329
3.1 General information	329
3.2 Conditions for testing	331
3.3 Test preparations	331
3.4 Wheel alignment specifications	332
3.5 Overview - wheel alignment procedure	333
3.6 Correcting front axle camber	334
3.7 Adjusting camber on rear axle	336
3.8 Adjusting toe at rear axle	337
3.9 Adjusting front axle toe	338
3.10 Basic setting of steering angle sensor G85	339
3.11 Vehicle data sticker	339
4 Front camera for driver assist systems R242	340
4.1 Adjusting front camera for driver assistance system R242	340
48 - Steering	348
1 Appraisal of accident vehicles	348
2 General repair instructions	349
2.1 Steering rack	349
2.2 Gaskets and seals	349
2.3 Nuts and bolts	349
2.4 Electrical components	350
2.5 Guided Fault Finding, vehicle self-diagnosis and Test Instruments	350
3 Steering column and steering wheel	351
3.1 Assembly overview: steering column, left-hand drive	351
3.2 Assembly overview: steering column, right-hand drive	352
3.3 Removing and installing steering wheel	352
3.4 Removing and installing steering column	355
3.5 Basic setting for steering angle sensor G85 steering angle sender must be checked after the following repair work:	360
3.6 Handling and transporting steering column	360
3.7 Checking steering column for damage	362
3.8 Removing and installing mounting bracket, RHD	362
4 Electromechanical steering rack	364
4.1 Assembly overview - electromechanical steering rack, left-hand drive	364
4.2 Assembly overview - electromechanical steering rack, right-hand drive (Generation 2)	365
4.3 Assembly overview - electromechanical steering rack, right-hand drive (Generation 3)	368
4.4 Removing and installing steering rack, left-hand drive vehicle	369
4.5 Removing and installing steering rack, right-hand drive vehicle	378
5 Differentiating between 2nd and 3rd generation steering racks	388
6 Repairing electromechanical steering rack, left-hand drive vehicles	389
6.1 Assembly overview: electromechanical steering rack, LHD vehicle	389
6.2 Renewing bonded rubber bushes for power-assisted steering rack	390
6.3 Removing and installing boot	392
6.4 Checking play, security and boots of track rod ends	394
6.5 Removing and installing track rod	394
7 Repairing electromechanical steering rack, right-hand drive vehicles	398
7.1 Assembly overview: electromechanical steering rack, RHD vehicle	398
7.2 Removing and installing boot	399
7.3 Checking play, security and boots of track rod ends	401



7.4	Removing and installing track rod	401
-----	---	-----