



## Contents

<b>27 - Starter, current supply, CCS</b> .....	<b>1</b>
<b>1 Battery</b> .....	<b>1</b>
1.1 Types of battery .....	1
1.2 Warning notices and safety regulations .....	1
1.3 Battery terminal connection .....	1
<b>2 Checking battery</b> .....	<b>2</b>
<b>3 Charging battery</b> .....	<b>3</b>
<b>4 Disconnecting and reconnecting battery</b> .....	<b>4</b>
4.1 Assembly overview .....	4
4.2 Disconnecting battery .....	4
4.3 Reconnecting battery .....	5
<b>5 Removing and installing battery</b> .....	<b>7</b>
5.1 Assembly overview .....	7
5.2 Removing and installing battery .....	8
<b>6 Starter, vehicles with manual gearbox</b> .....	<b>13</b>
6.1 Checking starter B .....	13
6.2 Starter, vehicles with 1.4 l TSI engine and manual gearbox MQ500 .....	13
6.3 Starter, vehicles with 2.0 l TDI engine and manual gearbox MQ500 .....	16
6.4 Starter, vehicles with 2.0 l TSI engine and manual gearbox MQ500 .....	21
<b>7 Starter, vehicles with automatic gearbox</b> .....	<b>26</b>
7.1 Starter, vehicles with 2.0 l TDI engine and automatic gearbox AQ450 .....	26
7.2 Starter, vehicles with 2.0 l TSI engine and automatic gearbox AQ450 .....	30
<b>8 Starter, vehicles with dual clutch gearbox (DSG)</b> .....	<b>36</b>
8.1 Starter, vehicles with 2.0 l TDI engine and dual clutch gearbox DQ500-7F .....	36
<b>9 Alternator</b> .....	<b>40</b>
9.1 Securing B+ (battery positive) wire to alternator .....	40
9.2 Checking poly V-belt .....	40
9.3 Checking alternator C .....	41
9.4 Alternator, 1.4 l TSI engine .....	41
9.5 Alternator, 2.0 l TSI engine .....	46
9.6 Alternator, 2.0 l TDI engine .....	50
9.7 Removing and installing poly V-belt pulley on alternator .....	54
9.8 Voltage regulator for alternator .....	59
<b>10 Cruise control system (CCS)</b> .....	<b>62</b>
<b>11 Start/stop system</b> .....	<b>63</b>
11.1 General description .....	63
11.2 Start/stop operation switch E693 .....	64
11.3 Voltage stabiliser J532 .....	64
<b>90 - Gauges, instruments</b> .....	<b>66</b>
<b>1 Dash panel insert</b> .....	<b>66</b>
1.1 General description .....	66
1.2 Renewing dash panel insert .....	66
1.3 Coding dash panel insert .....	67
1.4 Removing and installing dash panel insert .....	67
1.5 Description of back of dash panel insert .....	68
1.6 Pin assignment of connections on dash panel insert .....	68
1.7 Warning lamp symbols in dash panel insert .....	68
<b>2 Service interval display</b> .....	<b>70</b>
2.1 Resetting service interval display .....	70



<b>92 - Windscreen wash/wipe system</b>	<b>71</b>
<b>1 Windscreen wiper system</b>	<b>71</b>
1.1 General description	71
1.2 Assembly overview - windscreen wiper system	71
1.3 Deactivating APP function of wiper motor	72
1.4 Removing and installing windscreen wiper system	73
1.5 Removing and installing wiper arms	77
1.6 Adjusting wiper blade park position	78
1.7 Removing and installing joint-free wipers	79
1.8 Rain and light sensor G397	80
<b>2 Windscreen washer system</b>	<b>84</b>
2.1 General description	84
2.2 Assembly overview - windscreen washer system	84
2.3 Removing and installing washer fluid reservoir	86
2.4 Removing and installing windscreen and rear window washer pump V59	88
2.5 Removing and installing windscreen washer fluid level sender G33	88
2.6 Removing and installing windscreen washer system spray jets	89
2.7 Adjusting windscreen washer system spray jets	89
<b>3 Rear window wiper system</b>	<b>90</b>
3.1 General description	90
3.2 Assembly overview - rear window wiper system	90
3.3 Removing and installing rear window wiper system	91
3.4 Adjusting rear window wiper park position	93
3.5 Removing and installing joint-free wiper	93
<b>4 Rear window washer system</b>	<b>95</b>
4.1 General description	95
4.2 Assembly overview - rear window washer system	95
4.3 Renewing spray jet	96
4.4 Adjusting spray jet for rear window washer system	96
<b>5 Headlight washer system</b>	<b>97</b>
5.1 General description	97
5.2 Assembly overview - headlight washer system	97
5.3 Removing and installing headlight washer system pump V11	98
5.4 Removing and installing spray jet assembly	99
5.5 Removing and installing spray jet pop-up cylinders	100
5.6 Adjusting headlight washer system spray jets	101
5.7 Bleeding headlight washer system	101
<b>6 Washer fluid line hose couplings</b>	<b>102</b>
<b>7 Hose repair</b>	<b>103</b>
<b>94 - Lights, bulbs, switches - exterior</b>	<b>104</b>
<b>1 Electrical components</b>	<b>104</b>
<b>2 Headlight with halogen bulbs</b>	<b>105</b>
2.1 General description	105
2.2 Assembly overview - headlights with halogen bulbs	105
2.3 Removing and installing headlights with halogen bulbs	107
2.4 Adjusting headlight installation position	109
2.5 Renewing headlight bulbs	110
2.6 Removing and installing headlight range control motor	115
2.7 Repairing headlight retaining tabs (halogen headlight)	115
2.8 Converting headlights for use when driving on the left or right	118
2.9 Adjusting headlights	120
<b>3 Headlights with gas discharge bulbs and cornering lights</b>	<b>121</b>



3.1	General description	121
3.2	Assembly overview - headlights with gas discharge bulbs and cornering lights	121
3.3	Removing and installing gas discharge headlight with cornering light	123
3.4	Adjusting headlight installation position	125
3.5	Renewing headlight bulbs	125
3.6	Removing and installing headlight range control motor	132
3.7	Gas discharge bulb control unit	132
3.8	Power output module for headlight	133
3.9	Cornering light and headlight range control unit J745	134
3.10	Vehicle level sender	135
3.11	Repairing headlight retaining tabs	137
3.12	Converting headlights for use when driving on the left or right	137
3.13	Adjusting headlights	138
3.14	Operation and safety notes for gas discharge bulbs	139
<b>4</b>	<b>Fog lights</b>	<b>142</b>
4.1	General description	142
4.2	Assembly overview - fog lights	142
4.3	Removing and installing fog light	143
4.4	Removing and installing fog light bulb	144
4.5	Adjusting fog lights	145
<b>5</b>	<b>Turn signal repeater and entry light in exterior mirror</b>	<b>146</b>
5.1	General description	146
5.2	Removing and installing turn signal repeater bulb	146
5.3	Removing and installing entry light in exterior mirror	147
<b>6</b>	<b>Tail lights (tail light cluster)</b>	<b>148</b>
6.1	Tail lights (tail light cluster) in side panel	148
6.2	Tail lights (tail light cluster) in rear lid	153
<b>7</b>	<b>Additional brake light</b>	<b>159</b>
7.1	Removing and installing additional brake light M25	159
<b>8</b>	<b>Number plate light</b>	<b>162</b>
8.1	Removing and installing number plate light X	162
8.2	Replacing number plate light bulb	163
<b>9</b>	<b>Reversing light in bumper cover</b>	<b>164</b>
9.1	Removing and installing left reversing light X1 and right reversing light X2	164
9.2	Renewing left reversing light bulb M16 or right reversing light bulb M17	164
<b>10</b>	<b>Side marker lights</b>	<b>165</b>
10.1	Front side marker light, vehicles for USA and Canada	165
10.2	Rear side marker light, vehicles for USA and Canada	167
<b>11</b>	<b>Steering column switch, vehicles up to 05/2010</b>	<b>168</b>
11.1	General description	168
11.2	Assembly overview - steering column switch	169
11.3	Removing and installing steering column switch	171
11.4	Steering column electronics control unit J527	183
11.5	Steering angle sender G85	183
<b>12</b>	<b>Steering column switch, vehicles from 06/2010</b>	<b>184</b>
12.1	General description	184
12.2	Assembly overview - steering column switch	185
12.3	Removal and installation sequence of components of steering column switch	187
12.4	Steering column electronics control unit J527	188
12.5	Steering column combination switch E595	194
12.6	Steering column switch base	196
<b>13</b>	<b>Steering column switch, vehicles from 06/2010 with entry and start authorisation</b>	<b>203</b>
13.1	General description	203
13.2	Assembly overview - steering column switch	204



13.3	Removal and installation sequence of components of steering column switch	206
13.4	Steering column electronics control unit J527	207
13.5	Steering column combination switch E595	213
13.6	Steering column switch base	216
13.7	Electronic steering column lock control unit J764	223
<b>14</b>	<b>Ignition/starter switch and lock cylinder, vehicles up to 05/2010</b>	<b>226</b>
14.1	Removing and installing steering lock housing	226
14.2	Removing and installing lock cylinder	227
14.3	Removing and installing ignition/starter switch	230
14.4	Ignition key withdrawal lock solenoid N376	231
<b>15</b>	<b>Ignition/starter switch and lock cylinder, vehicles up to 06/2010</b>	<b>233</b>
15.1	Removing and installing steering lock housing	233
15.2	Removing and installing lock cylinder	234
15.3	Removing and installing ignition/starter switch	237
15.4	Removing and installing ignition/starter switch, vehicles with Keyless Access	239
15.5	Removing and installing ignition key withdrawal lock solenoid N376	239
<b>16</b>	<b>Entry and start authorisation (KESY)</b>	<b>241</b>
16.1	General description	241
16.2	Assembly overview - entry and start authorisation	241
16.3	Entry and start authorisation control unit J518	243
16.4	Entry and start authorisation aerials and sensors	246
16.5	Checking entry and start authorisation aerials and sensors	248
16.6	Starter button E378	251
<b>17</b>	<b>Rear parking aid (PDC)</b>	<b>253</b>
17.1	General description	253
17.2	Assembly overview - rear parking aid (PDC)	253
17.3	Rear parking aid control unit	254
17.4	Removing and installing rear parking aid sender	255
17.5	Rear parking aid warning buzzer H15	257
<b>18</b>	<b>Front parking aid (PDC)</b>	<b>258</b>
18.1	General description	258
18.2	Assembly overview - front parking aid (PDC)	258
18.3	Control unit for front parking aid	258
18.4	Front parking aid senders	258
18.5	Front parking aid button E266	258
18.6	Front parking aid warning buzzer H22	259
<b>19</b>	<b>Park assist steering (PAS)</b>	<b>260</b>
19.1	General description	260
19.2	Assembly overview of park assist steering	261
19.3	Park assist steering control unit J791	263
19.4	Front parking aid sender and park assist steering sender	264
19.5	New park assist steering and front parking aid senders and sender retainers, in case of repair	266
19.6	Park assist steering button E581	266
19.7	Front parking aid warning buzzer H22	267
19.8	Rear parking aid warning buzzer H15 (vehicles with park assist steering)	267
<b>20</b>	<b>Reversing camera system</b>	<b>269</b>
20.1	General description	269
20.2	Assembly overview - reversing camera system	269
20.3	Removing and installing reversing camera	270
20.4	Reversing camera system control unit J772	270
20.5	Calibrating reversing camera system	271
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>277</b>
<b>1</b>	<b>Interior lights and switches</b>	<b>277</b>

---



1.1	Removing and installing interior monitoring deactivation switch E267	277
<b>2</b>	<b>Lights and switches in engine compartment</b>	<b>279</b>
2.1	Removing and installing bonnet contact switch F266	279
<b>3</b>	<b>Lights and switches in dash panel</b>	<b>280</b>
3.1	Removing and installing light switch E1	280
3.2	Removing and installing switch and instrument illumination regulator E20 and headlight range control regulator E102	280
3.3	Removing and installing glove compartment light W6	282
3.4	Removing and installing glove compartment light switch E26	283
3.5	Removing and installing warning lamp for airbag deactivated on front passenger side K145	284
3.6	Removing and installing hazard warning light switch E3	285
3.7	Removing and installing left footwell light W9 and right footwell light W10	286
3.8	Removing and installing key-operated switch to deactivate front passenger side airbag E224	287
<b>4</b>	<b>Lights and switches in front doors</b>	<b>289</b>
4.1	Removing and installing driver side switch element	289
4.2	Removing and installing driver side interior locking button for central locking system E308	290
4.3	Removing and installing driver side door interior handle illumination bulb L146 and front passenger side door interior handle illumination bulb L147	291
4.4	Components - front door locks	292
<b>5</b>	<b>Lights and switches in rear doors</b>	<b>294</b>
5.1	Removing and installing rear left window regulator switch E52 or rear right window regulator switch E54	294
5.2	Components - rear door locks	294
<b>6</b>	<b>Lights and switches in luggage compartment</b>	<b>295</b>
6.1	Removing and installing luggage compartment light W3	295
6.2	Renewing luggage compartment light bulb	296
6.3	Removing and installing rear lid handle release button E234	296
<b>7</b>	<b>Lights and switches in roof trim</b>	<b>297</b>
7.1	Front interior and reading lights	297
7.2	Removing and installing sun blind and sunroof button E437	303
7.3	Rear interior and reading lights	303
7.4	Removing and installing front passenger side illuminated vanity mirror W14 and driver side illuminated vanity mirror W20	305
7.5	Right interior light W17	307
<b>8</b>	<b>Lights and switches in centre console</b>	<b>309</b>
8.1	Removing and installing buttons in centre console storage compartment	309
8.2	Electromechanical parking brake button and auto-hold button	309
8.3	Removing and installing AC/DC converter with socket, 12 V - 230 V U13	311
<b>9</b>	<b>Horn</b>	<b>314</b>
9.1	Removing and installing treble horn H2 and bass horn H7	314
9.2	Checking treble horn H2 and bass horn H7	315
9.3	Horn plate H	315
<b>10</b>	<b>Immobiliser</b>	<b>316</b>
10.1	General description	316
10.2	Immobiliser control unit J362	316
10.3	Ignition key	317
10.4	New identity on renewing all components	317
<b>11</b>	<b>Anti-theft alarm (ATA)</b>	<b>318</b>
11.1	General description	318
11.2	Activating and deactivating anti-theft alarm	318
11.3	Removing and installing interior monitoring deactivation switch E267 and deactivation button for vehicle inclination sender E360	319
11.4	Removing and installing interior monitoring sensor and vehicle inclination sender	319



11.5	Central locking and anti-theft alarm system aerial R47	320
11.6	Alarm horn H12	321
11.7	Reading and adapting anti-theft alarm (ATA)	322
<b>97 - Wiring</b>		<b>323</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>323</b>
<b>2</b>	<b>Fuse holder</b>	<b>324</b>
2.1	Removing and installing fuse holder	324
<b>3</b>	<b>Relay carriers</b>	<b>325</b>
3.1	Removing and installing dash panel relay carrier	325
3.2	Removing and installing relay carrier on onboard supply control unit	325
<b>4</b>	<b>Electronics boxes</b>	<b>328</b>
4.1	Electronics box on left side of engine compartment	328
<b>5</b>	<b>Control units</b>	<b>332</b>
5.1	Onboard supply control unit J519 , vehicles to 05/09	332
5.2	Onboard supply control unit J519 , vehicles from 06/09	334
5.3	Convenience system central control unit J393 , vehicles up to 05/2009	337
5.4	Data bus diagnostic interface J533 (gateway)	340
5.5	Trailer detector control unit J345	343
<b>6</b>	<b>Wiring harness and connector repairs</b>	<b>345</b>