



## Contents

<b>91 - Communication</b>	<b>1</b>
<b>1 Communication systems</b>	<b>1</b>
1.1 Fault finding	1
<b>2 Radio and radio-navigation systems in general</b>	<b>2</b>
2.1 Removing and installing radio and radio-navigation systems	2
2.2 Adapting radio components	5
2.3 Adapting navigation system components	5
2.4 Fault finding	5
<b>3 Radio system "RCD 210"</b>	<b>7</b>
3.1 General notes	7
3.2 Overview of radio system "RCD 210"	7
3.3 Overview of connectors on radio "RCD 210"	9
3.4 Anti-theft coding	10
<b>4</b>	<b>12</b>
4.1 General description	12
4.2 Overview of radio system "RCD 300"	13
4.3 Overview of connectors on radio "RCD 300"	14
4.4 Anti-theft coding	15
<b>5 Radio system RCD 310</b>	<b>17</b>
5.1 General notes	17
5.2 Overview of radio system "RCD 310"	17
5.3 Overview of connectors on radio "RCD 310"	19
5.4 Anti-theft coding	21
<b>6</b>	<b>24</b>
6.1 General description	24
6.2 Overview of radio system "RCD 500"	25
6.3 Overview of radio system "RCD 500"	25
6.4 Activating transport protection device of CD changer in "RCD 500"	26
6.5 Overview of connectors on radio "RCD 500"	27
6.6 Anti-theft coding	29
<b>7 Radio system RCD 510</b>	<b>31</b>
7.1 General notes	31
7.2 Overview of radio system "RCD 510"	32
7.3 Activating/deactivating transport lock for CD changer in "RCD 510"	33
7.4 Overview of connectors on radio "RCD 510"	34
7.5 Anti-theft coding	37
<b>8</b>	<b>41</b>
8.1 General description	41
8.2 Overview of radio system "Premium 7"	42
8.3 "Premium 7" connectors	43
8.4 Anti-theft coding	44
8.5 Adapting "Premium 7" components	46
<b>9</b>	<b>47</b>
9.1 General description	47
9.2 Overview of radio system "Premium 8"	48
9.3 "Premium 8" connectors	49
9.4 Activating and deactivating transport protection device	52
9.5 Anti-theft coding	52
9.6 Adapting "Premium 8" components	53
<b>10</b>	<b>55</b>
10.1 General description	55



10.2	Overview of radio navigation system "RNS 300" with monochrome display	56
10.3	Overview of connectors on radio navigation system "RNS 300"	58
<b>11</b>		<b>61</b>
11.1	General notes	61
11.2	Overview of radio navigation system "RNS 310"	62
11.3	Overview of connectors on radio navigation system "RNS 310"	64
11.4	Anti-theft coding	66
<b>12</b>		<b>70</b>
12.1	General notes	70
12.2	Features of radio navigation system "RNS 315"	70
12.3	Assembly overview of the radio/navigation system "RNS 315"	71
12.4	System overview of the radio navigation system "RNS 315"	73
12.5	Overview of connectors on radio navigation system "RNS 315"	74
12.6	Anti-theft coding	77
<b>13</b>		<b>81</b>
13.1	General notes	81
13.2	Overview of radio navigation system "RNS 510"	81
13.3	Overview of connectors on radio navigation system "RNS 510"	83
13.4	Anti-theft coding	86
<b>14</b>	<b>Composition Media and Discover Media radios</b>	<b>90</b>
14.1	Components of infotainment system, Composition Media and Discover Media versions	90
14.2	Assembly overview - Composition Media and Discover Media	92
<b>15</b>	<b>Sound system amplifier</b>	<b>94</b>
15.1	General description	94
15.2	Removing and installing amplifier	94
<b>16</b>	<b>CD changer</b>	<b>97</b>
16.1	Removing and installing CD changer	97
<b>17</b>	<b>Satellite digital radio tuner for vehicles for USA and Canada</b>	<b>99</b>
17.1	General notes	99
17.2	Fault finding	99
17.3	Removing and installing satellite digital radio tuner	99
17.4	Overview of multi-pin connectors on satellite digital radio receiver	100
<b>18</b>	<b>Interface for external multimedia devices R215</b>	<b>102</b>
18.1	General notes	102
18.2	Overview of interface for external multimedia devices R215	102
18.3	Removing and installing interface for external multimedia devices R215	103
<b>19</b>	<b>Removing and installing connection for external audio sources R199</b>	<b>105</b>
19.1	Pin assignment of AUX-IN socket	105
19.2	Removing and installing AUX-IN socket	105
<b>20</b>	<b>Loudspeaker systems</b>	<b>107</b>
20.1	Removing and installing front bass loudspeakers	107
20.2	Removing and installing rear bass loudspeakers (4-door)	108
20.3	Removing and installing rear bass loudspeakers (2-door)	109
20.4	Removing and installing front mid-range loudspeakers	110
20.5	Removing and installing front treble loudspeakers	111
20.6	Removing and installing rear treble loudspeakers (4-door)	112
20.7	Removing and installing rear treble loudspeakers (2-door)	114
20.8	Removing and installing rear treble loudspeakers	115
<b>21</b>	<b>Telephone systems</b>	<b>117</b>
21.1	General notes	117
21.2	Fault finding	117
21.3	Overview of telephone systems ►5/2013	117
21.4	Overview of telephone systems 5/2013 ►	118
21.5	Components of Composition Colour, Media and Discover Media	120



21.6	Removing and installing telephone holder	120
21.7	Removing and installing mobile telephone operating electronics control unit (transmitter and receiver)	122
21.8	Removing and installing telephone system microphone	123
<b>22</b>	<b>Aerial systems RCD 300, 500 RNS 300, Premium 7</b>	<b>124</b>
22.1	General notes	124
22.2	Overview of aerial system for radios without telephone/auxiliary heater telestart equipment	124
22.3	Overview of aerial system for radios / radio navigation systems (with telephone/auxiliary heater telestart equipment)	126
22.4	Overview of aerial system with digital satellite tuner, vehicles for USA and Canada	128
22.5	Removing and installing R108 / R109 in rear lid	129
22.6	Removing and installing frequency filter for amplitude modulation (AM)	129
22.7	Removing and installing frequency modulation (FM) frequency filter	130
22.8	Removing and installing aerial selection control unit	131
22.9	Roof aerial	133
22.10	Renewal of aerial wiring	134
<b>23</b>	<b>Aerial systems RCD 310, 510, RNS 310, 315, 510, Premium 8</b>	<b>135</b>
23.1	General notes	135
<b>24</b>	<b>Multifunction steering wheel</b>	<b>138</b>
24.1	Multifunction steering wheel ▶ 05.2010	138
24.2	Multifunction steering wheel 05.2010 ▶	140
<b>25</b>	<b>Compass system</b>	<b>143</b>
25.1	General description	143
25.2	Magnetic field sender for compass G197 / vehicle position recognition control unit J603	143
<b>26</b>	<b>Notes on operating mobile telephones and two-way radios</b>	<b>145</b>
26.1	General notes	145
26.2	Notes on performing repair work	145
26.3	Overview of battery, transmitter and receiver unit, fuse and wiring harness	147
26.4	Transmitting power and aerial fitting locations	148
<b>27</b>	<b>Suppression measures</b>	<b>149</b>
27.1	Implementation of suppression measures	149
<b>28</b>	<b>Mobile online services</b>	<b>150</b>
28.1	General notes	150
28.2	Overview of fitting locations - mobile online services	150
28.3	Removing and installing emergency call module control unit and communication unit J949	151
28.4	Removing and installing emergency button E276	153