



## Contents

|   |           |
|---|-----------|
| <b>68 - Interior equipment</b> .....  | <b>1</b>  |
| <b>1 Interior mirror</b> .....  | <b>1</b>  |
| 1.1 Assembly overview - manually operated anti-dazzle interior mirror .....   | 1         |
| 1.2 Removing and installing manually operated anti-dazzle interior mirror .....   | 2         |
| 1.3 Repairing retaining plate for manually operated anti-dazzle interior mirror .....                                       | 3         |
| 1.4 Assembly overview - automatic anti-dazzle interior mirror .....   | 5         |
| 1.5 Removing and installing automatic anti-dazzle interior mirror .....   | 6         |
| 1.6 Repairing retaining plate for automatic anti-dazzle interior mirror .....   | 9         |
| 1.7 Assembly overview - automatic anti-dazzle interior mirror, with main beam assist control unit J844 , 05/2011▶ .....     | 11        |
| 1.8 Removing and installing automatic anti-dazzle interior mirror, with main beam assist control unit J844 , 05/2011▶ ..... | 12        |
| 1.9 Repairing retaining plate for automatic anti-dazzle interior mirror, with main beam assist control unit J844 .....      | 14        |
| 1.10 Removing and installing interior mirror and cap of front camera for driver assist systems R242 , 05/2011▶ .....        | 15        |
| <b>2 Compartments, covers and trims</b> .....   | <b>17</b> |
| 2.1 Tools .....   | 17        |
| 2.2 Removing and installing foot well trim .....  | 17        |
| 2.3 Removing and installing centre console trim .....   | 18        |
| 2.4 Removing and installing cover for centre console .....  | 19        |
| 2.5 Removing and installing centre console without armrest .....  | 22        |
| 2.6 Removing and installing centre console with armrest .....   | 24        |
| 2.7 Removing and installing centre armrest .....  | 27        |
| 2.8 Removing and installing lower part of centre armrest .....  | 28        |
| 2.9 Removing and installing centre console securing bracket .....   | 29        |
| 2.10 Renewing rear drinks holder .....  | 32        |
| 2.11 Repairing rear drinks holder .....   | 33        |
| 2.12 Renewing front drink holder, vehicles without centre armrest .....   | 36        |
| 2.13 Renewing ashtray or compartment housing .....  | 39        |
| 2.14 Removing and installing dash panel centre trim .....   | 39        |
| 2.15 Removing and installing glove compartment .....  | 43        |
| 2.16 Removing and installing glove compartment lock cylinder .....  | 45        |
| 2.17 Removing and installing dash panel end trims .....   | 46        |
| 2.18 Removing and installing steering column trim .....   | 47        |
| 2.19 Removing and installing heater and air conditioner control panel trim .....  | 48        |
| 2.20 Removing and installing left trim panel on driver side .....   | 49        |
| 2.21 Removing and installing dash panel lower trim .....  | 50        |
| 2.22 Removing and installing foot rest cover .....  | 53        |
| 2.23 Removing and installing roof console .....   | 54        |
| 2.24 Removing and installing sun visors .....   | 55        |
| <b>3 Sill panel mouldings</b> .....   | <b>58</b> |
| 3.1 Tools .....   | 58        |
| 3.2 Removing and installing front sill panel mouldings .....  | 58        |
| 3.3 Removing and installing sill panel mouldings at rear .....  | 58        |
| 3.4 Removing and installing rear wheel housing trim (without rear side airbag) .....  | 59        |
| 3.5 Removing and installing rear wheel housing trim (with rear side airbag) .....   | 60        |
| <b>4 Grab handles</b> .....   | <b>63</b> |
| 4.1 Tools .....   | 63        |
| 4.2 Removing and installing roof grab handles .....   | 63        |
| <b>69 - Passenger protection</b> .....  | <b>65</b> |
| <b>1 Seat belts</b> .....   | <b>65</b> |



|           |  |            |
|-----------|--|------------|
| 1.1       | Tools  | 65         |
| 1.2       | Safety regulations for belt tensioners   | 65         |
| 1.3       | Disposal of belt tensioner units   | 66         |
| 1.4       | Removing and installing front seat belts   | 66         |
| 1.5       | Tiguan 2012► Removing and installing front seat belts (vehicles for USA and Canada)                            | 67         |
| 1.6       | Removing and installing front belt height adjuster   | 70         |
| 1.7       | Removing and installing front belt buckle  | 71         |
| 1.8       | Removing and installing outer rear seat belts (vehicles without rear side airbag)                              | 72         |
| 1.9       | Removing and installing outer rear seat belts (vehicles with rear side airbag)                                 | 72         |
| 1.10      | Removing and installing middle rear 3-point seat belt  | 73         |
| 1.11      | Removing and installing rear belt buckles  | 75         |
| <b>2</b>  | <b>Inspecting seat belts</b>   | <b>76</b>  |
| 2.1       | Points to check  | 76         |
| <b>3</b>  | <b>Checking child seat anchors (ISOFIX) after an accident</b>  | <b>79</b>  |
| 3.1       | Points to check  | 79         |
| <b>4</b>  | <b>Airbag</b>  | <b>80</b>  |
| 4.1       | Tools  | 80         |
| 4.2       | Safety precautions when working on airbag  | 80         |
| 4.3       | Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident           | 82         |
| 4.4       | Removing and installing airbag control unit J234   | 84         |
| 4.5       | Removing and installing airbag unit on driver side ►05.2011  | 86         |
| 4.6       | Removing and installing airbag unit on driver side 06.2011►  | 90         |
| 4.7       | Removing and installing return spring with slip ring   | 94         |
| 4.8       | Removing and installing front passenger airbag unit  | 94         |
| 4.9       | Removing and installing side airbags on driver and front passenger sides                                       | 99         |
| 4.10      | Removing and installing rear side airbag   | 100        |
| 4.11      | Removing and installing curtain airbag on driver/front passenger sides   | 102        |
| 4.12      | Removing and installing Seat occupied sensor, front passenger side G128  | 114        |
| <b>5</b>  | <b>Seat occupancy recognition system for front passenger airbag deactivation</b>                               | <b>119</b> |
| 5.1       | Tools  | 119        |
| 5.2       | Safety precautions for when working on seat occupied recognition   | 119        |
| 5.3       | Procedure for seat belt tensioner after an accident and /or triggering of airbag                               | 120        |
| 5.4       | Importers reporting obligation   | 120        |
| 5.5       | Assembly overview - seat occupied recognition  | 121        |
| 5.6       | Removing and installing seat occupied recognition  | 123        |
| 5.7       | Removing and installing seat position sensor   | 126        |
| <b>6</b>  | <b>Crash sensors</b>   | <b>128</b> |
| 6.1       | Tools  | 128        |
| 6.2       | Removing and installing front airbag crash sensor for driver side G283 (USA and Canada vehicles only)          | 128        |
| 6.3       | Removing and installing front airbag crash sensor for front passenger side G284 (USA and Canada vehicles only) | 130        |
| 6.4       | Removing and installing side airbag crash sensor, driver side G179   | 130        |
| 6.5       | Removing and installing side airbag crash sensor, front passenger side G180                                    | 133        |
| 6.6       | Removing and installing rear side airbag crash sensor, driver side G256  | 133        |
| 6.7       | Removing and installing rear side-airbag crash sensor, front passenger side G257                               | 134        |
| <b>70</b> | <b>Trim, insulation</b>  | <b>135</b> |
| <b>1</b>  | <b>Dash panel</b>  | <b>135</b> |
| 1.1       | Tools  | 135        |
| 1.2       | Removing and installing dash panel   | 135        |
| 1.3       | Removing and installing assembly carrier, left-hand drive vehicle  | 143        |
| 1.4       | Aligning dash panel in vehicle   | 151        |
| <b>2</b>  | <b>Door trims</b>  | <b>156</b> |



|           |   |            |
|-----------|---|------------|
| 2.1       | Tools .....   | 156        |
| 2.2       | Removing and installing front door trim .....   | 156        |
| 2.3       | Removing and installing rear door trim .....  | 161        |
| 2.4       | Removing and installing door trim cover .....   | 166        |
| <b>3</b>  | <b>Pillar trims .....</b>   | <b>168</b> |
| 3.1       | Tools .....   | 168        |
| 3.2       | Removing and installing upper trim for A-pillar .....   | 168        |
| 3.3       | Removing and installing lower A-pillar trim, driver side .....                                | 170        |
| 3.4       | Removing and installing lower trim for A-pillar trim on front passenger side .....            | 171        |
| 3.5       | Releasing and securing upper B-pillar trim from/in mountings .....                            | 172        |
| 3.6       | Removing and installing upper B-pillar trim .....   | 174        |
| 3.7       | Removing and installing lower trim for B-pillar .....   | 175        |
| 3.8       | Removing and installing C-pillar trim .....   | 176        |
| <b>4</b>  | <b>Rear lid trim .....</b>  | <b>179</b> |
| 4.1       | Removing and installing upper rear lid window trim .....                                      | 179        |
| 4.2       | Removing and installing rear lid window side trim panel .....                                 | 180        |
| 4.3       | Removing and installing rear lid trim .....   | 181        |
| <b>5</b>  | <b>Luggage compartment trims .....</b>  | <b>182</b> |
| 5.1       | Tools .....   | 182        |
| 5.2       | Removing and installing lock carrier cover .....  | 182        |
| 5.3       | Removing and installing luggage compartment side trim panel .....                             | 183        |
| <b>6</b>  | <b>Roof trims .....</b>   | <b>186</b> |
| 6.1       | Tools .....   | 186        |
| 6.2       | Removing and installing roof end strip .....  | 187        |
| 6.3       | Removing and installing moulded headlining .....  | 188        |
| 6.4       | Making cut-outs for "vanity mirror light" and "net partition trim" in moulded headliner ..... | 191        |
| 6.5       | Removing and installing roof insulation/reinforcement .....                                   | 191        |
| <b>72</b> | <b>- Seat frames .....</b>  | <b>195</b> |
| <b>1</b>  | <b>Front seats, general .....</b>   | <b>195</b> |
| 1.1       | Tools .....   | 195        |
| 1.2       | Removing and installing front seat .....  | 197        |
| 1.3       | Removing and installing trim on tunnel side .....   | 201        |
| 1.4       | Removing and installing backrest adjustment wheel .....                                       | 202        |
| 1.5       | Removing and installing drawer mounting .....   | 203        |
| 1.6       | Removing and installing heated front seats control unit J774 .....                            | 204        |
| 1.7       | Removing and installing lumbar adjustment lever .....   | 205        |
| 1.8       | Removing and installing backrest folding table .....  | 206        |
| 1.9       | Removing and installing head restraint, 05/11► .....  | 206        |
| 1.10      | Removing head restraint guides .....  | 207        |
| 1.11      | Removing and installing backrest .....  | 209        |
| <b>2</b>  | <b>Front seats with manual height adjustment .....</b>  | <b>212</b> |
| 2.1       | Tools .....   | 212        |
| 2.2       | Removing and installing trim on sill side .....   | 213        |
| 2.3       | Removing and installing trim bracket on sill side .....                                       | 214        |
| 2.4       | Removing and installing height adjustment lever .....   | 215        |
| 2.5       | Removing and installing height adjustment element .....                                       | 216        |
| 2.6       | Removing and installing lumbar support (2-way, manual) .....                                  | 216        |
| <b>3</b>  | <b>Front passenger seat without height adjustment .....</b>                                   | <b>218</b> |
| 3.1       | Tools .....   | 218        |
| 3.2       | Removing and installing trim on sill side .....   | 219        |
| <b>4</b>  | <b>Front passenger seat with through-loading function .....</b>                               | <b>221</b> |
| 4.1       | Removing and installing trim on sill side .....   | 221        |
| 4.2       | Removing and installing trim bracket on sill side .....                                       | 223        |
| 4.3       | Removing and installing height adjustment lever .....   | 224        |



|           |  |            |
|-----------|--|------------|
| 4.4       | Removing and installing height adjustment element                                      | 225        |
| 4.5       | Removing and installing lumbar support (2-way, manual)                                 | 225        |
| 4.6       | Removing and installing folding backrest release unit                                  | 226        |
| <b>5</b>  | <b>Driver seat, electrically adjustable</b>  | <b>229</b> |
| 5.1       | Tools  | 229        |
| 5.2       | Removing and installing trim on sill side  | 230        |
| 5.3       | Removing and installing switches   | 230        |
| 5.4       | Removing and installing trim bracket on sill side                                      | 231        |
| 5.5       | Removing and installing seat longitudinal adjustment                                   | 232        |
| 5.6       | Removing and installing backrest adjustment drive                                      | 236        |
| 5.7       | Removing and installing inclination adjustment drive                                   | 239        |
| 5.8       | Removing and installing height adjustment drive  | 242        |
| 5.9       | Removing and installing lumbar support (4-way, electric)                               | 242        |
| <b>6</b>  | <b>Rear seats</b>  | <b>245</b> |
| 6.1       | Tools  | 245        |
| 6.2       | Removing and installing rear seat  | 245        |
| 6.3       | Removing and installing seat cushions  | 247        |
| 6.4       | Removing and installing bench seat backrest adjustment trims                           | 248        |
| 6.5       | Removing and installing control lever for bench seat longitudinal adjustment           | 249        |
| 6.6       | Removing and installing seat rails, rear seat  | 251        |
| <b>74</b> | <b>Seat - padding, covers</b>  | <b>257</b> |
| <b>1</b>  | <b>Front seat covers and padding</b>   | <b>257</b> |
| 1.1       | Tools  | 257        |
| 1.2       | Removing and installing front seat cushion cover and padding                           | 258        |
| 1.3       | Removing and installing front seat backrest cover and padding                          | 261        |
| 1.4       | Assembly overview - seat heating element   | 264        |
| 1.5       | Assembly overview - backrest heater element  | 265        |
| 1.6       | Removing and installing seat heating element   | 266        |
| 1.7       | Removing and installing backrest heating element                                       | 267        |
| <b>2</b>  | <b>Rear seat covers and padding</b>  | <b>268</b> |
| 2.1       | Tools  | 268        |
| 2.2       | Removing and installing bench seat cover and padding                                   | 268        |
| 2.3       | Removing and installing backrest cover and padding                                     | 270        |
| 2.4       | Removing and installing through loading unit with centre armrest                       | 273        |
| 2.5       | Removing and installing cover and padding of through-loading unit with centre arm rest | 274        |