



Contents

50 - Body - front	1
1 Lock carrier	1
1.1 Tools	1
1.2 Assembly overview - lock carrier	2
1.3 Service position	3
1.4 Removing and installing lock carrier with attachments	4
1.5 Assembly overview - retaining bracket for bumper bracket	6
2 Wings	8
2.1 Tools	8
2.2 Assembly overview - front wing	8
2.3 Removing and installing wing	9
2.4 Removing and installing wing bracket	11
2.5 Wing end plate	12
3 Noise insulation	13
3.1 Tools	13
3.2 Assembly overview - noise insulation (long version)	13
3.3 Assembly overview - noise insulation (short version)	15
4 Skid plate	16
5 Underbody cladding	17
5.1 Tools	17
5.2 Assembly overview - underbody cladding	17
6 Bulkhead	19
6.1 Tools	19
6.2 Materials	20
6.3 Assembly overview - bulkhead	20
7 Cross piece	21
55 - Bonnet, rear lid	22
1 Bonnet (hood)	22
1.1 Tools	22
1.2 Assembly overview - bonnet	22
1.3 Removing and installing bonnet	24
1.4 Removing and installing bonnet hinge	25
1.5 Removing and installing insulation	26
1.6 Assembly overview - locking and release components for bonnet	27
1.7 Removing and installing arrester	27
1.8 Removing and installing bonnet lock	28
1.9 Detaching Bowden cable	31
1.10 Adjusting bonnet	32
1.11 Assembly overview - release lever	34
1.12 Removing and installing release lever	35
2 Rear lid	36
2.1 Tools	36
2.2 Assembly overview - rear lid	36
2.3 Removing and installing rear lid	37
2.4 Removing and installing rear lid hinge	39
2.5 Assembly overview - rear lid locking and unlocking parts	41
2.6 Removing and installing lid lock	42
2.7 Removing and installing striker pin	44
2.8 Removing and installing handle trim with release button	44
2.9 Adjusting rear lid	47
2.10 Assembly overview - gas strut	50



2.11	Removing and installing gas strut	51
2.12	Releasing gas from gas strut	51
2.13	Rear lid seal	51
2.14	Removing and installing rear lid seal	52
3	Tank flap unit	54
3.1	Assembly overview - tank flap unit and actuator	54
3.2	Removing and installing tank flap unit	55
3.3	Removing and installing actuator	57
57	- Front doors, door components, central locking	58
1	Rear door	58
1.1	Tools	58
1.2	Assembly overview - front door	59
1.3	Assembly overview - door hinges	60
1.4	Greasing new door hinges	62
1.5	Removing and installing door	62
1.6	Adjusting door	67
2	Door components	69
2.1	Tools	69
2.2	Assembly overview - assembly carrier	70
2.3	Removing and installing subframe	70
2.4	Assembly overview - door bag tether	76
2.5	Assembly overview - door handle and door lock	77
2.6	Removing and installing lock cylinder cover cap	78
2.7	Removing and installing lock cylinder	78
2.8	Removing and installing cover cap (without lock cylinder)	79
2.9	Removing and installing door handle	80
2.10	Removing and installing door lock	81
2.11	Removing and installing door handle bracket	86
2.12	Removing and installing retaining bracket	89
2.13	Inner door seal	90
2.14	Removing and installing inner door seal	91
2.15	Removing and installing outer door seal	92
2.16	Assembly overview - insulation	96
3	Central locking	97
3.1	Fitting location overview - central locking components	97
3.2	Key with remote control	99
58	- Rear doors, door components	105
1	Rear door	105
1.1	Tools	105
1.2	Assembly overview - rear door	106
1.3	Assembly overview - door hinges	107
1.4	Greasing new door hinges	109
1.5	Removing and installing door	109
1.6	Adjusting door	113
2	Door components	115
2.1	Tools	115
2.2	Assembly overview - assembly carrier	116
2.3	Removing and installing subframe	116
2.4	Assembly overview - door handle and door lock	122
2.5	Removing and installing cap	122
2.6	Removing and installing door handle	124
2.7	Removing and installing door lock	125
2.8	Removing and installing door handle bracket	129



2.9	Removing and installing retaining bracket	132
2.10	Door inner seals	133
2.11	Removing and installing inner door seal	134
2.12	Removing and installing outer door seal	135
2.13	Assembly overview - insulation	139
60	- Sunroof	140
1	Panoramic sliding sunroof	140
1.1	Tools	140
1.2	Function	140
1.3	Basic setting, panoramic sliding sunroof	141
1.4	Assembly overview - panoramic sliding roof	141
1.5	Removing and installing front glass panel	143
1.6	Removing and installing rear glass panel	145
1.7	Adjusting height of front and rear glass panel	146
1.8	Renewing seals for rear glass panel	147
1.9	Renewing outer seal	149
1.10	Renewing inner seal	150
1.11	Removing and installing wind deflector	151
1.12	Removing and installing wind deflector bracket	154
1.13	Removing and installing preselector for glass panel and sunroof sun blind	155
1.14	Removing and installing sliding sunroof motor	155
1.15	Removing and installing sun blind motor	158
1.16	Removing and installing sun blind	158
1.17	Assembly overview - assembly frame	165
1.18	Installing and removing motor plate and sun blind cable	166
1.19	Removing and installing assembly frame	169
1.20	Removing and installing rear part	171
1.21	Removing and installing front motor plate	174
1.22	Removing and installing tilting mechanism and front glass panel cable	176
1.23	Maintenance and care	179
1.24	Operating without current	180
1.25	Cleaning water drainage hoses	182
63	- Bumpers	185
1	Front bumper cover - difference between road version and off-road version	185
1.1	General information	185
2	Front bumper cover for road version up to 06.2011	186
2.1	Tools	186
2.2	Repairing front bumper cover	186
2.3	Installing brackets for parking aid system	186
2.4	Assembly overview - front bumper cover	191
2.5	Removing and installing front bumper cover	191
2.6	Front bumper cover add-on parts	193
2.7	Front bumper cover substructure parts	195
2.8	Assembly overview - front bumper carrier	196
3	Front bumper cover for road version as of 07.2011	197
3.1	Repairing front bumper cover	197
3.2	Installing brackets for parking aid system	197
3.3	Assembly overview - front bumper cover	201
3.4	Removing and installing front bumper cover	202
3.5	Front bumper cover add-on parts	203
3.6	Front bumper cover substructure parts	205
3.7	Assembly overview - front bumper carrier	206
4	Front bumper cover for off-road version up to 06.2011 (with 28° approach angle)	207



4.1	Tools	207
4.2	Repairing front bumper cover	207
4.3	Installing brackets for parking aid system	207
4.4	Assembly overview - front bumper cover	212
4.5	Removing and installing front bumper cover	212
4.6	Front bumper cover add-on parts	214
4.7	Front bumper cover substructure parts	216
4.8	Assembly overview - front bumper carrier	217
5	Front bumper cover for off-road version as of 07.2011 (with 28° approach angle)	218
5.1	Tools	218
5.2	Repairing front bumper cover	218
5.3	Installing brackets for parking aid system	218
5.4	Assembly overview - front bumper cover	223
5.5	Removing and installing front bumper cover	223
5.6	Front bumper cover add-on parts	225
5.7	Front bumper cover substructure parts	227
5.8	Assembly overview - front bumper carrier	228
6	Rear bumper cover	229
6.1	Tools	229
6.2	Repairing rear bumper cover	229
6.3	Assembly overview - rear bumper cover	229
6.4	Removing and installing rear bumper cover	230
6.5	Removing and installing bumper cover with towing bracket	232
6.6	Rear bumper cover add-on parts	233
6.7	Rear bumper cover substructure parts	236
6.8	Rear bumper carrier	237
7	Towing brackets	239
7.1	Assembly overview - towing bracket	239
7.2	Removing and installing towing bracket	240
7.3	Assembly overview - towing bracket (USA)	245
7.4	Removing and installing towing bracket (USA)	246
64	Glazing	248
1	Flush bonded windows	248
1.1	Tools	248
1.2	Materials	249
1.3	Repairing windscreen	250
1.4	Assembly overview - windscreen	250
1.5	Removing windscreen	251
1.6	Installing windscreen	252
1.7	Assembly overview - rear window	253
1.8	Removing undamaged rear window	254
1.9	Removing broken rear window	255
1.10	Installing rear window	255
1.11	Assembly overview - side window	255
1.12	Removing undamaged side window	256
1.13	Removing broken side window	258
1.14	Installing side window	258
1.15	Preparing old undamaged window for glazing	258
1.16	Preparing new window without precoating for glazing	258
1.17	Preparing body flange for glazing	259
1.18	Fitting instructions	260
1.19	Minimum curing period	263
1.20	Touching up paint damage	264
1.21	Cleaning in the event of dirt caused by adhesive sealing material	264



2	Front door window	265
2.1	Tools	265
2.2	Assembly overview	266
2.3	Removing and installing door window	267
2.4	Removing and installing window regulator motor	271
2.5	Installing	272
2.6	Removing and installing window channel	273
2.7	Removing and installing window channel trim strip	276
3	Rear door window	278
3.1	Tools	278
3.2	Assembly overview	279
3.3	Removing and installing door window	280
3.4	Removing and installing window regulator motor	285
3.5	Removing and installing window channel	285
3.6	Removing and installing window channel trim strip	287
3.7	Removing and installing fixed door window	288
66	Exterior equipment	290
1	Wheel housing liner	290
1.1	Tools	290
1.2	Assembly overview - front wheel housing liner	290
1.3	Removing and installing front wheel housing liner	291
1.4	Assembly overview - rear wheel housing liner	293
1.5	Removing and installing rear wheel housing liner	293
1.6	Removing and installing side member cover	296
2	Exterior mirror	298
2.1	Tools	298
2.2	Assembly overview - exterior mirror	298
2.3	Removing and installing mirror glass	299
2.4	Removing and installing housing frame	300
2.5	Removing and installing mirror housing	301
2.6	Removing and installing exterior mirror	301
3	Radiator grille	304
3.1	Tools	304
3.2	Removing and installing radiator grille ► 06.2011	304
3.3	Removing and installing radiator grille 07.2011 ►	307
4	Roof railing	309
4.1	Tools	309
4.2	Assembly overview - roof railing	309
4.3	Removing and installing roof railing	310
4.4	Removing and installing roof railing retaining bracket	312
5	Mouldings and trims	315
5.1	Tools	315
5.2	Plenum chamber cover	316
5.3	Water deflector	319
5.4	Protective side strips	322
5.5	Front and rear door covers	325
5.6	Removing and installing wheel arch trims	328
6	Special add-on parts	333
6.1	Safety requirements	333
6.2	Tools	333
6.3	Materials	334
6.4	Component overview - special add-on parts	335
6.5	Wheel arch trims	336
6.6	Removing and installing front wheel arch trim	338



6.7	Rear wheel arch trim	342
6.8	Front and rear door covers	345
6.9	Roof spoiler	349
6.10	Fitting instructions	352
6.11	Preparing add-on parts for bonding	352
6.12	Preparing new add-on part for bonding	353
6.13	Preparing body component for bonding	353
6.14	Fitting instructions	354
6.15	Minimum curing period	354
6.16	Touching up paint damage	354
6.17	Cleaning in the event of dirt caused by adhesive sealing material	354
6.18	Cleaning guidelines	355
7	Lettering	356
7.1	Installation instructions for lettering and emblems	356
7.2	Rear lettering - dimensions	356
7.3	Lettering on side - dimensions	357