



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Vehicle identification data</b>	<b>1</b>
1.1 Vehicle identification number	1
1.2 Identification plate	2
1.3 Vehicle data sticker	2
<b>2 Safety instructions</b>	<b>3</b>
<b>3 Moulded foam elements</b>	<b>4</b>
<b>4 Galvanized body parts</b>	<b>5</b>
<b>5 High- and higher-strength body panels</b>	<b>6</b>
<b>6 Hot-formed body panels</b>	<b>7</b>
<b>7 Laser welding</b>	<b>8</b>
<b>8 Body panel gaps/shut lines</b>	<b>9</b>
8.1 Body - front	9
8.2 Body - centre	10
8.3 Body - rear	11
<b>9 Body dimensions</b>	<b>12</b>
9.1 Body - front	12
9.2 Body - centre	14
9.3 Body - rear	20
9.4 Floor group - front	23
9.5 Floor group - centre	25
9.6 Floor group - rear	26
<b>10 Alignment bracket set</b>	<b>28</b>
10.1 Tools	28
10.2 Overview	28
<b>11 Portal gauge</b>	<b>30</b>
11.1 Tools	30
11.2 Overview front door aperture	30
11.3 Overview of middle door aperture	31
11.4 Overview of rear door aperture	32
<b>50 - Body - front</b>	<b>33</b>
<b>1 Renewing right console</b>	<b>33</b>
1.1 Tools	33
1.2 Removing	34
1.3 Installing	35
<b>2 Renewing left console</b>	<b>37</b>
2.1 Tools	37
2.2 Removing	37
2.3 Installing	39
<b>3 Renewing retaining bracket (for subframe)</b>	<b>42</b>
3.1 Removing	42
3.2 Installing	43
<b>4 Renewing bumper bracket</b>	<b>46</b>
4.1 Removing	47
4.2 Installing	48
<b>5 Renewing upper wheel housing longitudinal member</b>	<b>50</b>
5.1 Tools	50
5.2 Removing	51
5.3 Installing	54



<b>6</b>	<b>Renewing front wheel housing</b>	<b>60</b>
6.1	Tools	60
6.2	Removing	61
6.3	Installing	65
<b>7</b>	<b>Renewing front longitudinal member</b>	<b>68</b>
7.1	Tools	68
7.2	Removing	69
7.3	Installing	72
<b>8</b>	<b>Renewing front longitudinal member - part section</b>	<b>81</b>
8.1	Tools	81
8.2	Removing	82
8.3	Installing	85
<b>9</b>	<b>Repairing threads for securing subframe (suspension subframe)</b>	<b>91</b>
9.1	Tools	92
9.2	Contents of thread repair kit	92
9.3	Repairing thread	93
<b>10</b>	<b>Renewing suspension strut mounting</b>	<b>96</b>
10.1	Tools	97
10.2	Removing	98
10.3	Installing	99
<b>51 - Body - centre</b>		<b>109</b>
<b>1</b>	<b>Renewing roof - vehicles with no panorama tilting sunroof</b>	<b>109</b>
1.1	Tools	109
1.2	Removing	111
1.3	Installing	113
<b>2</b>	<b>Renewing roof, vehicles with panorama sliding sunroof</b>	<b>126</b>
2.1	Tools	126
2.2	Removing	128
2.3	Installing	130
<b>3</b>	<b>Renewing roof side member</b>	<b>143</b>
3.1	Tools	143
3.2	Removing	144
3.3	Installing	146
<b>4</b>	<b>Renewing front roof cross member</b>	<b>154</b>
4.1	Tools	154
4.2	Removing	155
4.3	Installing	156
<b>5</b>	<b>Renewing rear roof cross member</b>	<b>158</b>
5.1	Tools	158
5.2	Removing	159
5.3	Installing	160
<b>6</b>	<b>Renewing A-pillar</b>	<b>163</b>
6.1	Tools	163
6.2	Removing	164
6.3	Renewing wing retainer	167
6.4	Installing	171
<b>7</b>	<b>Renewing A-pillar reinforcement</b>	<b>178</b>
7.1	Tools	179
7.2	Removing	179
7.3	Installing	182
<b>8</b>	<b>Renewing B-pillar</b>	<b>187</b>
8.1	Tools	187
8.2	Removing	189



8.3	Installing	191
<b>9</b>	<b>Renewing inner B-pillar</b>	<b>198</b>
9.1	Tools	199
9.2	Removing	199
9.3	Installing	200
<b>10</b>	<b>Renewing B-pillar reinforcement</b>	<b>202</b>
10.1	Tools	203
10.2	Removing	204
10.3	Installing	206
<b>11</b>	<b>Renewing side member</b>	<b>216</b>
11.1	Tools	216
11.2	Removing	217
11.3	Installing	219
<b>12</b>	<b>Renewing front side member reinforcement</b>	<b>225</b>
12.1	Tools	225
12.2	Removing	226
12.3	Installing	227
<b>13</b>	<b>Renewing rear side member reinforcement</b>	<b>231</b>
13.1	Tools	231
13.2	Removing	232
13.3	Installing	233
<b>14</b>	<b>Renewing outer mounting for seat outer cross member</b>	<b>237</b>
14.1	Tools	238
14.2	Removing	239
14.3	Installing	240
<b>15</b>	<b>Renewing inner mounting for seat inner cross member</b>	<b>242</b>
15.1	Tools	243
15.2	Removing	243
15.3	Installing	244
<b>16</b>	<b>Renewing seat middle cross member</b>	<b>247</b>
16.1	Tools	247
16.2	Removing	248
16.3	Installing	249
<b>53 - Body - rear</b>		<b>252</b>
<b>1</b>	<b>Renewing cross panel</b>	<b>252</b>
1.1	Tools	252
1.2	Removing	253
1.3	Installing	255
<b>2</b>	<b>Renewing tail light mounting</b>	<b>258</b>
2.1	Tools	258
2.2	Removing	259
2.3	Installing	260
<b>3</b>	<b>Renewing lower corner part</b>	<b>263</b>
3.1	Tools	263
3.2	Removing	264
3.3	Installing	265
<b>4</b>	<b>Renewing cross panel member</b>	<b>268</b>
4.1	Tools	268
4.2	Removing	269
4.3	Installing	270
<b>5</b>	<b>Renewing rear luggage compartment floor</b>	<b>273</b>
5.1	Tools	274
5.2	Removing	274



5.3	Installing .....	276
<b>6</b>	<b>Renewing inner D-pillar .....</b>	<b>280</b>
6.1	Tools .....	281
6.2	Removing .....	282
6.3	Installing .....	284
<b>7</b>	<b>Renewing lower D-pillar reinforcement .....</b>	<b>288</b>
7.1	Tools .....	289
7.2	Removing .....	289
7.3	Installing .....	290
<b>8</b>	<b>Renewing rear longitudinal member - part section .....</b>	<b>293</b>
8.1	Tools .....	294
8.2	Removing .....	294
8.3	Installing .....	295
<b>9</b>	<b>Renewing side panel - part section .....</b>	<b>298</b>
9.1	Tools .....	298
9.2	Removing .....	299
9.3	Renewing lock reinforcement .....	302
9.4	Installing .....	306
<b>10</b>	<b>Renewing sealing channel - part section .....</b>	<b>312</b>
10.1	Tools .....	313
10.2	Removing .....	313
10.3	Installing .....	314
<b>11</b>	<b>Renewing outer wheel housing .....</b>	<b>317</b>
11.1	Tools .....	317
11.2	Removing .....	318
11.3	Installing .....	321