



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Notes on safety</b>	<b>1</b>
1.1 Safety precautions for working on vehicles with auxiliary/supplementary heater	1
1.2 Safety measures for when working on vehicles with a start-stop system	2
1.3 Safety precautions when working on the fuel system	2
1.4 Safety precautions when working on cooling system	3
1.5 Safety precautions when using testers and measuring instruments during a road test	3
1.6 Safety precautions when working in vicinity of high-voltage components	3
<b>2 General notes</b>	<b>5</b>
2.1 Starting conditions for auxiliary/supplementary heater	5
2.2 Notes for vehicles with a start-stop system	6
2.3 Rules for cleanliness for working on the auxiliary/supplementary heater and the fuel system	6
2.4 Identification plates	7
<b>3 Repair notes</b>	<b>10</b>
3.1 General repair instructions	10
<b>82 - Supplementary heating</b>	<b>11</b>
<b>1 Fitting location overview - auxiliary/supplementary heater</b>	<b>11</b>
1.1 Overview of fitting locations - auxiliary heater components	11
<b>2 Auxiliary/supplementary heater</b>	<b>13</b>
2.1 Fitting location overview - auxiliary/supplementary heater	13
2.2 Assembly overview - auxiliary heater, interior	15
2.3 Removing and installing auxiliary/supplementary heater	16
2.4 Dismantling and assembling auxiliary/supplementary heater	19
2.5 Removing and installing air intake silencer	21
2.6 Removing and installing circulation pump V55	21
2.7 Removing and installing silencer with bracket	23
2.8 Removing and installing exhaust system	24
2.9 Removing and installing auxiliary/supplementary heater bracket	24
2.10 Removing and installing cover	25
2.11 Removing and installing glow plug with flame monitoring Q8	25
2.12 Removing and installing temperature sensor G18 and overheating sensor G189	26
2.13 Removing and installing auxiliary heater control unit J364	26
2.14 Dismantling and assembling burner unit	26
<b>3 Coolant circuit with auxiliary heater</b>	<b>28</b>
3.1 Coolant hose schematic diagram	28
3.2 Bleeding coolant circuit of auxiliary/supplementary heater	30
3.3 Removing and installing coolant pipes for auxiliary/supplementary heater	31
<b>4 Fuel supply</b>	<b>34</b>
4.1 Fittings location overview - fuel supply	34
4.2 Testing quantity of fuel delivered	35
4.3 Removing and installing metering pump V54	36
<b>5 Regulation of auxiliary/supplementary heater</b>	<b>39</b>
5.1 Functional description	39
5.2 Supplementary heating mode	40
5.3 Auxiliary heater mode	40
5.4 Switching off auxiliary heater	41
<b>6 Other controlling and regulating components</b>	<b>42</b>
6.1 Removing and installing ambient temperature sensor G17	42
6.2 Removing and installing remote control receiver for auxiliary coolant heater R149	42
6.3 Functional description of remote control for auxiliary/supplementary heater	43