



## Contents

<b>00 - Technical data</b>	1
1 Identifying rear final drive	1
2 Identification codes, assembly allocation, capacities, Golf 2004 ►	2
3 Identification codes, assembly allocation, capacities, Passat 2006 ►	4
3.1 Passat with rear final drive 02D/0AV	4
3.2 Passat with rear final drive 01Z	5
3.3 Passat with rear final drive OBS	6
4 Identification codes, assembly allocation, capacities, Tiguan 2008 ►	7
5 Identification codes, assembly allocation, capacities, Passat CC, CC 2010 ►	9
6 Identification codes, assembly allocation, capacities, Golf 2009 ►	10
7 Identification codes, assembly allocation, capacities, Sharan 2011 ►	11
8 General repair instructions	12
8.1 Oil	12
8.2 Components	12
9 Genuine parts	15
<b>39 - Final drive - rear differential</b>	16
1 Propshaft - Golf 2004 ► up to calendar week 26/07	16
1.1 Assembly overview - propshaft	16
1.2 Removing and installing propshaft	18
1.3 Repairing propshaft	25
1.4 Removing and installing rear flexible coupling	32
2 Propshaft - Golf 2004 ► from calendar week 27/07 onwards	38
2.1 Assembly overview - propshaft	38
2.2 Removing and installing propshaft	40
3 Propshaft - Passat 2006 ► up to calendar week 26/07	45
3.1 Removing and installing propshaft	45
3.2 Removing and installing front propshaft tube with flexible coupling	51
3.3 Removing and installing rear flexible coupling	54
3.4 Repairing propshaft	59
3.5 Specified torques	66
4 Propshaft - Passat 2006 ► from calendar week 27/07 onwards	67
4.1 Assembly overview - propshaft	67
4.2 Removing and installing propshaft	69
5 Propshaft Tiguan 2008 ►	74
5.1 Assembly overview - propshaft	74
5.2 Removing and installing propshaft	76
5.3 Removing and installing rear flexible coupling	81
6 Propshaft - Passat CC, CC 2010 ► and Golf 2009 ►	86
6.1 Assembly overview - propshaft	86
6.2 Removing and installing propshaft	88
6.3 Removing and installing rear flexible coupling	92
7 Propshaft - Sharan 2011 ►	97
7.1 Assembly overview - propshaft	97
7.2 Removing and installing propshaft	99
7.3 Removing and installing rear flexible coupling	103
8 Removing and installing rear final drive, Golf 2004 ►	109
8.1 Removing rear final drive	109
8.2 Installing rear final drive	112
9 Removing and installing rear final drive, Passat 2006 ►	113



9.1	Removing rear final drive 02D or 0AV .....	113
9.2	Installing rear final drive 02D or 0AV .....	116
9.3	Removing rear final drive 01Z .....	119
9.4	Installing rear final drive 01Z .....	123
<b>10</b>	<b>Removing and installing rear final drive, Tiguan 2008 ► .....</b>	<b>126</b>
10.1	Removing .....	126
10.2	Installing .....	133
<b>11</b>	<b>Removing and installing rear final drive, Passat CC, CC 2010 ► .....</b>	<b>137</b>
11.1	Removing .....	137
11.2	Installing .....	143
<b>12</b>	<b>Removing and installing rear final drive, Golf 2009 ► .....</b>	<b>147</b>
12.1	Removing .....	147
12.2	Installing .....	152
<b>13</b>	<b>Removing and installing rear final drive, Sharan 2011 ► .....</b>	<b>157</b>
<b>14</b>	<b>Renewing bonded rubber bush on rear final drive .....</b>	<b>161</b>
14.1	Renewing bonded rubber bush on rear final drive, Passat with final drive 01Z, Tiguan 2008 ►, Passat CC, CC 2010 ► and Sharan 2011 ► .....	161
14.2	Assembly overview - bonded rubber bushes .....	161
14.3	Removing bonded rubber bush .....	162
14.4	Installing bonded rubber bush .....	165
14.5	Renewing bonded rubber bushes on rear final drive, Golf 2004 ► and Passat 2006 ► with final drive 02D/0AV and Golf 2009 ► .....	166
14.6	Assembly overview - bonded rubber bushes .....	166
14.7	Removing and installing bonded rubber bush .....	167
<b>15</b>	<b>Renewing flange shaft oil seals .....</b>	<b>174</b>
15.1	Removing flange shaft oil seal .....	174
15.2	Installing flange shaft oil seal .....	177
<b>16</b>	<b>Renewing propshaft flange oil seal on rear final drive (final drive installed) .....</b>	<b>179</b>
16.1	Removing .....	180
16.2	Installing .....	183
<b>17</b>	<b>Checking function of all-wheel drive coupling "generation II" .....</b>	<b>185</b>
17.1	Checking function of all-wheel drive coupling - vehicles with manual gearbox .....	185
17.2	Checking function of all-wheel drive coupling - vehicles with dual clutch gearbox .....	186
17.3	Checking function of all-wheel drive coupling - vehicles with automatic gearbox .....	188
<b>18</b>	<b>Checking function of all-wheel drive coupling "generation IV" .....</b>	<b>189</b>
18.1	Checking function .....	189
<b>19</b>	<b>Electrical/electronic components and fitting locations .....</b>	<b>190</b>
19.1	Electrical and electronic components and their locations, Golf 2004 ► .....	190
19.2	Electrical and electronic components and their locations, Passat 2006 ► .....	192
19.3	Electrical and electronic components and their fitting locations, Tiguan 2008 ►, Passat CC, CC 2010 ►, Sharan 2011 ► and Golf 2009 ►, Generation IV .....	194
19.4	Electrical and electronic components and their fitting locations, Tiguan 2008 ►, Sharan 2011 ►, Generation V .....	195
<b>20</b>	<b>Assembly overview - all-wheel drive control unit J492, Golf 2004 ► and Passat 2006 ► ..</b>	<b>197</b>
20.1	Removing and installing four-wheel drive control unit J492 .....	199
20.2	Removing and installing all-wheel drive coupling pump V181 .....	203
<b>21</b>	<b>Assembly overview - all-wheel drive control unit J492, Passat CC, CC 2010 ► and Golf 2009 ► ..</b>	<b>208</b>
21.1	Removing and installing four-wheel drive control unit J492 .....	210
21.2	Removing and installing all-wheel drive coupling pump V181 .....	213
<b>22</b>	<b>Assembly overview - all-wheel drive coupling, Golf 2004 ► and Passat 2006 ►, Passat CC, CC 2010 ► and Golf 2009 ► ..</b>	<b>217</b>
<b>23</b>	<b>Removing and installing all-wheel drive coupling, Golf 2004 ► and Passat 2006 ► ..</b>	<b>218</b>
23.1	Removing all-wheel drive coupling .....	218



23.2	Installing all-wheel drive coupling .....	219
24	<b>Removing and installing all-wheel drive coupling, Passat CC, CC 2010 ► and Golf 2009 ► .</b>	221
24.1	Removing all-wheel drive coupling .....	221
24.2	Installing all-wheel drive coupling .....	225
25	<b>Assembly overview - dismantling and assembling all-wheel drive coupling (generation II), Golf 2004 ► and Passat 2006 ► .</b>	227
25.1	Renewing grooved ball bearing for all-wheel drive coupling .....	230
26	<b>Dismantling and assembling all-wheel drive coupling, generation IV, assembly overview, Passat CC, CC 2010 ►and Golf 2009 ► .</b>	237
27	<b>Removing and installing oil filter for all-wheel drive coupling, Golf 2004 ► and Passat 2006 ► .</b>	240
27.1	Removing .....	240
27.2	Installing .....	240
28	<b>All-wheel drive coupling, Tiguan 2008 ►, Sharan 2011 ► .</b>	242
28.1	Checking function .....	242
28.2	Assembly overview – all-wheel drive coupling .....	242
28.3	Removing and installing all-wheel drive coupling pump V181 .....	247
28.4	Removing and installing all-wheel drive coupling .....	252
28.5	Removing and installing four-wheel drive control unit J492 .....	269
29	<b>Checking oil level or topping up oil in rear final drive, Golf 2004 ► and Passat 2006 ► .</b>	274
29.1	Specified torques .....	275
30	<b>Checking oil level or topping up oil in rear final drive, Tiguan 2008 ►, Passat CC, CC 2010 ►, Sharan 2011 ► and Golf 2009 ► .</b>	276
31	<b>Checking oil level or topping up oil in all-wheel drive coupling, generation II, Golf 2004 ► and Passat 2006 ► .</b>	278
31.1	Checking oil level in all-wheel drive coupling .....	278
31.2	Replenishing oil in all-wheel drive coupling .....	279
31.3	Draining and filling high performance fluid for all-wheel drive coupling .....	281
32	<b>Checking oil level or topping up oil in all-wheel drive coupling, generations IV + V, Tiguan 2008 ►, Passat CC, CC 2010 ►, Sharan 2011 ► and Golf 2009 ► .</b>	285
32.1	Checking oil level in all-wheel drive coupling .....	285
32.2	Replenishing oil in all-wheel drive coupling .....	286
32.3	Draining and filling high performance fluid for all-wheel drive coupling .....	287