



Contents

00 - Technical data	1
1 Safety precautions for vehicles with a start-stop system	1
2 Identification	2
2.1 Identification of manual gearbox	2
3 Code letters, allocation, ratios, capacities	3
3.1 Identification code, assembly allocation, ratios, capacities, Sharan front-wheel drive	3
3.2 Identification code, assembly allocation, ratios, capacities, Sharan all-wheel drive	4
3.3 Identification code, assembly allocation, ratios, capacities, Tiguan front-wheel drive	5
3.4 Identification code, assembly allocation, ratios, capacities, Tiguan all-wheel drive	7
3.5 Calculating overall gear ratio "i"	11
4 Overview - power transmission	12
4.1 Overview - power transmission, front-wheel drive	12
4.2 Overview - all-wheel drive power train	14
5 All-wheel drive - notes on performance test	16
6 General repair instructions	17
7 Electrical components	21
7.1 Overview of fitting locations - electrical components	21
30 - Clutch	23
1 Clutch operation	23
1.1 Overview - clutch actuation	23
1.2 Assembly overview - pedal cluster	25
1.3 Assembly overview - clutch hydraulics	27
1.4 Assembly overview - clutch release mechanism	31
1.5 Removing and installing clutch pedal	32
1.6 Removing and installing over-centre spring	37
1.7 Removing and installing mounting bracket	42
1.8 Removing and installing clutch master cylinder	49
1.9 Removing and installing clutch slave cylinder together with release bearing	51
1.10 Removing and installing line for clutch mechanism	53
1.11 Removing and installing bleeder	55
1.12 Bleeding clutch mechanism	56
1.13 Removing and installing clutch position sender G476	58
2 Clutch	65
2.1 Assembly overview - "Sachs" clutch	65
2.2 Removing and installing "Sachs" clutch	66
2.3 Assembly overview - "LuK" clutch	69
2.4 Removing and installing "LuK" clutch	71
34 - Controls, housing	75
1 Selector mechanism	75
1.1 Installation position - selector mechanism	75
1.2 Overview - selector mechanism	77
1.3 Assembly overview - gear knob and cover	78
1.4 Assembly overview - Gear lever and selector housing	80
1.5 Assembly overview - Selector cables	82
1.6 Removing and installing gear knob	86
1.7 Removing and installing selector mechanism	88
1.8 Dismantling and assembling selector mechanism	93
1.9 Adjusting selector mechanism	97
1.10 Checking selector mechanism	99
2 Distinguishing between different types of turbo diesel engines, Sharan	101



3		102
3.1	Removing gearbox	106
3.2	Install gearbox	114
3.3	Specified torques	121
4		122
4.1	Removing gearbox	125
4.2	Install gearbox	136
4.3	Specified torques for gearbox	145
5		146
5.1	Removing gearbox	149
5.2	Install gearbox	158
5.3	Specified torques	165
6		166
6.1	Removing gearbox	168
6.2	Install gearbox	179
6.3	Specified torques for gearbox	187
7	Removing and installing gearbox - Tiguan front-wheel drive	188
7.1	Removing gearbox	190
7.2	Install gearbox	198
7.3	Specified torques	205
8	Removing and installing gearbox - Tiguan all-wheel drive	206
8.1	Removing gearbox, Tiguan all-wheel drive with 1.4 l petrol engine	206
8.2	Installing gearbox, Tiguan all-wheel drive with 1.4 l petrol engine	213
8.3	Removing gearbox, Tiguan all-wheel drive with 2.0 l petrol engine	220
8.4	Installing gearbox, Tiguan all-wheel drive with 2.0 l petrol engine	230
8.5	Tiguan four-wheel drive with turbo diesel engine - removing gearbox	238
8.6	Tiguan four-wheel drive with turbo diesel engine - installing gearbox	248
9	Assembly mountings	258
9.1	Assembly overview - assembly mountings	258
10	Transporting gearbox	259
11	Gear oil	260
11.1	Check oil level in manual gearbox and top up	260
12	Removing and installing bevel box	261
12.1	Distinguishing between different types of bevel boxes	261
12.2	Removing bevel box, Tiguan with 1.4 l petrol engine	262
12.3	Installing bevel box, Tiguan with 1.4 l petrol engine	266
12.4	Removing bevel box, Tiguan with 2.0 l petrol engine	269
12.5	Installing bevel box, Tiguan with 2.0 l petrol engine	274
12.6	Removing bevel box - vehicles with turbo diesel engine, up to 05.10	277
12.7	Installing bevel box - vehicles with turbo diesel engine, up to 05.10	282
12.8	Removing bevel box, all vehicles with turbo diesel engine, from 06.10 (common rail, generation II)	286
12.9	Installing bevel box, all vehicles with turbo diesel engine, from 06.10 (common rail, generation II)	292
12.10	Removing bevel box, vehicles with turbo diesel engine, up to 05.15	295
12.11	Installing bevel box, vehicles with turbo diesel engine, from 05.15	301
13	Gear oil	306
13.1	Checking gear oil level	306
13.2	Draining and filling gear oil	309
14	Dismantling and assembling gearbox	318
14.1	Overview - gearbox, front-wheel drive	318
14.2	Overview - gearbox, four-wheel drive	319
14.3	Overview - dismantling and assembling gearbox	320
14.4	Assembly overview - removing and installing gear housing and selector unit	321



14.5	Assembly overview - removing and installing input shaft, output shafts, differential, bevel box and selector rods	323
14.6	Securing gearbox to assembly stand	325
14.7	Dismantling and assembling procedure	326
15	Gearbox housing	341
15.1	Assembly overview - gearbox housing	341
15.2	Repairing gearbox housing	343
16	Clutch housing	347
16.1	Assembly overview - clutch housing	347
16.2	Repairing clutch housing	349
17	Selector unit	351
17.1	Assembly overview - selector unit	351
17.2	Renewing locking elbow	352
17.3	Renewing oil seal for selector shaft	353
18	Selector forks	355
18.1	Assembly overview - selector forks	355
35 - Gears, shafts		356
1	Input shaft	356
1.1	Assembly overview - input shaft	356
1.2	Dismantling and assembling input shaft	358
1.3	Renewing input shaft seal	364
2	Output shaft	367
2.1	Assembly overview - output shaft for 1st and 2nd gear	367
2.2	Dismantling and assembling output shaft for 1st and 2nd gear	370
2.3	Difference - output shaft for 3rd and 4th gears	380
2.4	Assembly overview - output shaft for 3rd and 4th gears - to gearbox manufacture date 27 05 2	381
2.5	Dismantling and assembling output shaft for 3rd and 4th gears - to gearbox manufacture date 27 05 2	384
2.6	Assembly overview - output shaft for 3rd and 4th gears - from gearbox manufacture date 28 05 2	393
2.7	Dismantling and assembling output shaft for 3rd and 4th gears - from gearbox manufacture date 28 05 2	395
2.8	Assembly overview - output shaft for reverse gear	404
2.9	Dismantling and assembling reverse gear output shaft	407
39 - Final drive - front differential		417
1	Oil seals	417
1.1	Front-wheel drive and all-wheel drive - renewing left stub shaft oil seal with gearbox installed	417
1.2	Front-wheel drive - renewing right stub shaft oil seal with gearbox installed	421
1.3	four-wheel drive - renewing right stub shaft oil seal with bevel box installed	424
1.4	four-wheel drive - renewing seal between gearbox and bevel box with gearbox installed	426
1.5	Assembly overview - seals in bevel box and stub shaft bearing in bevel box, 0A6	427
1.6	Assembly overview - seals in bevel box and stub shaft bearing in bevel box, 0CP	429
1.7	Renewing seal between gearbox and bevel box with bevel box removed	431
1.8	Renewing stub shaft oil seals with bevel box removed	433
1.9	Renewing output flange seal for bevel box 0A6 (bevel box removed)	436
1.10	Renewing bevel box output flange seal, 0CP, bevel box removed	441
1.11	Renewing needle bearing (polygon bearing) on stub shaft of bevel box	446
2	Differential	452
2.1	Assembly overview - differential	452
2.2	Dismantling and assembling differential	454
2.3	Adjusting differential	458