



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Notes on performance test	1
2 Identification	2
2.1 Gearbox identification	2
3 Code letters, allocation, ratios, capacities	3
3.1 Allocation gearbox - engine	3
3.2 Capacities	3
3.3 Calculation of gear ratios	4
4 Overview - power transmission	5
5 General repair instructions	7
6 Electrical components	10
6.1 Overview of fitting locations - electrical components	10
30 - Clutch	12
1 Clutch operation	12
1.1 Overview - clutch actuation	12
1.2 Assembly overview - pedal cluster	14
1.3 Assembly overview - clutch hydraulics	16
1.4 Removing and installing mounting bracket	19
1.5 Removing and installing over-centre spring	25
1.6 Removing and installing clutch pedal	29
1.7 Removing and installing master cylinder	34
1.8 Removing and installing clutch position sender G476	36
1.9 Removing line and bleeder from and installing on slave cylinder	40
1.10 Removing and installing line for clutch mechanism	42
1.11 Bleeding clutch system	44
2 Clutch release mechanism	46
2.1 Assembly overview - clutch release mechanism	46
2.2 Removing and installing slave cylinder with release bearing	47
3 Clutch	49
3.1 Determining clutch manufacturer	49
3.2 Assembly overview - "Sachs" clutch	50
3.3 Removing and installing "Sachs" clutch	52
3.4 Assembly overview - "LuK" clutch	55
3.5 Removing and installing "LuK" clutch	56
34 - Controls, housing	59
1 Selector mechanism	59
1.1 Installation position of selector mechanism	59
1.2 Overview - selector mechanism	60
1.3 Assembly overview - gear knob and cover	61
1.4 Removing and installing gear knob	61
1.5 Assembly overview - Gear lever and selector housing	63
1.6 Dismantling and assembling selector mechanism	65
1.7 Assembly overview - Selector cables	69
1.8 Removing and installing selector mechanism	75
1.9 Adjusting selector mechanism	77
1.10 Checking selector mechanism	80
2 Removing and installing gearbox	81
2.1 Removing gearbox	81



2.2	Installing gearbox	91
2.3	Specified torques for gearbox	101
3	Transporting gearbox	102
4	Assembly mountings	103
4.1	Assembly overview - assembly mountings	103
5	Gear oil	106
5.1	Distinguishing between different manual gearbox types when filling oil	106
5.2	Checking gear oil level	106
6	Bevel box	110
6.1	Assembly overview - bevel box	110
6.2	Distinguishing between different types of bevel boxes	111
6.3	Removing bevel box	112
6.4	Installing bevel box	116
7	Dismantling and assembling gearbox	121
7.1	Overview - gearbox	121
7.2	Overview - dismantling and assembling gearbox	122
7.3	Assembly overview - removing and installing gear housing and selector unit	123
7.4	Assembly overview - removing and installing input shaft, output shafts, differential and selector rods	125
7.5	Securing to engine and gearbox support	126
7.6	Assembly procedure	127
8	Gearbox housing and clutch housing	142
8.1	Assembly overview - gearbox housing	142
8.2	Repairing gearbox housing	144
8.3	Assembly overview - clutch housing	152
8.4	Repairing clutch housing	154
9	Selector unit	157
9.1	Assembly overview - selector unit	157
9.2	Renewing selector shaft seal	158
10	Selector forks	160
10.1	Assembly overview - selector forks	160
10.2	Repairing reverse gear selector fork	161
35 - Gears, shafts		163
1	Input shaft	163
1.1	Assembly overview - input shaft	163
1.2	Dismantling and assembling input shaft	164
1.3	Renewing input shaft seal	168
2	Output shaft	170
2.1	Assembly overview - output shaft	170
2.2	Dismantling and assembling output shaft	178
2.3	Adjusting output shaft	200
39 - Final drive - differential		211
1	Oil seals	211
1.1	Overview of fitting locations - seals	211
1.2	Renewing left seal	212
1.3	Renewing right oil seal	214
2	Differential	220
2.1	Assembly overview - differential	220
2.2	Dismantling and assembling differential	222
2.3	Adjusting differential	227
3	Adjustment overview	232
4	Components of bevel box	233



4.1	Assembly overview - components of bevel box	233
4.2	Renewing bevel box seals	238
4.3	Renewing output flange and redetermining thickness of shim	261
4.4	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft	262
5	Gear oil	266
5.1	Checking gear oil level	266