



Contents

00 - Technical data	1
1 Safety precautions	1
1.1 Safety precautions for vehicles with a start-stop system	1
2 Identification	2
2.1 Gearbox identification	2
3 Code letters, allocation, ratios, capacities	3
3.1 Identification code, assembly allocation, ratios, Sharan	3
3.2 Identification code, assembly allocation, ratios, Tiguan	4
3.3 Capacities	5
4 Overview - power transmission	6
5 General repair instructions	8
6 Electrical components	11
6.1 Overview of fitting locations - electrical components	11
30 - Clutch	13
1 Clutch mechanism	13
1.1 Overview - clutch actuation	13
1.2 Assembly overview - pedal cluster	15
1.3 Assembly overview - clutch hydraulics	17
1.4 Removing and installing mounting bracket	20
1.5 Removing and installing over-centre spring	27
1.6 Removing and installing clutch pedal	31
1.7 Removing and installing master cylinder	36
1.8 Removing and installing clutch position sender G476	38
1.9 Removing and installing bleeder	44
1.10 Removing and installing line for clutch mechanism	45
1.11 Bleeding clutch system	47
2 Clutch release mechanism	49
2.1 Assembly overview - clutch release mechanism	49
2.2 Removing and installing slave cylinder with release bearing	50
3 Clutch	52
3.1 Differentiating makes of clutch (vehicles with turbo diesel engine)	52
3.2 Assembly overview - "Sachs" clutch	54
3.3 Removing and installing "Sachs" clutch	55
3.4 Assembly overview - "LuK" clutch	58
3.5 Removing and installing "LuK" clutch	59
34 - Controls, housing	62
1 Selector mechanism	62
1.1 Installation position of selector mechanism	62
1.2 Overview - selector mechanism	63
1.3 Assembly overview - gear knob and cover	64
1.4 Removing and installing gear knob	64
1.5 Assembly overview - Gear lever and selector housing	66
1.6 Dismantling and assembling selector mechanism	68
1.7 Assembly overview - Selector cables	72
1.8 Removing and installing selector mechanism	78
1.9 Adjusting selector mechanism	81
1.10 Checking selector mechanism	84
2 Removing and installing gearbox	85
2.1 Distinguishing between different types of petrol engines	85
2.2 Distinguishing between different types of turbo diesel engines	85



2.3	Removing and installing gearbox, Sharan and Tiguan with petrol engine, engine lifting eyes »at rear« of engine	86
2.4	Removing and installing gearbox, Sharan and Tiguan with petrol engine, engine lifting eyes »at front« of engine	108
2.5	Removing and installing gearbox, Sharan and Tiguan with turbo diesel engine, engine lifting eyes »next to each other« on engine	135
2.6	Removing and installing gearbox, Sharan and Tiguan with turbo diesel engine, engine lifting eyes »diagonally« on engine	159
3	Transporting gearbox	188
4	Assembly overview - assembly mountings	189
5	Gear oil	191
5.1	Distinguishing between different manual gearbox types when filling oil	191
5.2	Checking gear oil level	191
6	Dismantling and assembling gearbox	195
6.1	Overview - gearbox	195
6.2	Overview - dismantling and assembling gearbox	196
6.3	Assembly overview - removing and installing gear housing and selector unit	197
6.4	Assembly overview - removing and installing input shaft, output shafts, differential and selector rods	199
6.5	Securing to engine and gearbox support	201
6.6	Dismantling and assembling procedure	202
7	Gearbox housing and clutch housing	217
7.1	Assembly overview - gearbox housing	217
7.2	Repairing gearbox housing	219
7.3	Assembly overview - clutch housing	227
7.4	Repairing clutch housing	229
8	Selector unit	232
8.1	Assembly overview - selector unit	232
8.2	Renewing selector shaft seal	233
9	Selector forks	235
9.1	Assembly overview - selector forks	235
9.2	Repairing reverse gear selector fork	236
35 - Gears, shafts		238
1	Input shaft	238
1.1	Assembly overview - input shaft	238
1.2	Dismantling and assembling input shaft	239
1.3	Renewing input shaft seal	243
2	Output shaft	245
2.1	Assembly overview - output shaft for 1st to 4th gears	245
2.2	Dismantling and assembling output shaft for 1st to 4th gears	247
2.3	Adjusting output shaft for 1st to 4th gears	269
2.4	Assembly overview - output shaft for 5th, 6th and reverse gears	273
2.5	Dismantling and assembling output shaft for 5th, 6th and reverse gears	276
2.6	Adjusting output shaft for 5th, 6th and reverse gears	285
39 - Final drive - differential		291
1	Oil seals	291
1.1	Renewing left flange shaft oil seal with gearbox installed	291
1.2	Renewing right flange shaft oil seal with gearbox installed	292
2	Adjustment overview	295
3	Differential	296
3.1	Assembly overview - differential	296
3.2	Dismantling and assembling differential	298
3.3	Adjusting differential	302