



Contents

00 - Technical data	1
1 Safety information	1
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
2 Identification	4
2.1 Identification of gearbox	4
3 Repair notes	5
3.1 General information	5
3.2 Rules for cleanliness	6
3.3 General repair instructions	6
3.4 Gaskets and seals	7
3.5 Nuts and bolts	8
4 Technical data	9
4.1 Allocation gearbox - engine	9
4.2 Capacities	9
5 Electrical components	11
5.1 Overview of fitting locations - electrical components	11
30 - Clutch	12
1 Clutch	12
1.1 Assembly overview - dual clutch	12
1.2 Removing and installing clutch end cover	13
1.3 Removing dual clutch	18
1.4 Installing dual clutch	21
34 - Controls, housing	32
1 Mechatronic unit	32
1.1 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox installed)	32
1.2 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox removed)	40
1.3 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509 up to gearbox date 05/15	47
2 Removing and installing gear oil cooler	49
2.1 Renewing bleeder	51
3 Emergency release of selector lever	53
4 Removing and installing selector lever handle	54
4.1 Removing and installing handle	54
4.2 Moving push-button in the handle to installation position	58
5 Selector mechanism	60
5.1 Overview - selector mechanism	60
5.2 Removing and installing selector mechanism	61
5.3 Checking selector lever cable	65
5.4 Adjusting selector lever cable	66
6 Checking selector mechanism	68
6.1 Selector lever in "P" position and ignition switched on	68
6.2 Selector lever in "N" position and ignition switched on	68
6.3 Selector lever in position "Tiptronic"	68
6.4 Ignition and light switched on	69
6.5 Selector lever position indicator	69
7 Dismantling and assembling gearbox	70



7.1	Assembly overview - gearbox	70
8	Removing and installing gearbox	76
8.1	Removing gearbox	76
8.2	Installing gearbox	97
8.3	Specified torques	97
9	Transporting gearbox and securing to assembly stand	101
10	Bevel box	102
10.1	Removing and installing bevel box, vehicles with 2.0 l - 100/103/130 kW diesel engine	102
10.2	Removing and installing bevel box, vehicles with petrol engine and vehicles with 2.0 l - 110/130/135 kW diesel engine	102
10.3	Detaching bevel box from gearbox – gearbox removed	114
11	Oil and oil filter	119
11.1	Renewing oil filter	120
11.2	Checking oil level and topping up	121
11.3	Draining and filling oil	124
35 - Gears, shafts		129
1	Currently, no repairs can be made to gears and shafts	129
39 - Final drive - differential		130
1	Bevel box	130
1.1	Assembly overview - bevel box	130
2	Overview of fitting locations - oil seals	133
3	Renewing seals on gearbox	134
3.1	Renewing oil seal for left flange shaft	134
3.2	Renewing right seal (between gearbox and bevel box) on gearbox	136
4	Renewing seals on bevel box	138
4.1	Renewing seals on left (between bevel box and gearbox)	139
4.2	Renewing right seal (drive shaft side)	142
4.3	Renewing output flange oil seal (bevel box removed)	144
4.4	Renewing needle bearing (polygon bearing) for stub shaft	150
5	Checking and topping up gear oil in bevel box	155
5.1	Checking gear oil in bevel box	155
5.2	Filling gear oil in bevel box	155
5.3	Specified torque	158