



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
1.3 Safety precautions when working on vehicles with a start/stop system	2
2 Identification	3
2.1 Engine number/engine data	3
3 General information	4
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	4
4 Repair instructions	5
4.1 Routing and attachment of lines	5
4.2 General repair instructions	5
20 - Fuel supply system	6
1 Fuel	6
1.1 Assembly overview - fuel tank	6
1.2 Emptying fuel tank	8
1.3 Removing and installing fuel tank	13
2 Fuel delivery unit, fuel gauge sender	19
2.1 Assembly overview - fuel delivery unit/fuel gauge sender	19
2.2 Removing and installing fuel delivery unit, fuel gauge sender	21
3 Plug-in connectors	28
3.1 Separating plug-in connectors	28
4 Fuel filter	32
5 Activated charcoal filter with fuel tank leak detection	33
5.1 Assembly overview – activated charcoal filter system	33
5.2 Removing and installing activated charcoal filter	34
5.3 Checking fuel system for leaks	34
5.4 Checking vacuum supply of fuel system diagnostic pump V144	37
6 Activated charcoal filter without fuel tank leak detection	39
6.1 Assembly overview – activated charcoal filter system	39
6.2 Removing and installing activated charcoal filter	39
6.3 Checking fuel tank breather	40
7 Accelerator pedal	43
7.1 Assembly overview - accelerator module	43
7.2 Removing and installing accelerator pedal module GX2	43
8 Fuel pump	46
8.1 Checking fuel system pressurisation pump G6	46
8.2 Removing and installing fuel pump control unit J538	64
8.3 Removing and installing suction-jet pump	66
9 Senders and sensors	69
9.1 Removing and installing fuel gauge sender	69