



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety measures when working on fuel supply	1
1.2 Safety precautions when using testers and measuring instruments during a road test	2
1.3 Safety measures when working on vehicles with a start/stop system	2
1.4 Safety precautions when working on the SCR system	2
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 General information</b>	<b>5</b>
3.1 Rules for cleanliness when working on auxiliary/supplementary heater and fuel system	5
<b>4 Repair notes</b>	<b>6</b>
4.1 Pipe/wire routing and attachment	6
4.2 General repair instructions	6
<b>20 - Fuel supply system</b>	<b>7</b>
<b>1 Procedure in event of misfuelling</b>	<b>7</b>
1.1 Step 1, engine was started with incorrect fuel	7
1.2 Step 2, engine was not started with incorrect fuel	9
1.3 Step 3, there are metal particles in fuel delivery unit and fuel tank	11
1.4 Step 4, there are no metal particles in fuel delivery unit or fuel tank	12
1.5 Step 5, there are metal particles in high-pressure pump	13
1.6 Step 6, there are no metal particles in high-pressure pump	13
<b>2 Fuel</b>	<b>14</b>
2.1 Assembly overview - fuel tank	14
2.2 Emptying fuel tank	15
2.3 Removing and installing fuel tank	20
<b>3 Fuel delivery unit, fuel gauge sender</b>	<b>26</b>
3.1 Assembly overview - fuel delivery unit/fuel gauge sender	26
3.2 Removing and installing fuel delivery unit, fuel gauge sender	28
<b>4 Plug-in connectors</b>	<b>35</b>
4.1 Separating plug-in connectors	35
<b>5 Fuel filter</b>	<b>39</b>
5.1 Assembly overview - fuel filter	39
5.2 Removing and installing fuel filter	43
5.3 Fuel hoses in engine compartment, vehicles with 6.0 bar fuel low-pressure system	50
<b>6 Accelerator pedal</b>	<b>51</b>
6.1 Assembly overview - accelerator module	51
6.2 Removing and installing accelerator pedal module GX2	51
<b>7 Fuel pump</b>	<b>54</b>
7.1 Checking fuel system pressurisation pump G6	54
7.2 Removing and installing fuel pump	81
7.3 Removing and installing fuel pump control unit J538	83
7.4 Removing and installing suction-jet pump	84
<b>8 Senders and sensors</b>	<b>89</b>
8.1 Removing and installing fuel gauge sender	89