



## Contents

<b>27 - Starter, current supply, CCS</b>	<b>1</b>
<b>1 Battery</b>	<b>1</b>
1.1 Types of battery	1
1.2 Warning notices and safety regulations	1
1.3 Battery terminal connection	1
<b>2 Checking battery</b>	<b>2</b>
<b>3 Charging battery</b>	<b>3</b>
<b>4 Disconnecting and connecting battery</b>	<b>4</b>
4.1 Assembly overview	4
4.2 Disconnecting battery	5
4.3 Connecting battery	5
<b>5 Removing and installing battery</b>	<b>7</b>
5.1 Assembly overview	7
5.2 Removing and installing battery	8
<b>6 Starter, vehicles with manual gearbox</b>	<b>14</b>
6.1 Checking starter B	14
6.2 Starter, vehicles with manual gearbox MQ500	14
6.3 Removing and installing solenoid switch	16
<b>7 Starter, vehicles with automatic gearbox</b>	<b>18</b>
7.1 Starter, vehicles with automatic gearbox AQ450	18
<b>8 Starter, vehicles with dual clutch gearbox (DSG)</b>	<b>22</b>
8.1 Starter, vehicles with dual clutch gearbox DQ500 7F	22
<b>9 Alternator</b>	<b>25</b>
9.1 Securing B+ (battery positive) wire to alternator	25
9.2 Checking poly V-belt	25
9.3 Checking alternator C	25
9.4 Alternator, 1.4 l TSI engine	26
9.5 Alternator, 2.0 l TSI engine	30
9.6 Alternator, 2.0 l TDI engine	34
9.7 Removing and installing poly V-belt pulley on alternator	38
9.8 Voltage regulator for alternator	43
<b>10 Cruise control system (CCS)</b>	<b>46</b>
<b>11 Start/stop system</b>	<b>47</b>
11.1 General description	47
11.2 Start/stop operation switch E693	48
11.3 Voltage stabiliser J532	48
<b>90 - Gauges, instruments</b>	<b>50</b>
<b>1 Dash panel insert</b>	<b>50</b>
1.1 General description	50
1.2 Renewing dash panel insert	50
1.3 Coding dash panel insert	51
1.4 Removing and installing dash panel insert	51
1.5 Description of back of dash panel insert	52
1.6 Pin assignment of connections on dash panel insert	52
1.7 Warning lamp symbols in dash panel insert	52
<b>2 Service interval display</b>	<b>56</b>
2.1 Resetting service interval display	56
<b>92 - Windscreen wash/wipe system</b>	<b>57</b>
<b>1 Windscreen wiper system</b>	<b>57</b>



1.1	General description	57
1.2	Deactivating APP function of wiper motor	57
1.3	Assembly overview - windscreen wiper system	58
1.4	Removing and installing wiper arms	58
1.5	Removing and installing windscreen wiper system	61
1.6	Removing wiper motor from wiper frame and installing	62
1.7	Adjusting wiper blade park position	63
1.8	Joint-free wipers	65
1.9	Rain and light sensor G397	67
<b>2</b>	<b>Windscreen washer system</b>	<b>71</b>
2.1	General description	71
2.2	Assembly overview - windscreen washer system	71
2.3	Washer fluid reservoir	73
2.4	Windscreen and rear window washer pump V59	75
2.5	Windscreen washer fluid level sender G33	76
2.6	Spray jets for windscreen washer system	77
<b>3</b>	<b>Rear window wiper system</b>	<b>79</b>
3.1	General description	79
3.2	Assembly overview - rear window wiper system	79
3.3	Removing and installing wiper arm	80
3.4	Rear window wiper motor V12	80
3.5	Adjusting rear window wiper park position	81
3.6	Joint-free wiper blade	82
<b>4</b>	<b>Rear window washer system</b>	<b>83</b>
4.1	General description	83
4.2	Assembly overview - rear window washer system	83
4.3	Renewing spray jet	84
4.4	Adjusting spray jet for rear window washer system	84
<b>5</b>	<b>Headlight washer system</b>	<b>85</b>
5.1	General description	85
5.2	Assembly overview - headlight washer system	85
5.3	Headlight washer system pump V11	86
5.4	Spray jet pop-up cylinder	87
5.5	Bleeding headlight washer system	89
<b>6</b>	<b>Washer fluid line hose couplings</b>	<b>90</b>
<b>7</b>	<b>Hose repair</b>	<b>91</b>
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>92</b>
<b>1</b>	<b>Electrical components</b>	<b>92</b>
<b>2</b>	<b>Operation and safety notes for gas discharge lamps</b>	<b>93</b>
<b>3</b>	<b>Headlight with halogen bulbs</b>	<b>94</b>
3.1	General description	94
3.2	Assembly overview - headlights with halogen bulbs	94
3.3	Removing and installing headlights with halogen bulbs	96
3.4	Adjusting headlight installation position	97
3.5	Replacing bulbs of headlights with halogen bulbs	99
3.6	Headlight range control motor	104
3.7	Repairing headlight retaining tabs	106
3.8	Converting headlights for use when driving on the left or right	109
3.9	Adjusting headlights	112
<b>4</b>	<b>Gas discharge headlight with cornering light and LED daytime running light</b>	<b>113</b>
4.1	General description	113
4.2	Assembly overview - gas discharge headlight with cornering light and LED daytime running light	113



4.3	Removing and installing gas discharge headlight with cornering light and LED daytime running light	115
4.4	Adjusting headlight installation position	117
4.5	Renewing bulbs of gas discharge headlight with cornering light and LED daytime running light	117
4.6	LED module for daytime running light and side light	121
4.7	Headlight range control motor	121
4.8	Gas discharge bulb control unit	121
4.9	Power output module for headlight	122
4.10	Cornering light and headlight range control unit J745	123
4.11	Vehicle level sender	125
4.12	Repairing headlight retaining tabs	126
4.13	Converting headlights for use when driving on the left or right	126
4.14	Adjusting headlights	127
<b>5</b>	<b>Gas discharge headlights with dynamic main beam regulation</b>	<b>128</b>
5.1	General description	128
5.2	Assembly overview - gas discharge headlights with dynamic main beam regulation	128
5.3	Removing and installing gas discharge headlights with dynamic main beam regulation	130
5.4	Adjusting headlight installation position	132
5.5	Renewing bulbs in gas discharge headlights with dynamic main beam regulation	132
5.6	LED module for daytime running light and side light	136
5.7	Headlight range control motor	136
5.8	Gas discharge bulb control unit	136
5.9	Power output module for headlight	137
5.10	Cornering light and headlight range control unit J745	138
5.11	Vehicle level sender	140
5.12	Repairing headlight retaining tabs	141
5.13	Converting headlights for use when driving on the left or right	141
5.14	Adjusting headlights	142
<b>6</b>	<b>Fog lights</b>	<b>143</b>
6.1	General description	143
6.2	Assembly overview - fog lights	143
6.3	Removing and installing fog light	144
6.4	Removing and installing fog light bulb / static cornering light bulb	145
6.5	Adjusting fog lights	145
<b>7</b>	<b>Turn signal repeater and entry light in exterior mirror</b>	<b>146</b>
7.1	General description	146
7.2	Turn signal repeater bulb	146
7.3	Entry light in exterior mirror	147
<b>8</b>	<b>Tail light cluster</b>	<b>148</b>
8.1	Tail light cluster in side panel	148
8.2	Tail light cluster in rear lid	154
<b>9</b>	<b>High-level brake light</b>	<b>160</b>
9.1	High-level brake light bulb M25	160
<b>10</b>	<b>Number plate light</b>	<b>162</b>
10.1	Number plate light X	162
<b>11</b>	<b>Reversing light in bumper cover</b>	<b>165</b>
11.1	Removing and installing left reversing light X1 and right reversing light X2	165
11.2	Renewing left reversing light bulb M16 or right reversing light bulb M17	165
<b>12</b>	<b>Side marker lights</b>	<b>166</b>
12.1	Front side marker light, vehicles for USA and Canada	166
12.2	Rear side marker light, vehicles for USA and Canada	168
<b>13</b>	<b>Steering column switch</b>	<b>169</b>
13.1	General description	169
13.2	Assembly overview - steering column switch	170



13.3	Removal and installation sequence of components of steering column switch	172
13.4	Steering column electronics control unit J527	173
13.5	Steering column combination switch E595	179
13.6	Steering column switch base	182
<b>14</b>	<b>Steering column switch, vehicles with entry and start authorisation</b>	<b>188</b>
14.1	General description	188
14.2	Assembly overview - steering column switch	189
14.3	Removal and installation sequence of components of steering column switch	191
14.4	Steering column electronics control unit J527	192
14.5	Steering column combination switch E595	197
14.6	Steering column switch base	201
14.7	Control unit for electronic steering column lock J764	207
<b>15</b>	<b>Ignition/starter switch and lock cylinder.</b>	<b>210</b>
15.1	Steering lock housing	210
15.2	Lock cylinder	211
15.3	Ignition/starter switch	214
15.4	Ignition key withdrawal lock solenoid N376	216
<b>16</b>	<b>Entry and start authorisation (KESY)</b>	<b>217</b>
16.1	General description	217
16.2	Assembly overview - entry and start authorisation	217
16.3	Entry and start authorisation control unit J518	219
16.4	Entry and start authorisation aerials and sensors	221
16.5	Checking entry and start system aerials and sensors	224
16.6	Starter button E378	225
<b>17</b>	<b>Rear parking aid (PDC)</b>	<b>227</b>
17.1	General description	227
17.2	Assembly overview - rear parking aid (PDC)	227
17.3	Rear parking aid control unit	229
17.4	Rear parking aid senders	229
17.5	Renewing rear parking aid sender retainers	231
17.6	Rear parking aid warning buzzer H15	233
<b>18</b>	<b>Front parking aid (PDC)</b>	<b>234</b>
18.1	General description	234
18.2	Assembly overview - front parking aid (PDC)	234
18.3	Control unit for front parking aid	234
18.4	Front parking aid senders	234
18.5	Front parking aid button E266	234
18.6	Front parking aid warning buzzer H22	235
<b>19</b>	<b>Park assist steering (PAS)</b>	<b>236</b>
19.1	General description	236
19.2	Assembly overview of park assist steering	237
19.3	Park assist steering control unit J791	239
19.4	Front parking aid sender and front park assist steering sender	241
19.5	Replacing retainers for front parking aid sender or front park assist steering sender	243
19.6	Rear park assist steering senders	243
19.7	Renewing rear park assist steering sender retainers	246
19.8	Park assist steering button E581	248
19.9	Parking aid warning buzzer	248
<b>20</b>	<b>Reversing camera system</b>	<b>251</b>
20.1	General description	251
20.2	Assembly overview - reversing camera system	251
20.3	Removing and installing reversing camera	252
20.4	Reversing camera system control unit J772	252
20.5	Calibrating reversing camera system	253



<b>21</b>	<b>Main beam assist (MBA)</b> .....	<b>259</b>
21.1	General description .....	259
21.2	Main beam assist control unit J844 .....	260
21.3	Light sensor G399 .....	260
<b>22</b>	<b>Front camera for driver assist systems R242</b> .....	<b>261</b>
22.1	General description .....	261
22.2	Assembly overview .....	261
22.3	Removing and installing front camera for driver assist systems R242 .....	262
22.4	Replacing front camera for driver assist systems R242 .....	263
22.5	Coding front camera for driver assist systems R242 .....	263
22.6	Calibrating front camera for driver assist systems R242 .....	263
22.7	Removing and installing windscreen heater for front sensors Z113 .....	264
<b>96</b>	<b>Lights, bulbs, switches - interior</b> .....	<b>265</b>
<b>1</b>	<b>Interior lights and switches</b> .....	<b>265</b>
1.1	Interior monitoring deactivation switch E267 .....	265
<b>2</b>	<b>Lights and switches in engine compartment</b> .....	<b>267</b>
2.1	Bonnet contact switch F266 .....	267
<b>3</b>	<b>Lights and switches in dash panel</b> .....	<b>268</b>
3.1	Light switch E1 .....	268
3.2	Switch and instrument illumination regulator E20 and headlight range control regulator E102 .....	269
3.3	Glove compartment light W6 .....	270
3.4	Glove compartment light switch E26 .....	271
3.5	Front passenger side airbag deactivated warning lamp K145 .....	272
3.6	Hazard warning light switch E3 .....	273
3.7	Footwell lights .....	274
3.8	Key operated switch to deactivate front passenger side airbag E224 .....	276
3.9	Tyre Pressure Monitoring System button E226 .....	278
<b>4</b>	<b>Lights and switches in front doors</b> .....	<b>279</b>
4.1	Driver side switch element .....	279
4.2	Driver side interior locking button for central locking system E308 .....	280
4.3	Bulb for illumination of interior door handle .....	282
4.4	Components - front door locks .....	283
<b>5</b>	<b>Lights and switches in rear doors</b> .....	<b>284</b>
5.1	Rear window regulator switch .....	284
5.2	Components - rear door locks .....	284
<b>6</b>	<b>Lights and switches in luggage compartment</b> .....	<b>286</b>
6.1	Luggage compartment light W3 .....	286
6.2	Rear lid handle release button E234 .....	287
<b>7</b>	<b>Lights and switches in roof trim</b> .....	<b>288</b>
7.1	Front interior and reading light .....	288
7.2	Sun blind and sunroof button E437 .....	292
7.3	Rear interior and reading lights .....	292
7.4	Right interior light W17 .....	294
7.5	Light for illuminated vanity mirror .....	296
<b>8</b>	<b>Lights and switches in centre console</b> .....	<b>298</b>
8.1	Buttons in centre console storage compartment .....	298
8.2	Electromechanical parking brake button and auto-hold button .....	298
8.3	AC/DC converter with socket, 12 V-230 V U13 .....	300
8.4	12 V socket .....	302
8.5	Cigarette lighter U1 .....	302
<b>9</b>	<b>Horn</b> .....	<b>304</b>
9.1	Treble horn H2 and bass horn H7 .....	304



9.2	Horn plate H	305
<b>10</b>	<b>Immobiliser</b>	<b>306</b>
10.1	General description	306
10.2	Immobiliser control unit J362	306
10.3	Ignition key	307
10.4	New identity on renewing all components	307
<b>11</b>	<b>Anti-theft alarm (ATA)</b>	<b>308</b>
11.1	General description	308
11.2	Activating and deactivating anti-theft alarm	308
11.3	Interior monitoring deactivation switch E267	309
11.4	Interior monitoring sensor and vehicle inclination sender	309
11.5	Central locking and anti-theft alarm system aerial R47	310
11.6	Alarm horn H12	310
11.7	Reading and adapting anti-theft alarm (ATA)	314
<b>97 - Wiring</b>		<b>315</b>
<b>1</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>315</b>
<b>2</b>	<b>Fuse holder</b>	<b>316</b>
2.1	Fuse holder in dash panel	316
2.2	Fuse holder in electronics box	317
<b>3</b>	<b>Relay carriers</b>	<b>318</b>
3.1	Removing and installing dash panel relay carrier	318
3.2	Removing and installing relay carrier on onboard supply control unit	319
<b>4</b>	<b>Electronics boxes</b>	<b>321</b>
4.1	Electronics box on left side of engine compartment (engine compartment electronics box)	321
<b>5</b>	<b>Control units</b>	<b>325</b>
5.1	On-board supply control unit J519	325
5.2	Data bus diagnostic interface J533 (gateway)	328
5.3	Trailer detector control unit J345	331
<b>6</b>	<b>Wiring harness and connector repairs</b>	<b>333</b>