



Contents

1	Engine list	1
2	Service work	7
2.1	Information about flexible or fixed service	7
2.2	Service tables up to model year ►2020	10
2.3	Service tables as of model year 2021►	18
3	General information	27
3.1	General warnings for working on high-voltage system	27
3.2	Raising vehicle with lifting platform or trolley jack	27
3.3	Entries in service schedule	29
3.4	Severe operating conditions	29
3.5	Vehicle data sticker	30
3.6	Connecting vehicle diagnostic tester	31
3.7	Vehicle identification number	32
3.8	Countries with hot climate	33
3.9	Country overview for petrol not compliant with EN 228	34
3.10	Country overview for diesel not compliant with EN 590/EN 15940	35
3.11	Engine code and engine number	36
3.12	Countries with high levels of dust	36
3.13	Identification plate	37
3.14	Shortened intervals for spark plug replacement	37
4	Descriptions of work	43
4.1	Swivel joints and suspension link mountings: inspecting	45
4.2	All-wheel drive coupling: changing oil	46
4.3	Automatic headlight control and static cornering light: checking function	50
4.4	Front passenger front airbag: checking key switch and “ON/OFF function”	52
4.5	Battery (12V): checking battery terminal clamps for secure seating	53
4.6	Battery (12V): checking with battery tester (always refer to workshop manual)	56
4.7	Battery (12V): checking (applies only to Tiguan eHybrid)	57
4.8	Status of battery (12V): reading - sending diagnosis protocol via online connection	58
4.9	Tyres: checking condition, wear pattern, tyre pressure and tread depth	58
4.10	Brake and clutch system: changing brake fluid	70
4.11	Brake system and shock absorbers: inspecting for leaks and damage	76
4.12	Brakes, front and rear: checking thickness of brake pads and condition of brake discs	77
4.13	Brake fluid level: checking	80
4.14	Dual clutch gearbox 0D9: changing gear oil and filter	81
4.15	Dual clutch gearbox 0DD: changing gear oil	81
4.16	Dual clutch gearbox 0DL: changing gear oil	81
4.17	Dual clutch gearbox 0GC: changing gear oil	82
4.18	Diesel particulate filter: checking	82
4.19	Electric windows: checking positioning (open and close functions)	82
4.20	Fault memory of all systems: reading with vehicle diagnostic tester, correcting possible faults according to repair guidelines	82
4.21	Boots: inspecting	83
4.22	Head-up display (HUD): removing protective film	83
4.23	High-voltage battery: checking charge level	83
4.24	Maintenance of high-voltage battery	84
4.25	High-voltage battery: charging	84
4.26	Hybrid components: inspect for damage to high-voltage components and wires.	84
4.27	Interior and exterior body: inspecting for corrosion with doors and flaps open	85
4.28	Poly V-belt: renewing	85
4.29	Poly V-belt: checking condition	85
4.30	Cooling system: checking frost protection and coolant level	87
4.31	Cooling system for high-voltage system: checking coolant additive and coolant level	90



4.32	Diesel fuel filter: draining	93
4.33	Diesel fuel filter: renewing	94
4.34	Air filter: cleaning housing and renewing filter element	97
4.35	Multi-purpose additive for diesel fuel: adding	103
4.36	Multi-purpose additive for petrol fuel: adding	105
4.37	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	107
4.38	Engine cover panel “top”: removing and installing	107
4.39	Motor compartment cover (noise insulation) “bottom”: removing and installing	110
4.40	Engine oil level: checking	110
4.41	Engine oil: draining, renewing oil filter and filling engine oil	112
4.42	Engine oil: capacities and specifications up to model year ►2020	122
4.43	Engine oil: capacities and specifications as of model year 2021►	124
4.44	Panorama sliding roof with rear panorama roof	126
4.45	Road test: performing (driving behaviour, noises, air conditioner etc.)	129
4.46	Wheel securing bolts: tightening to specified torque	129
4.47	Reducing agent (AdBlue®/DEF): replenishing	131
4.48	Reducing agent (AdBlue®/DEF): changing	135
4.49	Tyre pressure indicator: calibrating	135
4.50	Tyre repair set: checking	136
4.51	Window wash/wipe system and headlight washer system: checking function	137
4.52	Headlight adjustment: checking halogen headlights	140
4.53	Headlight adjustment: checking LED headlights with cornering light (Tiguan)	144
4.54	Headlight adjustment: checking LED matrix beam headlights (Tiguan PA)	149
4.55	Headlight adjustment: checking LED headlights (Tiguan)	152
4.56	Headlight adjustment: checking LED headlights (Tiguan PA)	155
4.57	Headlight adjustment: checking fog lights	159
4.58	Sliding sunroof drains at front: check for blockage, clean if necessary	161
4.59	Service interval display: resetting	162
4.60	Service interval display: recoding	163
4.61	Track rods: checking clearance, attachment and boots	164
4.62	Interior filter: cleaning housing and renewing filter element	165
4.63	Selective wheel torque control: change oil in left and right clutch chambers	165
4.64	Selective wheel torque control: assessing oil degradation on left and right sides using vehicle diagnostic tester	165
4.65	Transportation mode: switching off	166
4.66	Transportation devices: removing blocking pieces	166
4.67	Clock and date: setting	168
4.68	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	168
4.69	Warning stickers, Tiguan eHybrid: checking	168
4.70	Water drain valves at rear: check for blockage, clean if necessary	169
4.71	Toothed belt (petrol engines): renewing	170
4.72	Camshaft drive toothed belt (diesel engines): renewing	170
4.73	Spark plugs: renewing	170
5	Exhaust emissions test	187
5.1	Exhaust emissions test for petrol engines	187
5.2	Exhaust emissions test for diesel engines	189
6	00 Periodic Technical Inspection (PTI)	193
7	Glossary	197
8	—Change history—	200