



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
2 Identification	2
2.1 Allocation of PR number - brakes	2
3 Technical data	4
3.1 Technical data for brakes	4
4 Brake test	7
4.1 General information	7
4.2 Checking vehicles with front-wheel drive	7
4.3 Checking vehicles with four-wheel drive	7
4.4 Checking parking brake	8
45 - Anti-lock brake system	10
1 General information	10
1.1 Repair instructions for repair work on ABS	10
2 Overview of fitting locations	13
2.1 Overview of fitting locations - ABS/ESP	13
3 Control unit and hydraulic unit	15
3.1 Assembly overview - control unit and hydraulic unit	15
3.2 Removing and installing ABS control unit J104 and ABS hydraulic unit N55	19
3.3 Separating control unit from hydraulic unit	41
3.4 Fitting control unit to hydraulic unit	43
3.5 Connecting brake lines to hydraulic unit	44
4 Sensors	47
4.1 Assembly overview - speed sensor on front axle	47
4.2 Assembly overview - speed sensor on rear axle	48
4.3 Removing and installing speed sensors on front axle G45 / G47	49
4.4 Removing and installing speed sensors on rear axle G44 / G46	50
4.5 Checking ABS sensor ring	51
4.6 Removing and installing ESP sensor unit G419	52
46 - Brakes - mechanism	53
1 Front brakes	53
1.1 Assembly overview - front brakes	53
1.2 Removing and installing brake pads/linings	55
1.3 Removing and installing brake caliper	57
2 Rear brakes	60
2.1 Assembly overview - rear brakes	60
2.2 Removing and installing brake pads/linings	62
2.3 Removing and installing brake caliper	66
3 Parking brake	71
3.1 Overview of fitting locations - parking brake	71
3.2 Removing and installing control unit for electromechanical parking brake J540	72
3.3 Removing and installing parking brake motor V282 / V283	72
4 Brake pedal	75
4.1 Assembly overview - brake pedal	75
4.2 Removing and installing mounting bracket	78
4.3 Separating brake pedal from brake servo	82
4.4 Connecting brake pedal to brake servo	83
4.5 Removing and installing brake pedal	83



47 - Brakes - hydraulics	85
1 Front brake caliper	85
1.1 Assembly overview - front brake caliper	85
1.2 Removing and installing brake caliper piston	86
2 Rear brake caliper	89
2.1 Assembly overview - rear brake caliper	89
2.2 Removing and installing protective cap	89
3 Brake servo and brake master cylinder	93
3.1 Assembly overview - brake servo/brake master cylinder	93
3.2 Removing and installing brake light switch	98
3.3 Removing and installing brake servo	101
3.4 Removing and installing brake master cylinder	117
4 Vacuum system	130
4.1 Assembly overview - vacuum pump	130
4.2 Checking non-return valve	135
4.3 Removing and installing vacuum sender G608	135
4.4 Checking vacuum system	135
4.5 Removing and installing electric vacuum pump	139
5 Brake lines	141
5.1 Repairing brake lines	141
6 Hydraulic system	145
6.1 General notes on brake fluid	145
6.2 Bleeding hydraulic system following standard procedure	145
6.3 Subsequent bleeding of hydraulic system	146
6.4 Testing for leaks	147