



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety precautions when using testers and measuring instruments during a road test	1
2 Repair instructions	2
2.1 Contact corrosion	2
2.2 Routing and attachment of lines	2
3 Battery	3
3.1 Battery - general notes	3
3.2 Types of battery	3
27 - Starter, current supply, CCS	4
1 Battery	4
1.1 Assembly overview – battery	4
1.2 Removing and installing battery	8
1.3 Disconnecting and connecting battery	15
1.4 Removing and installing battery tray	19
1.5 Checking battery	20
1.6 Charging battery	20
1.7 Removing and installing earth wire with battery monitor control unit J367	20
1.8 Adapting battery monitor control unit J367	22
2 Alternator	23
2.1 Assembly overview – alternator	23
2.2 Removing and installing alternator	24
2.3 Checking alternator	32
2.4 Removing and installing poly V-belt pulley	32
2.5 Removing and installing voltage regulator	41
3 Starter	44
3.1 Assembly overview – starter	44
3.2 Removing and installing starter	45
4 Cruise control system (CCS)	50
5 Start/stop system	51
5.1 General description - start/stop system	51
5.2 Overview of fitting locations - start/stop system	51
6 Adaptive cruise control	52
6.1 Overview of fitting locations - adaptive cruise control	52
6.2 Removing and installing automatic distance control unit	52
6.3 Calibrating adaptive cruise control	53
90 - Gauges, instruments	54
1 Dash panel insert	54
1.1 Assembly overview – dash panel insert	54
1.2 Assembly overview – head-up display	55
1.3 Removing and installing dash panel insert KX2	56
1.4 Removing and installing control unit for head-up display	60
2 Horn	62
2.1 Assembly overview – horn	62
2.2 Removing and installing treble horn H2 and bass horn H7	62
2.3 Removing and installing bracket for horn H2/H7	63
92 - Windscreen wash/wipe system	65
1 Windscreen wiper system	65



1.1	Assembly overview – windscreen wiper system	65
1.2	Moving wipers to service position	68
1.3	Removing and installing wiper blade	68
1.4	Removing and installing wiper arms	69
1.5	Adjusting wiper arms	71
1.6	Removing and installing wiper motor V	73
1.7	Renewing wiper motor	74
1.8	Deactivating APP function of wiper motor	77
1.9	Removing and installing rain and light sensor	78
2	Windscreen washer system	82
2.1	Assembly overview – windscreen washer system	82
2.2	Removing and installing washer fluid reservoir	86
2.3	Removing and installing windscreen washer fluid level sender	91
2.4	Removing and installing windscreen washer pump	93
2.5	Removing and installing spray jets	95
2.6	Adjusting spray jets	96
3	Rear window wiper system	97
3.1	Assembly overview – rear window wiper system	97
3.2	Removing and installing wiper blade	97
3.3	Removing and installing wiper arm	98
3.4	Adjusting wiper arm	99
3.5	Removing and installing rear window wiper motor V12	100
4	Rear window washer system	103
4.1	Assembly overview – rear window washer system	103
4.2	Removing and installing washer fluid reservoir	105
4.3	Removing and installing rear window washer pump	106
4.4	Removing and installing spray jet	106
4.5	Adjusting spray jet	107
5	Headlight washer system	108
5.1	Assembly overview - headlight washer system	108
5.2	Removing and installing washer fluid reservoir	110
5.3	Removing and installing headlight washer system pump V11	110
5.4	Removing and installing pop-up cylinder	112
5.5	Adjusting spray jets	114
6	Washer fluid lines	115
6.1	Repairing washer fluid lines	115
94	Lights, bulbs, switches - exterior	116
1	Headlights	116
1.1	Assembly overview – headlight	116
1.2	Removing and installing headlight	124
1.3	Removing and installing trim	125
1.4	Adjusting headlights	126
1.5	Adjusting headlight installation position	126
1.6	Removing and installing front turn signal bulb M5/M7	127
1.7	Installing repair kit for headlight housing	129
1.8	Converting headlights from driving on right to driving on left	131
1.9	Converting headlights from driving on left to driving on right	131
1.10	Removing and installing headlight range control motor V48/V49	132
1.11	Removing and installing headlight dipped beam bulb	139
1.12	Removing and installing headlight main beam bulb M30/M32	146
1.13	Removing and installing side light bulb M1/M3	152
1.14	Removing and installing daytime running light bulb L174/L175	152
1.15	Removing and installing LED modules for daytime running light and side light L176/L177	154
1.16	Removing and installing bulbs for cornering light L148/L149	155



1.17	Removing and installing output module for headlight J667/J668	156
1.18	Removing and installing output module 1 for LED headlights A27/A31	159
1.19	Removing and installing swivel module position sensor G474/G475	161
1.20	Removing and installing dynamic cornering light control motor V318/V319	162
2	Fog lights	163
2.1	Assembly overview - fog lights	163
2.2	Removing and installing fog light	163
2.3	Removing and installing fog light bulb L22/L23	165
3	Lights in exterior mirror	168
3.1	Assembly overview - lights in exterior mirror	168
3.2	Removing and installing turn signal	169
3.3	Removing and installing entry light in exterior mirror	172
4	Tail light cluster	173
4.1	Assembly overview – tail light cluster in body	173
4.2	Assembly overview – tail light clusters in rear lid	173
4.3	Removing and installing tail light in rear lid	174
4.4	Adjusting installation position of tail light	176
4.5	Removing and installing tail light cluster	177
4.6	Removing and installing tail light bulb M2/M4	178
4.7	Removing and installing rear fog light bulb L46/L47	178
4.8	Removing and installing brake and tail light bulb M21/M22	178
4.9	Removing and installing reversing light bulb	178
4.10	Removing and installing turn signal bulb	179
5	High-level brake light	181
5.1	Assembly overview – high-level brake light	181
5.2	Removing and installing high-level brake light	181
6	Number plate light	184
6.1	Assembly overview – number plate lights	184
6.2	Removing and installing number plate light X4/X5	184
6.3	Removing and installing bulb for number plate light X4/X5	185
7	Entry and start authorisation system	186
7.1	Overview of fitting locations – entry and start authorisation system	186
7.2	Overview of fitting locations – keyless entry system	188
7.3	Removing and installing entry and start authorisation control unit J518	191
7.4	Removing and installing door exterior handle contact sensor G415/G416	192
7.5	Removing and installing interior aerial 1 for entry and start system R138	193
7.6	Removing and installing interior aerial 2 for entry and start system R139	193
7.7	Removing and installing driver side aerial for entry and start system R134	194
7.8	Removing and installing front passenger side aerial for entry and start system R135	195
7.9	Removing and installing rear bumper aerial for entry and start system R136	195
7.10	Removing and installing luggage compartment aerial for entry and start system R137	195
7.11	Removing and installing rear lid power opening control unit J938	196
7.12	Removing and installing rear lid power opening sender G750/G760	197
8	Steering column switch module	199
8.1	Assembly overview – steering column switch module	199
8.2	Removing and installing lock cylinder	201
8.3	Removing and installing ignition key withdrawal lock solenoid N376	204
8.4	Removing and installing ignition/starter switch	204
8.5	Removing and installing steering column switch module	206
8.6	Removing and installing steering column electronics control unit J527	211
8.7	Removing and installing turn signal switch E2	217
8.8	Removing and installing intermittent wiper switch E22	219
8.9	Removing and installing immobiliser reader coil D2	219
8.10	Removing and installing base for steering column combination switch	220
8.11	Removing and installing steering lock housing	221



9	Parking aid	223
9.1	Assembly overview – parking aid	223
9.2	Removing and installing parking aid control unit J446	225
9.3	Removing and installing front parking aid warning buzzer H22	227
9.4	Removing and installing rear parking aid warning buzzer H15	228
9.5	Removing and installing front parking aid senders	229
9.6	Removing and installing rear parking aid senders	229
10	Park assist steering	231
10.1	Assembly overview - park assist steering	231
10.2	Removing and installing park assist steering control unit J791	232
10.3	Removing and installing front senders	232
10.4	Removing and installing rear senders	233
11	Automatic headlight range control	235
11.1	Assembly overview - automatic headlight range control	235
11.2	Removing and installing cornering light and headlight range control unit J745	237
12	Towing bracket	242
12.1	Assembly overview - towing bracket socket	242
12.2	Trailer socket U10	242
12.3	Removing and installing trailer detector control unit J345	243
96	Lights, bulbs, switches - interior	245
1	Lights	245
1.1	Overview of fitting locations – lights in dash panel	245
1.2	Overview of fitting locations – lights in front doors	246
1.3	Overview of fitting locations – lights in rear doors	247
1.4	Overview of fitting locations - lights in centre console	248
1.5	Overview of fitting locations – lights in luggage compartment	249
1.6	Overview of fitting locations – lights in roof trim	250
1.7	Removing and installing glove compartment light W6	252
1.8	Replacing bulb for glove compartment light W6	253
1.9	Removing and installing front footwell light K268/K269	254
1.10	Removing and installing front footwell illumination bulb L151/L152	255
1.11	Removing and installing Central locking SAFELOCK function warning lamp K133	255
1.12	Removing and installing reflectors in door	256
1.13	Removing and installing entry light W92/W93	257
1.14	Removing and installing interior door handle illumination bulb L146/L147	257
1.15	Removing and installing rear interior door handle illumination bulb L133/L134	258
1.16	Removing and installing light 1 for front door background lighting L199/L200	258
1.17	Removing and installing light 1 for rear door background lighting L201/L202	259
1.18	Removing and installing roof ambient lighting bulb W76/W77	259
1.19	Removing and installing selector lever position display Y26	260
1.20	Removing and installing luggage compartment light W3	260
1.21	Removing and installing electric torch R280	261
1.22	Removing and installing surround lighting 1 in rear lid W61	262
1.23	Removing and installing illuminated vanity mirror W20/W14	263
1.24	Removing and installing bulb for front interior light W1	264
1.25	Removing and installing bulb for rear interior light W43	267
1.26	Removing and installing bulb for front reading light W13/W19	269
1.27	Removing and installing bulb for rear reading light W11/W12	269
1.28	Renewing bulb of rear interior light W47/W48	269
2	Controls	271
2.1	Overview of fitting locations – controls in dash panel	272
2.2	Overview of fitting locations – controls in front doors	274
2.3	Overview of fitting locations – controls in rear doors	274
2.4	Overview of fitting locations - controls in centre console	275



2.5	Overview of fitting locations – controls in luggage compartment	276
2.6	Overview of fitting locations – controls in roof trim	277
2.7	Removing and installing rotary light switch EX1	280
2.8	Removing and installing headlight range control regulator E102	281
2.9	Removing and installing switch for head-up display E736	281
2.10	Removing and installing TCS and ESP button E256	282
2.11	Removing and installing parking aid button E266	283
2.12	Removing and installing park assist steering button E581	283
2.13	Removing and installing Start/Stop operation button E693	283
2.14	Removing and installing driving mode selection button E735	283
2.15	Removing and installing switch module in centre console EX23/EX30	283
2.16	Removing and installing operating unit for driving mode selection E881	285
2.17	Removing and installing hazard warning light switch EX3	287
2.18	Removing and installing buttons for seat heating E653/E654	287
2.19	Removing and installing glove compartment light switch E26	288
2.20	Removing and installing exterior mirror adjuster EX11	289
2.21	Removing and installing operating unit for window regulator in driver door E512	290
2.22	Removing and installing front passenger side window regulator button E716	290
2.23	Removing and installing driver side interior locking button for central locking system E308	291
2.24	Removing and installing rear lid remote release button E233	292
2.25	Removing and installing button for deactivating interior monitoring and vehicle inclination sensor E616	293
2.26	Removing and installing door contact switch F2/F3	294
2.27	Removing and installing rear window regulator button E711/E713	294
2.28	Removing and installing rear door contact switches F10/F11	295
2.29	Removing and installing electromechanical parking brake button E538/auto-hold button E540	295
2.30	Removing and installing the starter button E378	296
2.31	Removing and installing rear lid warning buzzer H32	297
2.32	Removing and installing rear lid contact switch	297
2.33	Removing and installing rear lid closure button E574	297
2.34	Removing and installing electric hinged tow coupling attachment button E474	299
2.35	Removing and installing vanity mirror contact switch F147/F148	300
2.36	Removing and installing sunroof button E325	300
2.37	Removing and installing front interior light/reading light	301
2.38	Removing and installing rear interior light/reading light	302
2.39	Removing and installing front reading light button E633/E634	305
3	Anti-theft alarm	307
3.1	Assembly overview – interior monitor	307
3.2	Removing and installing alarm horn H12	308
3.3	Removing and installing anti-theft alarm sensor G578	310
4	Lane change assist	313
4.1	Assembly overview - lane change assist	313
4.2	Removing and installing lane change assist warning lamp in exterior mirror K311/K312 ..	315
4.3	Removing and installing lane change assist control unit J769/J770	315
4.4	Calibrating lane change assist	317
5	Front camera for driver assist systems	326
5.1	Removing and installing front camera for driver assist systems	326
6	Cigarette lighter, socket	327
6.1	Assembly overview - DC/AC converter with socket, 12 V-230 V	327
6.2	Removing and installing cigarette lighter U1	328
6.3	Removing and installing socket illumination bulb L42	328
6.4	Removing and installing rear cigarette lighter illumination bulb L32	328
6.5	Removing and installing electric socket U	328
6.6	Removing and installing DC/AC converter with socket, 12 V-230 V U13	328



97 - Wiring	330
1 Relay carriers, fuse holders, electronics boxes	330
1.1 Overview of fitting locations - relay carriers, fuse holders, electronics boxes	330
1.2 Removing and installing electronics box	334
1.3 Removing and installing relay and fuse holder in electronics box	336
1.4 Removing and installing relay and fuse carrier behind dash panel	339
1.5 Removing and installing main fuse carrier	341
2 Control units	343
2.1 Overview of fitting locations - control units	343
2.2 Assembly overview – onboard supply control unit	345
2.3 Assembly overview - data bus diagnostic interface	347
2.4 Removing and installing onboard supply control unit J519	349
2.5 Removing and installing data bus diagnostic interface J533	354
2.6 Removing and installing bracket for onboard supply control unit J519	355
2.7 Renewing bracket for onboard supply control unit J519	358
2.8 Removing and installing parking aid control unit J446/park assist steering control unit J791	359
2.9 Removing and installing rear lid control unit J605	360
3 Connectors	361
3.1 Repairing electrical wiring harnesses and plug-in connections	361
4 Releasing and dismantling connector housings	362
5 Repairing aerial wires	363
6 Fibre optic cables	364
7 Vehicle diagnosis, testing and information systems	365