



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety measures when working on vehicles with a start/stop system	1
1.2 Safety measures when working with pyrotechnic components	2
1.3 Storage, transportation and disposal of airbag, belt tensioner and battery isolator units (pyrotechnic components)	3
1.4 Additional safety regulations for side airbag	4
1.5 Additional safety instructions for curtain airbag	4
1.6 Safety regulations for crash sensors (pressure sensors) for front side airbags	5
1.7 Renewing pyrotechnic, electrical and mechanical components of the restraint system after an accident	5
1.8 Checking airbag securing parts after an accident	7
1.9 Accident without airbag triggering	7
1.10 Checking seat belts	7
1.11 Check belt webbing	8
1.12 Checking inertia reel (locking mechanism)	9
1.13 Visually checking belt buckle	10
1.14 Check operation of belt buckle	10
1.15 Checking belt relays, and buckle tongues	10
1.16 Checking securing parts and anchorage points after an accident	10
1.17 Checking seat belt restraint function for holding additional child seats (not for driver's seat belt) - country-specific	11
1.18 Checking child seat anchors after an accident	11
1.19 Safety instructions for automatic anti-dazzle interior mirror	12
2 Repair notes	13
2.1 Contact corrosion	13
2.2 Pipe/wire routing and attachment	13
68 - Interior equipment	14
1 Compartments/covers	14
1.1 Overview of fitting locations – compartments/covers	14
1.2 Assembly overview - centre storage compartment	15
1.3 Assembly overview – dash panel cover on driver side	16
1.4 Assembly overview - steering column trim	17
1.5 Assembly overview - storage compartment on driver side	18
1.6 Assembly overview – glove compartment	19
1.7 Assembly overview - storage compartment in headliner	20
1.8 Removing and installing centre storage compartment	21
1.9 Removing and installing driver side storage compartment	22
1.10 Removing and installing dash panel cover on driver side	23
1.11 Removing and installing upper steering column trim	25
1.12 Removing and installing lower steering column trim	26
1.13 Removing and installing footwell cover on front passenger side	28
1.14 Removing and installing glove compartment	28
1.15 Removing and installing glove compartment cover	30
1.16 Removing and installing restrictor for glove compartment cover	31
1.17 Service position for glove compartment cover	32
1.18 Removing and installing headliner storage compartment	33
2 Equipment	36
2.1 Assembly overview – net partition	36
2.2 Assembly overview – sun visors	36
2.3 Removing and installing sun visor	37
2.4 Removing and installing sun visor centre mount	40



2.5	Removing and installing roof grab handle	40
2.6	Removing and installing net partition bracket	43
3	Centre console	46
3.1	Assembly overview – centre console	46
3.2	Removing and installing rear centre console trim	48
3.3	Removing and installing front ashtray	48
3.4	Removing and installing centre console insert	49
3.5	Removing and installing centre console front storage compartment	52
3.6	Removing and installing centre console trim in front footwell	52
3.7	Removing and installing centre console	53
3.8	Removing and installing centre console bracket	58
3.9	Removing and installing trim for operating and display unit	61
4	Front centre armrest	62
4.1	Assembly overview – front centre armrest	62
4.2	Removing and installing front centre armrest	62
5	Interior mirror	65
5.1	Assembly overview – interior mirror	65
5.2	Removing and installing interior mirror	68
5.3	Bonding retaining plate for interior mirror	79
69	- Passenger protection	85
1	Seat belts	85
1.1	Overview of fitting locations – seat belts and anchorage points	85
1.2	Assembly overview – front three-point seat belt	87
1.3	Assembly overview – rear outer three-point seat belt	89
1.4	Assembly overview – rear centre three-point seat belt	91
1.5	Assembly overview – front belt buckle	92
1.6	Assembly overview – rear belt buckle	93
1.7	Removing and installing front three-point seat belt	95
1.8	Removing and installing rear three-point seat belt	98
1.9	Removing and installing front belt guide	103
1.10	Removing and installing front belt end fitting	104
1.11	Removing and installing rear outer belt end fitting	104
1.12	Removing and installing rear centre belt end anchor	105
1.13	Removing and installing belt height adjuster	106
1.14	Removing and installing front belt buckle	107
1.15	Removing and installing rear belt buckle	109
2	Child seat anchors	112
2.1	Assembly overview – rear child seat anchors	112
2.2	Removing and installing rear child seat anchors	113
2.3	Removing and installing cover for Top Tether child seat anchor	113
3	Airbag system	115
3.1	Overview of fitting locations – airbag system	115
4	Airbag control unit	118
4.1	Assembly overview – airbag control unit	118
4.2	Removing and installing airbag control unit J234	118
5	Front airbag, driver side	121
5.1	Assembly overview – front airbag, driver side	121
5.2	Removing and installing airbag unit with igniter	126
5.3	Renewing connector on airbag	138
6	Front passenger airbag	144
6.1	Assembly overview – front passenger airbag	144
6.2	Removing and installing front passenger airbag unit with igniter	144
6.3	Removing and installing key-operated switch to deactivate airbag on front passenger side	148



7	Side airbags	149
7.1	Assembly overview – front side airbag	149
7.2	Assembly overview - rear side airbag	149
7.3	Removing and installing front side airbag with igniter	150
7.4	Removing and installing rear side airbag with igniter	153
8	Curtain airbags	155
8.1	Assembly overview – curtain airbag	155
8.2	Removing and installing curtain airbag with igniter	155
9	Knee airbags	161
9.1	Assembly overview - knee airbag	161
9.2	Removing and installing knee airbag with igniter	162
10	Airbag crash sensors	165
10.1	Overview of fitting locations – airbag crash sensors	165
10.2	Removing and installing front airbag crash sensor, driver side G190	166
10.3	Removing and installing front side airbag crash sensor G179/G180	169
10.4	Removing and installing rear side airbag crash sensor G256/G257	173
11	Seat belt verification	176
11.1	Removing and installing Seat occupied sensor, front passenger side G128	176
12	Pedestrian protection	177
12.1	Assembly overview - pedestrian protection	177
12.2	Removing and installing centre crash sensor for pedestrian protection G693	179
12.3	Removing and installing pedestrian protection system; crash sensor for pedestrian protection G570/G571	181
12.4	Pedestrian protection system; Removing and installing trigger for pedestrian protection G598/G599	183
12.5	Remove and installing front pressure hose sensor for pedestrian protection G579	187
70	Trim, insulation	189
1	Front door trims	189
1.1	Assembly overview – front door trim	189
1.2	Removing and installing front door trim	191
1.3	Removing and installing interior door handle	195
1.4	Removing and installing trim	197
2	Rear door trims	200
2.1	Assembly overview – rear door trim	200
2.2	Removing and installing interior door handle	201
2.3	Removing and installing rear door trim	202
2.4	Removing and installing trim	207
3	Dash panel	209
3.1	Assembly overview - dash panel	209
3.2	Assembly overview - cover and trim for Head-up Display	211
3.3	Removing and installing dash panel end cover	212
3.4	Removing and installing dash panel trim	213
3.5	Removing and installing light switch trim	214
3.6	Removing and installing radio/navigation system mounting frame	215
3.7	Removing and installing dash panel	217
3.8	Dash panel; Removing and installing cover for dash panel/head-up display	227
3.9	Removing and installing cover for Head-up Display	228
3.10	Removing and installing dash panel vents	230
3.11	Removing and installing side defroster vent	231
3.12	Removing and installing dash panel insert trim	231
4	Central tube for dash panel	235
4.1	Assembly overview – central tube for dash panel	235
4.2	Removing and installing central tube for dash panel	237
4.3	Removing and installing crash bar	243



5	Interior trims	245
5.1	Overview of fitting locations – interior trims	245
5.2	Assembly overview – sill panel moulding	246
5.3	Assembly overview - A-pillar trim	247
5.4	Assembly overview – B-pillar trim	250
5.5	Assembly overview - C-pillar trim	251
5.6	Assembly overview – wheel housing trim	252
5.7	Assembly overview – foot rest and floor covering	253
5.8	Removing and installing sill panel moulding	255
5.9	Removing and installing A-pillar trim	257
5.10	Removing and installing A-pillar gap cover	265
5.11	Removing and installing B-pillar trim	266
5.12	Removing and installing C-pillar trim	269
5.13	Removing and installing wheel housing trims	271
5.14	Removing and installing foot rest	273
5.15	Removing and installing floor covering	276
6	Luggage compartment trims	278
6.1	Overview of fitting locations – luggage compartment trims	278
6.2	Assembly overview – luggage compartment side trim	281
6.3	Assembly overview – luggage compartment floor	285
6.4	Assembly overview – lower rear lid trim	286
6.5	Assembly overview – upper rear lid trim	287
6.6	Removing and installing lower rear lid trim	288
6.7	Removing and installing upper rear lid trim	290
6.8	Removing and installing luggage compartment side trim	291
6.9	Removing and installing lock carrier trim	295
6.10	Removing and installing fastening rings	296
6.11	Removing and installing support for luggage compartment floor covering	297
6.12	Removing and installing bag hooks	299
7	Roof trims	300
7.1	Assembly overview – moulded headliner	300
7.2	Removing and installing moulded headliner	300
7.3	Installing roof reinforcement to body	304
72	Seat frames	308
1	Overview of seat variants	308
1.1	Overview of fitting locations – seat variants	308
1.2	Securing front seat to seat repair stand	308
2	Front seats	311
2.1	Overview of fitting locations – electrical and electronic components	311
2.2	Assembly overview – front seat	316
2.3	Assembly overview – front backrest	322
2.4	Assembly overview – seat pan	326
2.5	Assembly overview – seat height adjustment	333
2.6	Assembly overview – seat depth adjustment	334
2.7	Assembly overview - folding tray table	335
2.8	Assembly overview – fire extinguisher	336
2.9	Removing and installing front seat	337
2.10	Removing front seat if seat longitudinal adjustment motor V28/V31 is defective	341
2.11	Connecting and disconnecting airbag adapter	345
2.12	Removing and installing seat height adjustment handle	346
2.13	Removing and installing seat trim	348
2.14	Removing and installing bracket for seat trim	354
2.15	Removing and installing lumbar support	356
2.16	Removing and installing seat depth adjuster	358



2.17	Removing and installing seat height adjuster	363
2.18	Removing and installing lower seat pan frame with seat longitudinal adjustment motor V28/V31	365
2.19	Removing and installing seat rake adjustment unit	367
2.20	Removing and installing lumbar support adjuster	369
2.21	Removing and installing backrest adjuster	371
2.22	Removing and installing front backrest	373
2.23	Removing and installing head restraint	376
2.24	Removing and installing head restraint guide	378
2.25	Removing and installing storage compartment	379
2.26	Removing and installing fire extinguisher holder on seat frame	381
2.27	Removing and installing fire extinguisher holder	381
2.28	Removing and installing lumbar support adjustment switch E176/E177	382
2.29	Removing and installing lumbar support adjustment motor V125/V126/V129/V130	383
2.30	Removing and installing seat adjustment operating unit E470/E471	384
2.31	Removing and installing massage control unit J740	385
2.32	Removing and installing seat adjustment control unit	387
3	Rear seats	388
3.1	Assembly overview – bench seat/individual seats	388
3.2	Assembly overview – locking mechanism	389
3.3	Assembly overview – bench seat/individual seats	390
3.4	Assembly overview – centre armrest	393
3.5	Removing and installing head restraint	395
3.6	Removing and installing bench seat/individual seats	396
3.7	Removing and installing rear seat backrest	398
3.8	Removing and installing locking mechanism trim	401
3.9	Removing and installing locking mechanism for load-through hatch	402
3.10	Removing and installing through-loading aperture	403
3.11	Removing and installing centre armrest	405
3.12	Removing and installing back panel trim	406
3.13	Removing and installing head restraint guide	409
3.14	Disconnecting and connecting Bowden cable for remote release mechanism of rear seat backrest	410
3.15	Removing and installing operating handle for remote release mechanism of rear seat backrest	411
3.16	Removing and installing Bowden cable for remote release mechanism of rear seat backrest	413
74	Seat - padding, covers	416
1	Front seat covers and padding	416
1.1	Assembly overview – seat pan cover and padding	416
1.2	Assembly overview - cover and backrest padding	418
1.3	Assembly overview – seat heating element	419
1.4	Assembly overview – backrest heating element	420
1.5	Removing and installing cover and padding in area of seat pan	421
1.6	Removing and installing backrest cover and backrest padding	424
1.7	Separating cover and padding in area of seat pan	429
1.8	Separating cover and padding on backrest	432
1.9	Removing and installing seat heating element Z6/Z8	436
1.10	Removing and installing backrest heating element Z7/Z9	437
2	Rear seat covers and padding	439
2.1	Assembly overview – rear bench seat cover and padding	439
2.2	Assembly overview - rear seat backrest cover and padding	440
2.3	Assembly overview – seat heating element	441
2.4	Removing and installing cover and padding for bench seat/individual seats	442
2.5	Removing and installing backrest cover and backrest padding	444



2.6	Removing and installing cover and padding of load-through hatch	448
2.7	Removing and installing intermediate padding, backrest with load-through hatch	449
2.8	Separating rear bench seat cover and padding	450
2.9	Separating cover and padding of rear seat backrest	452
2.10	Removing and installing seat heating element	452
2.11	Removing and installing backrest heating element	454