



Contents

| | |
|--|-----------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 1.1 Safety measures when working on vehicles with a start/stop system | 1 |
| 1.2 Safety precautions when using testers and measuring instruments during a road test | 1 |
| 1.3 Safety precautions when working on the cooling system | 1 |
| 2 Repair instructions | 2 |
| 2.1 Pipe/wire routing and attachment | 2 |
| 2.2 Contact corrosion | 2 |
| 2.3 Installation requirements for self-adhesive components | 2 |
| 2.4 General notes on the use of adhesives | 3 |
| 2.5 Secured threaded connections | 4 |
| 50 - Body - front | 5 |
| 1 Lock carrier | 5 |
| 1.1 Assembly overview – lock carrier | 5 |
| 1.2 Removing and installing lock carrier | 6 |
| 1.3 Moving to and back from service position | 9 |
| 1.4 Repairing lock carrier | 12 |
| 2 Wing | 15 |
| 2.1 Assembly overview – wing | 15 |
| 2.2 Removing and installing wing | 16 |
| 3 Bulkhead | 21 |
| 3.1 Assembly overview – bulkhead | 21 |
| 3.2 Assembly overview – plenum chamber cover | 21 |
| 3.3 Removing and installing bulkhead | 22 |
| 3.4 Removing and installing plenum chamber cover | 24 |
| 55 - Bonnet, rear lid | 30 |
| 1 Bonnet | 30 |
| 1.1 Assembly overview – bonnet | 30 |
| 1.2 Assembly overview – Bowden cable | 31 |
| 1.3 Removing and installing bonnet | 32 |
| 1.4 Resetting hinge | 35 |
| 1.5 Adjusting bonnet | 38 |
| 1.6 Removing and installing bonnet lock | 44 |
| 1.7 Removing and installing bonnet lock release lever | 49 |
| 1.8 Removing and installing striker pin | 51 |
| 1.9 Removing and installing hinges | 53 |
| 1.10 Removing and installing insulation | 57 |
| 1.11 Removing and installing gas strut | 59 |
| 1.12 Releasing gas from gas strut | 61 |
| 1.13 Removing and installing Bowden cable | 61 |
| 2 Rear lid | 65 |
| 2.1 Assembly overview – rear lid | 65 |
| 2.2 Removing and installing rear lid | 67 |
| 2.3 Adjusting rear lid | 71 |
| 2.4 Removing and installing bonnet lock | 77 |
| 2.5 Removing and installing operating mechanism | 89 |
| 2.6 Removing and installing hinges | 90 |
| 2.7 Removing and installing striker pin | 93 |
| 2.8 Removing and installing rear lid seal | 94 |
| 2.9 Removing and installing gas strut | 96 |



| | | |
|-----------|--|------------|
| 2.10 | Releasing gas from gas strut | 97 |
| 2.11 | Removing and installing rear lid drive unit VX69 | 100 |
| 3 | Tank flap unit | 105 |
| 3.1 | Assembly overview – tank flap unit | 105 |
| 3.2 | Removing and installing tank flap unit | 105 |
| 3.3 | Removing and installing fuel tank flap | 108 |
| 4 | Charging flap unit | 111 |
| 4.1 | Assembly overview – charging flap unit | 111 |
| 4.2 | Removing and installing charging flap unit | 111 |
| 57 | Front doors, door components, central locking | 113 |
| 1 | Door | 113 |
| 1.1 | Assembly overview – door | 113 |
| 1.2 | Removing and installing inner door seal | 116 |
| 1.3 | Removing and installing outer door seal | 118 |
| 1.4 | Removing and installing side member seal | 120 |
| 1.5 | Removing and installing door | 121 |
| 1.6 | Adjusting door | 123 |
| 1.7 | Adjusting striker pin | 125 |
| 1.8 | Removing and installing door arrester | 127 |
| 2 | Door components | 129 |
| 2.1 | Assembly overview – door components | 129 |
| 2.2 | Assembly overview – window regulator | 130 |
| 2.3 | Assembly overview – door handle and door lock | 131 |
| 2.4 | Removing and installing window regulator motor | 133 |
| 2.5 | Removing and installing window regulator | 135 |
| 2.6 | Removing and installing inner door cover | 138 |
| 2.7 | Removing and installing striker pin | 140 |
| 2.8 | Removing and installing cap on door handle | 142 |
| 2.9 | Removing and installing lock cylinder | 148 |
| 2.10 | Removing and installing door handle | 152 |
| 2.11 | Removing and installing mounting bracket | 156 |
| 2.12 | Removing and installing door lock | 158 |
| 2.13 | Removing and installing window channel | 162 |
| 2.14 | Removing and installing outer window slot seal | 165 |
| 2.15 | Removing and installing window slot inner seal | 167 |
| 3 | Central locking | 168 |
| 3.1 | Overview of fitting locations – central locking system | 168 |
| 3.2 | Removing and installing driver door control unit J386 and front passenger door control unit J387 | 170 |
| 3.3 | Removing and installing tank filler flap locking motor V155 | 171 |
| 3.4 | Removing and installing actuator for high-voltage charging flap lock 1 F496 | 173 |
| 3.5 | Removing and installing ignition key battery | 173 |
| 3.6 | Removing and installing cap on ignition key | 175 |
| 58 | Rear doors, door components | 177 |
| 1 | Door | 177 |
| 1.1 | Assembly overview – door | 177 |
| 1.2 | Removing and installing door | 180 |
| 1.3 | Adjusting door | 182 |
| 1.4 | Adjusting striker pin | 184 |
| 1.5 | Removing and installing door arrester | 186 |
| 1.6 | Removing and installing inner door seal | 187 |
| 1.7 | Removing and installing outer door seal | 190 |
| 2 | Door components | 193 |



| | | |
|-----------|--|------------|
| 2.1 | Assembly overview – door components | 193 |
| 2.2 | Assembly overview – window regulator | 195 |
| 2.3 | Assembly overview – door handle and door lock | 195 |
| 2.4 | Removing and installing window regulator motor | 196 |
| 2.5 | Removing and installing window regulator | 199 |
| 2.6 | Removing and installing inner door cover | 202 |
| 2.7 | Removing and installing striker pin | 204 |
| 2.8 | Removing and installing cap on door handle | 206 |
| 2.9 | Removing and installing door handle | 211 |
| 2.10 | Removing and installing mounting bracket | 215 |
| 2.11 | Removing and installing door lock | 217 |
| 2.12 | Removing and installing window channel | 221 |
| 2.13 | Removing and installing outer window slot seal | 224 |
| 2.14 | Removing and installing window slot inner seal | 226 |
| 60 | - Sunroof | 227 |
| 1 | Sliding sunroof | 227 |
| 1.1 | Assembly overview – sliding sunroof | 227 |
| 1.2 | Assembly overview – wind deflector | 229 |
| 1.3 | Removing and installing sunroof panel | 230 |
| 1.4 | Removing and installing rear sunroof panel | 233 |
| 1.5 | Adjusting sunroof panel | 241 |
| 1.6 | Removing and installing sliding sunroof seals | 245 |
| 1.7 | Removing and installing wind deflector | 250 |
| 1.8 | Removing and installing sunroof motor V1 | 251 |
| 1.9 | Removing and installing sunroof roller blind motor V260 | 254 |
| 1.10 | Removing and installing sunroof roller blind control unit J394 | 255 |
| 1.11 | Removing and installing sliding sunroof adjustment control unit J245 | 256 |
| 1.12 | Removing and installing sunroof roller blind | 257 |
| 1.13 | Removing and installing sliding sunroof frame | 262 |
| 1.14 | Removing and installing rear part | 266 |
| 1.15 | Removing and installing tilt mechanism for sliding sunroof | 270 |
| 1.16 | Removing and installing sunroof roller blind cables | 272 |
| 1.17 | Manual operation | 275 |
| 2 | Water drainage hoses | 277 |
| 2.1 | Assembly overview - water drain hoses | 277 |
| 2.2 | Removing and installing water drain hoses | 277 |
| 2.3 | Cleaning water drain hoses | 280 |
| 63 | - Bumpers | 282 |
| 1 | Bumper, front | 282 |
| 1.1 | Assembly overview – bumper cover | 282 |
| 1.2 | Assembly overview - attachments | 285 |
| 1.3 | Assembly overview – bumper carrier | 298 |
| 1.4 | Removing and installing bumper cover | 300 |
| 1.5 | Removing and installing attachments | 306 |
| 1.6 | Repairing bumper cover | 307 |
| 2 | Bumper, rear | 312 |
| 2.1 | Assembly overview – bumper cover | 312 |
| 2.2 | Assembly overview - guides for bumper cover | 313 |
| 2.3 | Assembly overview - attachments | 314 |
| 2.4 | Assembly overview – bumper carrier | 321 |
| 2.5 | Removing and installing bumper cover | 321 |
| 2.6 | Removing and installing bumper carrier | 325 |
| 2.7 | Repairing bumper cover | 327 |
| 2.8 | Guide adjustment | 335 |



| | |
|---|------------|
| 64 - Glazing | 337 |
| 1 Repair instructions | 337 |
| 1.1 Minimum drying times for bonded windows | 337 |
| 1.2 Window repair | 337 |
| 1.3 Installation instructions for bonded windows | 338 |
| 1.4 Preparing old undamaged windows for installing | 339 |
| 1.5 Preparing new windows for installing | 340 |
| 1.6 Preparing body flange for installing | 342 |
| 1.7 Cleaning off excess adhesive | 343 |
| 2 Windscreen | 344 |
| 2.1 Assembly overview – windscreen | 344 |
| 2.2 Removing and installing windscreen | 345 |
| 3 Rear windscreen | 353 |
| 3.1 Assembly overview – rear window | 353 |
| 3.2 Removing and installing rear window | 354 |
| 4 Side windows | 358 |
| 4.1 Assembly overview - rear side windows | 358 |
| 4.2 Removing and installing rear side window | 359 |
| 5 Door windows | 364 |
| 5.1 Assembly overview - front door window | 364 |
| 5.2 Assembly overview - rear door window | 364 |
| 5.3 Removing and installing front door window | 365 |
| 5.4 Removing and installing rear door window | 369 |
| 5.5 Removing and installing fixed front door window | 373 |
| 5.6 Removing and installing fixed rear door window | 374 |
| 66 - Exterior equipment | 377 |
| 1 Radiator grille and front trim | 377 |
| 1.1 Assembly overview – radiator grille | 377 |
| 1.2 Removing and installing radiator grille | 380 |
| 2 Spoiler | 384 |
| 2.1 Assembly overview – spoiler | 384 |
| 2.2 Removing and installing spoiler | 385 |
| 3 Mouldings, trims, extensions | 392 |
| 3.1 Assembly overview – water deflector | 392 |
| 3.2 Assembly overview - wheel arch covers | 393 |
| 3.3 Assembly overview - heat shield | 394 |
| 3.4 Removing and installing water deflector | 396 |
| 3.5 Removing and installing cover | 397 |
| 3.6 Removing and installing B-pillar trim on door | 404 |
| 3.7 Removing and installing trim strip | 406 |
| 3.8 Removing and installing step moulding | 411 |
| 3.9 Removing and installing wheel arch covers | 413 |
| 3.10 Removing and installing underbody heat shield | 420 |
| 4 Noise insulation | 425 |
| 4.1 Assembly overview - noise insulation | 425 |
| 5 Underbody cladding | 431 |
| 5.1 Assembly overview – underbody cladding | 431 |
| 5.2 Removing and installing underbody cladding | 434 |
| 5.3 Removing and installing tunnel cross-piece | 441 |
| 6 Roof moulding and roof railing | 444 |
| 6.1 Assembly overview - roof railing | 444 |
| 6.2 Removing and installing roof railing | 444 |



| | | |
|-----------|--|------------|
| 7 | Exterior mirror | 446 |
| 7.1 | Assembly overview – exterior mirror | 446 |
| 7.2 | Removing and installing exterior mirror | 448 |
| 7.3 | Removing and installing mirror glass | 450 |
| 7.4 | Removing and installing mirror adjustment unit | 452 |
| 7.5 | Removing and installing mirror cover | 454 |
| 7.6 | Removing and installing mirror frame | 455 |
| 8 | Wheel housing liner | 457 |
| 8.1 | Assembly overview – front wheel housing liner | 457 |
| 8.2 | Assembly overview – rear wheel housing liner | 458 |
| 8.3 | Removing and installing front wheel housing liner | 459 |
| 8.4 | Removing and installing rear wheel housing liner | 461 |
| 9 | Lettering and badges | 463 |
| 9.1 | Dimensions - lettering and badges on rear | 463 |
| 9.2 | Dimensions – lettering and badges on sides | 469 |
| 9.3 | Removing and installing badges at front | 472 |
| 9.4 | Renewing lettering and badges at rear | 474 |
| 9.5 | Renewing lettering and badges on sides | 476 |
| 9.6 | Removing and installing lettering and badges for radiator grille | 478 |
| 10 | Special add-on parts | 480 |
| 10.1 | Assembly overview – special add-on parts | 480 |
| 11 | Towing bracket | 481 |
| 11.1 | Assembly overview – towing bracket | 481 |
| 11.2 | Assembly overview – trailer towing coupling, hybrid vehicles | 482 |
| 11.3 | Removing and installing carrier for trailer towing coupling | 484 |
| 11.4 | Removing and installing towing bracket | 485 |
| 11.5 | Removing and installing trigger unit | 487 |