



Contents

| | |
|---|------------|
| 00 - Technical data | 1 |
| 1 Safety information | 1 |
| 2 Identification | 2 |
| 3 Repair instructions | 3 |
| 3.1 General repair instructions | 3 |
| 4 Technical data | 4 |
| 4.1 Allocation gearbox - engine | 4 |
| 4.2 Capacities | 4 |
| 5 Overview - power transmission | 5 |
| 6 Electrical components | 6 |
| 6.1 Overview of fitting locations - electrical components | 6 |
| 30 - Clutch | 7 |
| 1 Clutch mechanism | 7 |
| 1.1 Assembly overview - clutch release mechanism | 7 |
| 1.2 Removing and installing clutch slave cylinder together with release bearing | 7 |
| 1.3 Repairing clutch release mechanism | 9 |
| 2 Clutch | 10 |
| 2.1 Assembly overview - clutch | 10 |
| 2.2 Removing and installing clutch | 11 |
| 34 - Controls, housing | 22 |
| 1 Selector mechanism | 22 |
| 1.1 Renewing selector shaft seal | 22 |
| 2 Removing and installing gearbox | 24 |
| 3 Transporting gearbox | 25 |
| 4 Dismantling and assembling gearbox | 27 |
| 4.1 Assembly overview - gearbox | 27 |
| 4.2 Assembly overview - selector unit | 29 |
| 4.3 Removing and installing selector unit | 30 |
| 4.4 Dismantling and assembling gearbox | 32 |
| 5 Gearbox housing, clutch housing | 55 |
| 5.1 Assembly overview - gearbox housing | 55 |
| 5.2 Assembly overview - clutch housing | 58 |
| 5.3 Repairing gearbox housing | 60 |
| 5.4 Repairing clutch housing | 68 |
| 6 Securing to engine and gearbox support | 75 |
| 7 Gear oil | 76 |
| 35 - Gears, shafts | 77 |
| 1 Input shaft | 77 |
| 1.1 Assembly overview - input shaft | 77 |
| 1.2 Dismantling and assembling input shaft | 80 |
| 1.3 Renewing input shaft seal | 96 |
| 2 Output shaft | 98 |
| 2.1 Assembly overview - output shaft | 98 |
| 2.2 Dismantling and assembling output shaft | 99 |
| 3 Reverse shaft | 110 |
| 3.1 Assembly overview - reverse shaft | 110 |
| 3.2 Dismantling and assembling reverse shaft | 110 |



| | | |
|-----------|---|------------|
| 3.3 | Adjusting reverse shaft | 112 |
| 39 | - Final drive - differential | 117 |
| 1 | Oil seals | 117 |
| 1.1 | Overview of fitting locations - oil seals | 117 |
| 1.2 | Renewing left seal | 117 |
| 1.3 | Renewing right seal | 120 |
| 2 | Differential | 124 |
| 2.1 | Adjusting differential | 124 |
| 3 | Adjustment overview | 130 |