



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 All-wheel drive - notes on performance test	1
2 Identification	2
2.1 Gearbox identification	2
3 Technical data	4
3.1 Capacities	4
4 Overview - power transmission	5
4.1 Overview - power transmission - front-wheel drive	5
4.2 Overview - power transmission - all-wheel drive	6
5 Electrical components	9
5.1 Overview of fitting locations - electrical components	9
6 Repair instructions	11
6.1 General repair instructions	11
30 - Clutch	15
1 Clutch mechanism	15
1.1 Overview of fitting locations – clutch mechanism	15
1.2 Assembly overview - pedal cluster	16
1.3 Assembly overview - clutch hydraulics	18
1.4 Removing and installing bearing bush	22
1.5 Checking clutch master cylinder and clutch slave cylinder	23
1.6 Removing and installing clutch position sender G476	24
1.7 Removing and installing return spring	25
1.8 Removing and installing over-centre spring	28
1.9 Removing and installing clutch pedal	32
1.10 Removing and installing mounting bracket	33
1.11 Removing and installing clutch master cylinder	38
1.12 Removing and installing bleeder	39
1.13 Removing and installing lines for clutch mechanism	42
1.14 Bleeding clutch mechanism	46
2 Clutch	48
2.1 Determining make of clutch	48
34 - Controls, housing	50
1 Selector mechanism	50
1.1 Installation position - selector mechanism	50
1.2 Assembly overview – gear knob and cover	51
1.3 Assembly overview - selector mechanism	51
1.4 Removing and installing gear knob	53
1.5 Removing and installing selector mechanism	55
1.6 Repairing selector mechanism	59
1.7 Adjusting selector mechanism	64
1.8 Checking selector mechanism	68
2 Removing and installing gearbox	69
2.1 Removing gearbox	69
2.2 Installing gearbox	82
2.3 Specified torques for gearbox	95
3 Assembly mountings	96
3.1 Assembly overview - assembly mountings	96



4	Bevel box	100
4.1	Assembly overview - bevel box	100
4.2	Distinguishing between different types of bevel boxes	102
4.3	Removing bevel box	102
4.4	Installing bevel box	109
5	Transporting gearbox	116
6	Gear oil	117
6.1	Distinguishing between different manual gearbox types when filling oil	117
6.2	Checking gear oil level	117
7	Securing to engine and gearbox support	121
8	Dismantling and assembling gearbox	122
8.1	Assembly overview - selector unit	122
8.2	Removing and installing selector unit with gearbox installed	123
8.3	Renewing selector shaft seal	127
9	Gearbox housing, clutch housing	130
35 - Gears, shafts		131
1	Input shaft	131
2	Output shaft	132
39 - Final drive - differential		133
1	Oil seals	133
1.1	Overview of fitting locations - oil seals	133
1.2	Renewing left seal	135
1.3	Renewing right seal	138
2	Differential	149
3	Components of bevel box	150
3.1	Assembly overview - components of bevel box	150
3.2	Renewing bevel box seals	156
3.3	Renewing output flange and redetermining thickness of shim	183
3.4	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft	184
4	Gear oil	188
4.1	Checking gear oil level	188