



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Notes on performance test	2
2 Identification	3
2.1 Gearbox identification	3
3 Technical data	4
3.1 Allocation gearbox - engine	4
3.2 Capacities	4
3.3 Calculation of gear ratios	5
4 Overview - power transmission	6
5 Electrical components	8
5.1 Overview of fitting locations - electrical components	8
6 Repair instructions	9
6.1 General repair instructions	9
30 - Clutch	13
1 Clutch mechanism	13
1.1 Overview of fitting locations – clutch mechanism	13
1.2 Assembly overview - pedal cluster	15
1.3 Assembly overview - clutch hydraulics	17
1.4 Assembly overview - clutch release mechanism	20
1.5 Removing and installing bearing bush	21
1.6 Checking clutch master cylinder and clutch slave cylinder	22
1.7 Removing and installing clutch position sender G476	23
1.8 Removing and installing return spring	23
1.9 Removing and installing over-centre spring	26
1.10 Removing and installing clutch pedal	28
1.11 Removing and installing mounting bracket	30
1.12 Removing and installing clutch master cylinder	33
1.13 Removing and installing bleeder	34
1.14 Removing and installing lines for clutch mechanism	35
1.15 Removing and installing clutch slave cylinder together with release bearing	38
1.16 Bleeding clutch mechanism	40
1.17 Repairing clutch release mechanism	41
2 Clutch	43
2.1 Assembly overview - clutch	43
2.2 Removing and installing clutch	46
34 - Controls, housing	59
1 Selector mechanism	59
1.1 Installation position - selector mechanism	59
1.2 Assembly overview – gear knob and cover	61
1.3 Assembly overview - selector mechanism	62
1.4 Removing and installing gear knob	63
1.5 Removing and installing selector mechanism	65
1.6 Repairing selector mechanism	67
1.7 Adjusting selector mechanism	71
1.8 Checking selector mechanism	73
2 Removing and installing gearbox	74
2.1 Removing gearbox	74



2.2	Installing gearbox	83
2.3	Specified torques for gearbox	92
3	Assembly mountings	93
3.1	Assembly overview - assembly mountings	93
4	Bevel box	95
4.1	Assembly overview - bevel box	95
4.2	Distinguishing between different types of bevel boxes	96
4.3	Removing bevel box	97
4.4	Installing bevel box	103
5	Transporting gearbox	108
6	Gear oil	109
6.1	Checking gear oil level	109
7	Securing to engine and gearbox support	110
7.1	Installing manual gearbox to engine and gearbox support	110
7.2	Installing bevel box to engine and gearbox support	111
8	Dismantling and assembling gearbox	113
8.1	Schematic overview - gearbox	113
8.2	Assembly overview - gearbox	114
8.3	Assembly overview - gearbox housing and selector mechanism	115
8.4	Assembly overview - selector unit	117
8.5	Assembly overview - shafts, differential, selector mechanism	119
8.6	Assembly overview - selector forks	121
8.7	Repairing selector unit	122
8.8	Renewing selector shaft seal	123
8.9	Dismantling and assembling gearbox	124
9	Gearbox housing, clutch housing	136
9.1	Assembly overview - gearbox housing	136
9.2	Assembly overview - clutch housing	138
9.3	Repairing gearbox housing	140
9.4	Repairing clutch housing	143
35 - Gears, shafts		145
1	Input shaft	145
1.1	Assembly overview - input shaft	145
1.2	Dismantling and assembling input shaft	147
1.3	Renewing input shaft seal	153
2	Output shaft	156
2.1	Assembly overview - output shaft	156
2.2	Dismantling and assembling output shaft	162
39 - Final drive - differential		193
1	Oil seals	193
1.1	Overview of fitting locations - seals	193
1.2	Renewing left seal	194
1.3	Renewing right oil seal	197
2	Differential	203
2.1	Assembly overview - differential	203
2.2	Dismantling and assembling differential	205
2.3	Adjusting differential	209
3	Components of bevel box	215
3.1	Assembly overview - components of bevel box	215
3.2	Renewing bevel box seals	219
3.3	Renewing needle bearing (polygon bearing) on stub shaft of bevel box	232
4	Gear oil	238



4.1	Checking gear oil level	238
4.2	Draining and filling gear oil	241