



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when using testers and measuring instruments during a road test	1
1.2 Safety precautions when working on vehicles with a start/stop system	2
1.3 All-wheel drive - notes on performance test	2
<b>2 Identification</b>	<b>3</b>
2.1 Gearbox identification	3
<b>3 Technical data</b>	<b>5</b>
3.1 Allocation gearbox - engine	5
3.2 Capacities	7
3.3 Calculation of gear ratios	7
<b>4 Overview - power transmission</b>	<b>9</b>
4.1 Overview - power transmission - front-wheel drive	9
4.2 Overview - power transmission - all-wheel drive	11
<b>5 Electrical components</b>	<b>13</b>
5.1 Overview of fitting locations - electrical components	13
<b>6 Repair notes</b>	<b>14</b>
6.1 General repair instructions	14
<b>30 - Clutch</b>	<b>17</b>
<b>1 Clutch operation</b>	<b>17</b>
1.1 Overview of fitting locations – clutch mechanism	17
1.2 Assembly overview - pedal cluster	19
1.3 Assembly overview - clutch hydraulics	21
1.4 Assembly overview - clutch release mechanism	24
1.5 Removing and installing bearing bush	25
1.6 Checking clutch master cylinder and clutch slave cylinder	26
1.7 Removing and installing clutch position sender G476	26
1.8 Removing and installing return spring	27
1.9 Removing and installing over-centre spring	29
1.10 Removing and installing clutch pedal	32
1.11 Removing and installing mounting bracket	33
1.12 Removing and installing clutch master cylinder	38
1.13 Removing and installing bleeder	38
1.14 Removing and installing lines for clutch mechanism	40
1.15 Removing and installing clutch slave cylinder together with release bearing	43
1.16 Bleeding clutch mechanism	44
1.17 Repairing clutch release mechanism	46
<b>2 Clutch</b>	<b>48</b>
2.1 Determining make of clutch	48
2.2 Assembly overview - clutch	49
2.3 Removing and installing clutch	52
<b>34 - Controls, housing</b>	<b>66</b>
<b>1 Selector mechanism</b>	<b>66</b>
1.1 Installation position - selector mechanism	66
1.2 Assembly overview - gear knob and cover	68
1.3 Assembly overview - selector mechanism	69
1.4 Removing and installing gear knob	70
1.5 Removing and installing selector mechanism	72
1.6 Repairing selector mechanism	76
1.7 Adjusting selector mechanism	79



1.8	Checking selector mechanism	82
<b>2</b>	<b>Removing and installing gearbox</b>	<b>83</b>
2.1	Removing gearbox	83
2.2	Installing gearbox	137
2.3	Specified torques for gearbox	173
<b>3</b>	<b>Assembly mounting</b>	<b>175</b>
3.1	Assembly overview - assembly mountings	175
<b>4</b>	<b>Bevel box</b>	<b>178</b>
4.1	Assembly overview - bevel box	178
4.2	Distinguishing between different types of bevel boxes	179
4.3	Removing bevel box	180
4.4	Installing bevel box	186
<b>5</b>	<b>Transporting gearbox</b>	<b>191</b>
<b>6</b>	<b>Gear oil</b>	<b>192</b>
6.1	Distinguishing between different manual gearbox types when filling oil	192
6.2	Checking gear oil level	192
<b>7</b>	<b>Securing to engine and gearbox support</b>	<b>196</b>
7.1	Installing manual gearbox to engine and gearbox support	196
7.2	Installing bevel box to engine and gearbox support	197
<b>8</b>	<b>Dismantling and assembling gearbox</b>	<b>199</b>
8.1	Schematic overview - gearbox	199
8.2	Assembly overview - gearbox	201
8.3	Assembly overview - gearbox housing and selector mechanism	203
8.4	Assembly overview - selector unit	205
8.5	Assembly overview - shafts, differential, selector mechanism	206
8.6	Assembly overview - selector forks	210
8.7	Renewing selector shaft seal	210
8.8	Dismantling and assembling gearbox	212
<b>9</b>	<b>Gearbox housing, clutch housing</b>	<b>228</b>
9.1	Assembly overview - gearbox housing	228
9.2	Assembly overview - clutch housing	230
9.3	Repairing gearbox housing	231
9.4	Repairing clutch housing	239
<b>35 - Gears, shafts</b>		<b>243</b>
<b>1</b>	<b>Input shaft</b>	<b>243</b>
1.1	Assembly overview - input shaft	243
1.2	Dismantling and assembling input shaft	244
1.3	Renewing input shaft seal	248
<b>2</b>	<b>Output shaft</b>	<b>250</b>
2.1	Assembly overview - output shaft	250
2.2	Dismantling and assembling output shaft	258
2.3	Adjusting output shaft	280
<b>39 - Final drive - differential</b>		<b>291</b>
<b>1</b>	<b>Oil seals</b>	<b>291</b>
1.1	Overview of fitting locations - seals	291
1.2	Renewing left seal	292
1.3	Renewing right oil seal	295
<b>2</b>	<b>Differential</b>	<b>303</b>
2.1	Assembly overview - differential	303
2.2	Dismantling and assembling differential	308
2.3	Adjusting differential	319
<b>3</b>	<b>Adjustment overview</b>	<b>324</b>



<b>4</b>	<b>Components of bevel box</b> .....	<b>325</b>
4.1	Assembly overview - components of bevel box .....	325
4.2	Renewing bevel box seals .....	330
4.3	Renewing output flange and redetermining thickness of shim .....	352
4.4	Renewing needle bearing (polygon bearing) and oil seal for right flange shaft .....	353
<b>5</b>	<b>Gear oil</b> .....	<b>357</b>
5.1	Checking gear oil level .....	357