



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 General safety provisions	1
1.2 Safety measures when working on vehicles with a start/stop system	2
1.3 Notes on tow-starting/towing	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
<b>2 Identification</b>	<b>4</b>
2.1 Gearbox identification	4
<b>3 Repair instructions</b>	<b>5</b>
3.1 General information	5
3.2 Rules for cleanliness	6
3.3 General repair instructions	6
3.4 Gaskets and seals	7
3.5 Nuts and bolts	8
<b>4 Technical data</b>	<b>9</b>
4.1 Capacities	9
<b>5 Electrical components</b>	<b>10</b>
5.1 Overview of fitting locations - electrical components	10
<b>30 - Clutch</b>	<b>11</b>
<b>1 Clutch</b>	<b>11</b>
1.1 Assembly overview - dual clutch	11
1.2 Removing and installing clutch end cover	12
1.3 Removing dual clutch	17
1.4 Installing dual clutch	20
<b>34 - Controls, housing</b>	<b>31</b>
<b>1 Mechatronic unit</b>	<b>31</b>
1.1 Removing and installing mechatronic unit for dual clutch gearbox J743 (gearbox installed)	31
1.2 Removing and installing gearbox input speed sender G182 and oil temperature sender in multi-plate clutch G509 up to gearbox date 05/15	39
<b>2 Bevel box</b>	<b>41</b>
2.1 Distinguishing between different types of bevel boxes	41
2.2 Removing and installing bevel box	42
2.3 Detaching bevel box from gearbox - gearbox removed	71
<b>3 Selector mechanism</b>	<b>76</b>
3.1 Assembly overview - selector mechanism	76
3.2 Manual release from position P	79
3.3 Removing and installing selector lever handle	81
3.4 Moving push-button in the handle to installation position	88
3.5 Removing and installing selector mechanism	90
3.6 Removing and installing gear selector cable	99
3.7 Checking selector mechanism	104
3.8 Checking and adjusting selector lever cable	105
3.9 Renewing selector shaft seal	107
<b>4 Removing and installing gearbox</b>	<b>110</b>
4.1 Specified torques for gearbox	110
4.2 Removing gearbox	112
4.3 Installing gearbox	169
<b>5 Assembly mountings</b>	<b>171</b>
5.1 Assembly overview - assembly mountings	171
<b>6 Transporting gearbox</b>	<b>175</b>



<b>7</b>	<b>Dismantling and assembling gearbox</b> .....	<b>176</b>
7.1	Assembly overview - gearbox .....	176
<b>8</b>	<b>Securing to engine and gearbox support</b> .....	<b>182</b>
<b>9</b>	<b>Gear oil circuit</b> .....	<b>183</b>
9.1	Removing and installing gear oil cooler .....	183
9.2	Removing and installing gear oil filter .....	185
<b>10</b>	<b>Gear oil</b> .....	<b>188</b>
10.1	Checking gear oil level .....	188
10.2	Draining and filling gear oil .....	190
<b>35 - Gears, shafts</b> .....		<b>196</b>
1	Currently, no repairs can be made to gears and shafts .....	196
<b>39 - Final drive - differential</b> .....		<b>197</b>
<b>1</b>	<b>Gear oil</b> .....	<b>197</b>
1.1	Checking gear oil level .....	197
1.2	Draining and filling gear oil .....	199
<b>2</b>	<b>Oil seals</b> .....	<b>206</b>
2.1	Overview of fitting locations - seals .....	206
2.2	Renewing left seal .....	206
2.3	Renewing right seal .....	210
<b>3</b>	<b>Components of bevel box</b> .....	<b>214</b>
3.1	Assembly overview - components of bevel box .....	214
3.2	Renewing bevel box seals .....	218
3.3	Renewing needle bearing (polygon bearing) for stub shaft .....	239