



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on a high-voltage system	1
1.2 Safety precautions when working in the vicinity of high-voltage components	2
1.3 Safety regulations for working on fuel supply	2
1.4 Safety precautions when using testers and measuring instruments during a road test	2
1.5 Safety precautions when working on ignition system	3
1.6 Safety precautions when working on the cooling system	3
<b>2 Identification</b>	<b>4</b>
2.1 Engine number/engine data	4
<b>3 Repair instructions</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 Foreign objects in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	7
3.5 Fitting radiator and condensers	7
3.6 Checking vacuum system	7
<b>4 Hazard classification of high-voltage system</b>	<b>8</b>
<b>10 - Removing and installing engine</b>	<b>16</b>
<b>1 Removing and installing engine</b>	<b>16</b>
1.1 Removing engine	16
1.2 Supporting engine and gearbox using scissor-type assembly platform VAS 6131 B	25
1.3 Separating engine and gearbox	31
1.4 Securing engine on engine and gearbox support	35
1.5 Installing engine	37
<b>2 Assembly mountings</b>	<b>42</b>
2.1 Assembly overview – assembly mountings	42
2.2 Removing and installing engine mounting	45
2.3 Removing and installing gearbox mounting	46
2.4 Removing and installing pendulum support	47
2.5 Supporting engine in installation position	48
2.6 Checking adjustment of assembly mountings	68
2.7 Adjusting assembly mountings	69
<b>3 Engine cover panel</b>	<b>72</b>
3.1 Removing and installing engine cover	72
<b>13 - Crankshaft group</b>	<b>73</b>
<b>1 Cylinder block (pulley end)</b>	<b>73</b>
1.1 Assembly overview - sealing flange, vibration-damper end	73
1.2 Removing and installing engine support	75
1.3 Removing and installing vibration damper	76
1.4 Renewing crankshaft oil seal - belt pulley end	78
1.5 Removing and installing sealing flange on pulley end	81
<b>2 Cylinder block, gearbox end</b>	<b>85</b>
2.1 Assembly overview - cylinder block, gearbox end	85
2.2 Removing and installing flywheel	87
2.3 Removing and installing sealing flange on gearbox side	88
<b>3 Crankshaft</b>	<b>101</b>
3.1 Crankshaft dimensions	101
3.2 Measuring axial clearance of crankshaft	101
<b>4 Pistons and conrods</b>	<b>103</b>



4.1	Assembly overview - pistons and conrods	103
4.2	Removing and installing pistons	107
4.3	Checking pistons and cylinder bores	108
4.4	Checking radial clearance of conrods	110
4.5	Removing and installing oil spray jets	111
4.6	Setting piston to TDC position	112
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>118</b>
<b>1</b>	<b>Cylinder head</b>	<b>118</b>
1.1	Assembly overview - cylinder head	118
1.2	Assembly overview - camshaft housing	120
1.3	Removing and installing cylinder head	123
1.4	Removing and installing camshaft housing	129
1.5	Checking compression	141
<b>2</b>	<b>Toothed belt drive</b>	<b>144</b>
2.1	Assembly overview - toothed belt cover	144
2.2	Assembly overview - toothed belt	144
2.3	Removing and installing toothed belt guard	146
2.4	Preassembling and installing valve timing tool	147
2.5	Removing and installing toothed belt	156
2.6	Checking valve timing	162
2.7	Adjusting valve timing	164
2.8	Removing toothed belt from camshaft	175
<b>3</b>	<b>Valve gear</b>	<b>181</b>
3.1	Assembly overview - valve gear	181
3.2	Measuring axial play of camshaft	183
3.3	Removing and installing camshaft oil seal	184
3.4	Removing and installing camshaft adjuster	191
3.5	Removing and installing camshaft control valve 1 N205	201
3.6	Removing and installing exhaust camshaft control valve 1 N318	202
3.7	Removing and installing valve stem seals	203
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>213</b>
4.1	Checking valve guides	213
4.2	Checking valves	214
4.3	Valve dimensions	214
<b>17</b>	<b>Lubrication</b>	<b>215</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>215</b>
1.1	Assembly overview - sump/oil pump	215
1.2	Engine oil:	219
1.3	Removing and installing lower part of sump	219
1.4	Removing and installing upper part of sump	225
1.5	Removing and installing oil pump	230
1.6	Removing and installing oil level and oil temperature sender G266	232
<b>2</b>	<b>Engine oil cooler</b>	<b>233</b>
2.1	Assembly overview - engine oil cooler	233
2.2	Removing and installing engine oil cooler	233
<b>3</b>	<b>Crankcase ventilation</b>	<b>235</b>
3.1	Assembly overview - crankcase breather system	235
3.2	Removing and installing oil separator	236
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>240</b>
4.1	Assembly overview - oil filter/oil pressure switch	240
4.2	Removing and installing oil pressure switch F22	242
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	244
4.4	Removing and installing oil pressure regulating valve N428	246



4.5	Checking oil pressure .....	246
<b>19</b>	<b>Cooling .....</b>	<b>248</b>
<b>1</b>	<b>Cooling system/coolant .....</b>	<b>248</b>
1.1	Connection diagram - coolant hoses .....	248
1.2	Coolant hose schematic diagram, high-voltage system .....	252
1.3	Checking cooling system for leaks .....	255
1.4	Checking cooling system of high-voltage system for leaks .....	259
1.5	Draining and adding coolant .....	270
1.6	Draining and adding coolant, high-voltage system .....	277
1.7	Checking filling quality, high-voltage system .....	286
<b>2</b>	<b>Coolant pump, regulation of cooling system .....</b>	<b>290</b>
2.1	Assembly overview - coolant pump, thermostat .....	290
2.2	Overview of fitting locations - electric coolant pumps .....	293
2.3	Assembly overview - electric coolant pump .....	294
2.4	Assembly overview - coolant temperature sender .....	296
2.5	Assembly overview - coolant valves .....	296
2.6	Removing and installing electric coolant pump .....	298
2.7	Removing and installing coolant pump .....	312
2.8	Removing and installing thermostat .....	315
2.9	Removing and installing toothed belt pulley for coolant pump .....	319
2.10	Removing and installing coolant temperature sender G62 .....	321
2.11	Removing and installing radiator outlet coolant temperature sender G83 .....	322
2.12	Removing and installing coolant valves .....	324
2.13	Removing and installing coolant temperature sender for heater G241 .....	331
2.14	Removing and installing engine temperature sender 2 G788 .....	332
<b>3</b>	<b>Coolant pipes .....</b>	<b>334</b>
3.1	Assembly overview - coolant pipes .....	334
3.2	Removing and installing coolant pipes .....	335
<b>4</b>	<b>Radiator, radiator fan .....</b>	<b>344</b>
4.1	Assembly overview - radiator/radiator fan .....	344
4.2	Assembly overview - radiator cowl and radiator fan .....	347
4.3	Removing and installing radiator .....	348
4.4	Removing and installing radiator cowl .....	363
4.5	Removing and installing radiator fan V7 .....	370
<b>21</b>	<b>Turbocharging/supercharging .....</b>	<b>371</b>
<b>1</b>	<b>Turbocharger .....</b>	<b>371</b>
1.1	Assembly overview - turbocharger .....	371
1.2	Removing and installing turbocharger .....	376
1.3	Removing and installing charge pressure positioner V465 .....	382
1.4	Removing and installing connection for turbocharger .....	385
<b>2</b>	<b>Charge air system .....</b>	<b>389</b>
2.1	Assembly overview - charge air system .....	389
2.2	Removing and installing charge pressure sender GX26 .....	391
2.3	Removing and installing charge air cooler .....	392
2.4	Checking charge air system for leaks .....	393
2.5	Removing and installing air pipe .....	395
<b>24</b>	<b>Mixture preparation - injection .....</b>	<b>398</b>
<b>1</b>	<b>Injection system .....</b>	<b>398</b>
1.1	Overview of fitting locations - injection system .....	398
<b>2</b>	<b>Injectors .....</b>	<b>406</b>
2.1	Assembly overview - fuel rail with injectors .....	406
2.2	Removing and installing fuel rail .....	410



2.3	Removing and installing injectors	411
2.4	Cleaning injectors	426
<b>3</b>	<b>Air filter</b>	<b>428</b>
3.1	Assembly overview - air filter housing	428
3.2	Removing and installing air filter housing	430
3.3	Removing and installing resonator for intake air	431
<b>4</b>	<b>Intake manifold</b>	<b>433</b>
4.1	Assembly overview – intake manifold	433
4.2	Removing and installing intake manifold	435
4.3	Removing and installing throttle valve module GX3	438
4.4	Cleaning throttle valve module GX3	439
<b>5</b>	<b>Senders and sensors</b>	<b>441</b>
5.1	Removing and installing fuel pressure sender G247	441
5.2	Checking fuel pressure sender G247	442
5.3	Removing and installing intake manifold sender GX9	446
5.4	Removing and installing pressure differential sender for particulate filter G1037	447
<b>6</b>	<b>Engine control unit</b>	<b>449</b>
6.1	Removing and installing engine control unit J623	449
<b>7</b>	<b>High-pressure pump</b>	<b>454</b>
7.1	Assembly overview - high-pressure pump	454
7.2	Removing and installing high-pressure pump	460
7.3	Removing and installing high-pressure pipe	463
<b>8</b>	<b>Lambda probe</b>	<b>465</b>
8.1	Assembly overview - Lambda probe	465
8.2	Removing and installing Lambda probe 1 before catalytic converter GX10	468
8.3	Removing and installing Lambda probe 1 after catalytic converter GX7	469
<b>26</b>	<b>- Exhaust system</b>	<b>473</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>473</b>
1.1	Assembly overview - silencers	473
1.2	Separating exhaust pipes from silencers	478
1.3	Removing and installing silencer	479
1.4	Installation position of clamp	482
1.5	Aligning exhaust system free of stress	482
1.6	Checking exhaust system for leaks	483
<b>2</b>	<b>Emission control</b>	<b>484</b>
2.1	Assembly overview – emission control	484
2.2	Assembly overview - bracket and pipes for pressure differential sender for particulate filter G1037	490
2.3	Removing and installing catalytic converter	492
2.4	Removing and installing particulate filter	501
<b>3</b>	<b>Exhaust gas temperature regulation</b>	<b>502</b>
3.1	Assembly overview – exhaust gas temperature regulation	502
3.2	Removing and installing parts of exhaust gas temperature regulation	504
<b>28</b>	<b>- Ignition system</b>	<b>507</b>
<b>1</b>	<b>Ignition system</b>	<b>507</b>
1.1	Assembly overview - ignition system	507
1.2	Removing and installing ignition coils with output stage	509
1.3	Removing and installing knock sensor 1 G61	512
1.4	Removing and installing Hall sender	513
1.5	Removing and installing engine speed sender G28	515
<b>93</b>	<b>- Electric drive systems</b>	<b>517</b>
<b>1</b>	<b>Warning stickers</b>	<b>517</b>



1.1	Checking warning stickers .....	517
<b>2</b>	<b>High-voltage components</b> .....	<b>524</b>
2.1	Overview of fitting locations - high-voltage components .....	524
<b>3</b>	<b>High-voltage battery unit</b> .....	<b>527</b>
3.1	Assembly overview - high-voltage battery, Golf ▶08.2020, Passat ▶09.2019 .....	527
3.2	Assembly overview - high-voltage battery, Passat 09.2019▶, Golf 08.2020▶, Tiguan, Arteon .....	528
3.3	Visual inspection of high-voltage battery 1 AX2 .....	529
3.4	Removing and installing high-voltage battery 1 AX2 .....	530
3.5	Leakage test of high-voltage battery 1 AX2 .....	537
3.6	Searching for leaks from high-voltage battery .....	538
3.7	Raising high-voltage battery 1 AX2 .....	538
3.8	Removing and installing battery regulation control unit J840 .....	540
<b>4</b>	<b>Repairing high-voltage battery unit</b> .....	<b>550</b>
4.1	Overview of fitting locations - high-voltage battery 1 AX2 .....	550
4.2	Overview of fitting locations - battery modules .....	553
4.3	Overview of fitting locations - high-voltage connector .....	556
4.4	Assembly overview - battery housing .....	561
4.5	Assembly overview - switching unit for high-voltage battery SX6 .....	564
4.6	Assembly overview - battery module assembly .....	567
4.7	Assembly overview - battery modules .....	570
4.8	Assembly overview - high voltage system connection .....	571
4.9	Assembly overview - cooling system high-voltage battery 1 AX2 .....	573
4.10	Assembly overview - wiring harnesses .....	574
4.11	Diagnosis of high-voltage battery 1 AX2 .....	576
4.12	Leakage test in cooling system of high-voltage battery 1 AX2 .....	576
4.13	Charging and discharging battery modules .....	578
4.14	Opening high-voltage battery 1 AX2 .....	580
4.15	Voltage and insulation measurement .....	585
4.16	Removing and installing switching unit for high-voltage battery SX6 .....	587
4.17	Removing and installing wiring harness for high-voltage battery 1 AX2 .....	597
4.18	Removing and installing coolant pipe .....	602
4.19	Removing and installing battery module assembly .....	605
4.20	Removing and installing battery module assembly wiring harness .....	625
4.21	Removing and installing high voltage system connection .....	626
4.22	Removing and installing coolant temperature sender 1 for high-voltage battery G898 and coolant temperature sender 2 for high-voltage battery G899 .....	629
4.23	Closing high-voltage battery 1 AX2 .....	630
4.24	Removing and installing battery modules J1068/J991 .....	638
4.25	Removing and installing battery modules J992/J993 .....	647
4.26	Removing and installing battery modules J994/J995 .....	655
4.27	Removing and installing battery modules J996/J997 .....	664
<b>5</b>	<b>Power and control electronics for electric drive</b> .....	<b>672</b>
5.1	Assembly overview - power and control electronics for electric drive .....	672
5.2	Assembly overview - mounting for power and control electronics for electric drive .....	676
5.3	Removing and installing power and control electronics for electric drive .....	679
5.4	Removing and installing base retainer for power and control electronics for electric drive JX1 .....	691
5.5	Removing and installing high-voltage system fuse 3 S353 .....	694
<b>6</b>	<b>Charging unit for high-voltage battery</b> .....	<b>700</b>
6.1	Assembly overview – charging unit for high-voltage battery .....	700
6.2	Removing and installing charging unit 1 for high-voltage battery AX4 .....	702
6.3	Removing and installing bracket for charging unit 1 for high-voltage battery AX4 .....	708
<b>7</b>	<b>Electric drive motor</b> .....	<b>711</b>
7.1	Removing and installing three-phase current drive VX54 .....	711



7.2	Removing and installing drive motor temperature sender G712 .....	711
7.3	Removing and installing drive motor rotor position sender 1 G713 .....	711
<b>8</b>	<b>High-voltage cables</b> .....	<b>712</b>
8.1	Overview of fitting locations - high-voltage cables .....	712
8.2	Removing and installing high-voltage wiring harness for high-voltage battery .....	716
8.3	Removing and installing high-voltage wiring harness for drive motor .....	727
8.4	Removing and installing high-voltage cable for power and control electronics for electric drive .....	734
8.5	Removing and installing high-voltage cable for high-voltage heater (PTC) .....	736
8.6	Removing and installing high-voltage cable for electrical air conditioner compressor .....	738
<b>9</b>	<b>Charging socket</b> .....	<b>741</b>
9.1	Assembly overview – charging socket .....	741
9.2	Removing and installing high-voltage battery charging socket 1 UX4 .....	746
9.3	Manual release mechanism for charging socket .....	756
9.4	Removing and installing module for battery charge selector buttons EX32 .....	762
<b>10</b>	<b>De-energising high-voltage system</b> .....	<b>765</b>
<b>11</b>	<b>Re-energising high-voltage system</b> .....	<b>767</b>
<b>12</b>	<b>Potential equalisation lines</b> .....	<b>768</b>
12.1	General notes - potential equalisation lines .....	768
12.2	Overview of fitting locations - potential equalisation lines .....	768
12.3	Removing and installing potential equalisation line for high-voltage battery 1 AX2 .....	773