



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on ignition system	2
1.5 Safety precautions when working on the cooling system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	4
2.1 Engine number/engine data	4
3 Repair notes	6
3.1 Rules for cleanliness	6
3.2 Foreign objects in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	6
3.5 Fitting radiator and condensers	7
3.6 Checking vacuum system	7
10 - Removing and installing engine	8
1 Removing and installing engine	8
1.1 Removing engine	8
1.2 Separating engine and gearbox	24
1.3 Securing engine on engine and gearbox support	34
1.4 Installing engine	37
2 Assembly mountings	41
2.1 Assembly overview - assembly mountings	41
2.2 Removing and installing engine mounting	43
2.3 Removing and installing gearbox mounting	44
2.4 Removing and installing pendulum support	46
2.5 Supporting engine in installation position	48
2.6 Checking adjustment of assembly mountings	69
2.7 Adjusting assembly mountings	69
3 Engine cover panel	72
3.1 Removing and installing engine cover	72
13 - Crankshaft group	73
1 Cylinder block (pulley end)	73
1.1 Assembly overview - cylinder block (pulley end)	73
1.2 Removing and installing poly-V belt	76
1.3 Removing and installing tensioner for poly V-belt	77
1.4 Removing and installing vibration damper	78
1.5 Renewing seal for vibration damper	85
1.6 Removing and installing bracket for ancillaries	88
1.7 Removing and installing engine support	90
2 Cylinder block, gearbox end	93
2.1 Assembly overview - cylinder block, gearbox end	93
2.2 Removing and installing flywheel	94
2.3 Removing and installing sealing flange on gearbox side	96
3 Crankshaft	101
3.1 Assembly overview - crankshaft	101
3.2 Crankshaft dimensions	104
3.3 Allocation of main bearing shells	104



3.4	Renewing needle bearing in crankshaft	106
3.5	Measuring axial clearance of crankshaft	108
3.6	Measuring radial clearance of crankshaft	109
3.7	Removing and installing sender wheel	110
4	Balancer shaft	112
4.1	Assembly overview - balance shaft	112
4.2	Removing and installing balance shaft	114
5	Pistons and conrods	121
5.1	Assembly overview - pistons and conrods	121
5.2	Removing and installing pistons	125
5.3	Checking pistons and cylinder bores	127
5.4	Separating new conrod	129
5.5	Checking radial clearance of conrods	129
5.6	Removing and installing oil spray jets	130
15	Cylinder head, valve gear	132
1	Cylinder head	132
1.1	Assembly overview - cylinder head	132
1.2	Removing and installing cylinder head	135
1.3	Assembly overview - vacuum pump	141
1.4	Removing and installing vacuum pump	142
1.5	Checking compression	144
2	Cover for timing chain	147
2.1	Assembly overview - cover for timing chain	147
2.2	Removing and installing timing chain cover	150
3	Chain drive	157
3.1	Assembly overview - camshaft timing chains	157
3.2	Assembly overview - drive chain for balance shaft	160
3.3	Removing and installing camshaft timing chain	162
3.4	Removing and installing drive chain for balance shaft	175
3.5	Checking timing chain	178
4	Valve gear	180
4.1	Assembly overview - valve gear	180
4.2	Removing and installing camshaft	184
4.3	Removing and installing actuators for camshaft adjustment	195
4.4	Removing and installing camshaft control valve 1 N205	197
4.5	Removing and installing exhaust camshaft control valve 1 N318	197
4.6	Removing and installing valve stem oil seals	198
5	Inlet and exhaust valves	209
5.1	Checking valve guides	209
5.2	Checking valves	210
5.3	Valve dimensions	210
17	Lubrication	211
1	Sump, oil pump	211
1.1	Assembly overview - sump/oil pump	211
1.2	Engine oil:	214
1.3	Removing and installing lower part of sump	214
1.4	Removing and installing upper part of sump	220
1.5	Removing and installing oil pump	226
1.6	Removing and installing oil level and oil temperature sender G266	229
2	Engine oil cooler	231
2.1	Assembly overview - engine oil cooler	231
2.2	Removing and installing engine oil cooler	231



3	Crankcase ventilation	234
3.1	Assembly overview - crankcase breather system	234
3.2	Removing and installing oil separator	235
4	Oil filter, oil pressure switch	237
4.1	Assembly overview - oil filter	237
4.2	Assembly overview - oil pressure switches/oil pressure control	237
4.3	Removing and installing piston cooling jet control valve N522	239
4.4	Removing and installing oil pressure switch	240
4.5	Checking oil pressure	244
4.6	Removing and installing oil pressure regulating valve N428	248
19	- Cooling	250
1	Cooling system/coolant	250
1.1	Connection diagram - coolant hoses	250
1.2	Checking cooling system for leaks	252
1.3	Draining and adding coolant	256
1.4	Flushing cooling system	264
2	Coolant pump, regulation of cooling system	288
2.1	Assembly overview - coolant pump, thermostat	288
2.2	Assembly overview - electric coolant pump	290
2.3	Assembly overview - coolant temperature sender	293
2.4	Removing and installing electric coolant pump	294
2.5	Removing and installing coolant pump	297
2.6	Removing and installing toothed belt for coolant pump	300
2.7	Removing and installing coolant valves	301
2.8	Removing and installing actuator for engine temperature regulation N493	306
2.9	Removing and installing coolant temperature sender G62	309
2.10	Removing and installing radiator outlet coolant temperature sender G83	310
3	Coolant pipes	312
3.1	Assembly overview - coolant pipes	312
3.2	Removing and installing coolant pipes	312
3.3	Removing and installing upper coolant pipes	314
4	Radiator, radiator fan	316
4.1	Assembly overview - radiator	316
4.2	Assembly overview - radiator cowl and radiator fan	320
4.3	Removing and installing radiator	322
4.4	Removing and installing radiator cowl	329
4.5	Removing and installing radiator fan	335
21	- Turbocharging/supercharging	338
1	Turbocharger	338
1.1	Assembly overview - turbocharger	338
1.2	Removing and installing turbocharger	342
2	Charge air system	348
2.1	Assembly overview - charge air system	348
2.2	Assembly overview - charge-air hose connections	351
2.3	Removing and installing charge air cooler	351
2.4	Removing and installing charge pressure sender G31	356
2.5	Checking charge air system for leaks	357
2.6	Removing and installing air intake pipe between turbocharger and charge air cooler	359
24	- Mixture preparation - injection	361
1	Injection system	361
1.1	Overview of fitting locations - injection system	361
2	Injectors	373



2.1	Assembly overview - fuel rail with injectors	373
2.2	Removing and installing fuel rail	375
2.3	Removing and installing injectors	376
2.4	Renewing seals on injectors	383
2.5	Cleaning injectors	386
3	Air filter	388
3.1	Assembly overview - air filter housing	388
3.2	Removing and installing air filter housing	391
3.3	Removing and installing air guide on lock carrier	393
4	Intake manifold	396
4.1	Assembly overview – intake manifold	396
4.2	Removing and installing intake manifold	398
4.3	Removing and installing throttle valve module GX3	403
4.4	Cleaning throttle valve module GX3	406
4.5	Checking intake manifold change-over	407
5	Senders and sensors	409
5.1	Removing and installing fuel pressure sender G247	409
5.2	Checking fuel pressure sender G247	412
5.3	Removing and installing fuel pressure sender for low-pressure G410	414
5.4	Removing and installing intake manifold sender GX9	415
5.5	Removing and installing air mass meter G70	416
5.6	Assembly overview - actuator for structure-borne sound and control unit for structure-borne sound, Polo	418
5.7	Removing and installing pressure differential sender for particulate filter G1037	420
6	Engine/motor control unit	422
6.1	Removing and installing engine control unit J623	422
6.2	Removing and installing engine (motor) control unit J623 with protective housing	423
7	High-pressure pump	427
7.1	Assembly overview - high-pressure pump	427
7.2	Removing and installing high-pressure pump	429
7.3	Removing and installing high-pressure pipe	432
8	Lambda probe	436
8.1	Assembly overview - Lambda probe	436
8.2	Removing and installing lambda probe	437
26 - Exhaust system		441
1	Exhaust pipes and silencers	441
1.1	Assembly overview – silencers	441
1.2	Removing and installing silencer	446
1.3	Separating exhaust pipes from silencers	453
1.4	Aligning exhaust system free of stress	459
1.5	Checking exhaust system for leaks	459
2	Emission control	460
2.1	Assembly overview – emission control	460
2.2	Assembly overview – bracket and pipes for pressure differential sender for particulate filter G1037	470
2.3	Removing and installing catalytic converter	471
2.4	Removing and installing holder of pressure differential sender for particulate filter G1037	491
3	Exhaust gas temperature regulation	492
3.1	Assembly overview – exhaust gas temperature regulation	492
3.2	Removing and installing parts of exhaust gas temperature regulation	493
28 - Ignition system		498
1	Ignition system	498
1.1	Assembly overview - ignition system	498



1.2	Removing and installing ignition coils with output stage	500
1.3	Removing and installing knock sensor 1 G61	502
1.4	Removing and installing Hall sender	503
1.5	Removing and installing engine speed sender G28	504