



Contents

00 - Technical data	1
1 Safety information	1
1.1 Safety regulations for working on fuel supply	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on SCR system	2
1.6 Safety precautions when working on exhaust system	3
2 Identification	5
2.1 Engine number/engine data	5
3 Repair instructions	9
3.1 Rules for cleanliness	9
3.2 Foreign bodies in engine	9
3.3 Contact corrosion	9
3.4 Routing and attachment of lines	10
3.5 Fitting radiator and condensers	10
10 - Removing and installing engine	11
1 Removing and installing engine	11
1.1 Removing engine	11
1.2 Separating engine and gearbox	24
1.3 Securing engine on engine and gearbox support	30
1.4 Installing engine	32
2 Assembly mountings	37
2.1 Assembly overview - assembly mountings	37
2.2 Removing and installing engine mounting	41
2.3 Removing and installing gearbox mounting	42
2.4 Removing and installing pendulum support	45
2.5 Supporting engine in installation position	47
2.6 Adjusting assembly mountings	59
2.7 Checking adjustment of assembly mountings	63
3 Engine cover panel	64
3.1 Removing and installing engine cover	64
13 - Crankshaft group	65
1 Cylinder block (pulley end)	65
1.1 Assembly overview - cylinder block (pulley end)	65
1.2 Assembly overview - sealing flange, belt pulley end	67
1.3 Removing and installing poly-V belt	69
1.4 Removing and installing tensioner for poly V-belt	71
1.5 Removing and installing vibration damper	71
1.6 Removing and installing bracket for ancillaries	72
1.7 Removing and installing engine support	74
1.8 Removing and installing sealing flange on pulley end	76
1.9 Renewing caps in cylinder block (pulley end)	79
2 Cylinder block, gearbox end	81
2.1 Assembly overview - cylinder block, gearbox end	81
2.2 Removing and installing flywheel	82
2.3 Removing and installing sealing flange on gearbox side	85
2.4 Renewing caps in cylinder block (gearbox end)	105
3 Crankshaft	107
3.1 Assembly overview - crankshaft	107



3.2	Crankshaft dimensions	108
3.3	Measuring axial clearance of crankshaft	109
3.4	Renewing needle bearing in crankshaft	110
4	Pistons and conrods	113
4.1	Assembly overview - pistons and conrods	113
4.2	Removing and installing pistons	118
4.3	Measuring piston projection at TDC	119
4.4	Checking pistons and cylinder bores	121
4.5	Checking radial clearance of conrods	123
15	Cylinder head, valve gear	124
1	Cylinder head	124
1.1	Assembly overview - cylinder head	124
1.2	Assembly overview - cylinder head cover	128
1.3	Removing and installing cylinder head	130
1.4	Removing and installing cylinder head cover	140
1.5	Removing and installing injector seals	141
1.6	Removing and installing camshaft housing	142
1.7	Checking compression	149
2	Toothed belt drive	151
2.1	Assembly overview - toothed belt cover	151
2.2	Assembly overview - toothed belt	151
2.3	Removing and installing toothed belt guard	153
2.4	Removing and installing toothed belt	158
2.5	Removing toothed belt from camshaft	172
3	Valve gear	178
3.1	Assembly overview - valve gear	178
3.2	Measuring axial play of camshaft	182
3.3	Removing and installing camshaft oil seal	183
3.4	Removing and installing camshaft adjuster	185
3.5	Removing and installing camshaft control valve 1 N205	191
3.6	Checking hydraulic compensation elements	192
3.7	Removing and installing valve stem oil seals	193
4	Inlet and exhaust valves	203
4.1	Checking valve guides	203
4.2	Checking valves	204
4.3	Valve dimensions	204
17	Lubrication	205
1	Sump, oil pump	205
1.1	Assembly overview - sump/oil pump	205
1.2	Engine oil:	211
1.3	Removing and installing oil sump	212
1.4	Removing and installing lower part of sump	216
1.5	Removing and installing upper part of sump	220
1.6	Removing and installing oil pump	224
1.7	Removing and installing oil level and oil temperature sender G266	225
2	Engine oil cooler	228
3	Oil filter, oil pressure switch	229
3.1	Assembly overview - oil filter housing, oil pressure switch	229
3.2	Removing and installing oil pressure switch F1	231
3.3	Removing and installing oil pressure switch for reduced oil pressure F378	233
3.4	Checking oil pressure	235
3.5	Removing and installing oil filter housing	235
3.6	Removing and installing oil pressure regulating valve N428	238



4	Oil circuit	239
4.1	Removing and installing oil supply line	239
4.2	Removing and installing oil return line for turbocharger	240
19	Cooling	242
1	Cooling system/coolant	242
1.1	Connection diagram - coolant hoses	242
1.2	Checking cooling system for leaks	246
1.3	Draining coolant	250
1.4	Filling with coolant	253
1.5	Checking filling quality of cooling system	269
1.6	Checking electric vacuum pump VAS 6096/2	271
1.7	Flushing cooling system	272
2	Coolant pump, regulation of cooling system	296
2.1	Assembly overview - coolant pump, thermostat	296
2.2	Assembly overview - electric coolant pump	300
2.3	Assembly overview - coolant temperature sender	306
2.4	Removing and installing electric coolant pump	309
2.5	Removing and installing coolant pump	327
2.6	Removing and installing thermostat	328
2.7	Checking thermostat	331
2.8	Removing and installing coolant valve for cylinder head N489	332
2.9	Removing and installing coolant temperature sender G62	332
2.10	Removing and installing radiator outlet coolant temperature sender G83	334
3	Coolant pipes	336
3.1	Assembly overview - coolant pipes	336
3.2	Removing and installing coolant pipes	338
4	Radiator, radiator fan	356
4.1	Assembly overview - radiator/radiator fan	356
4.2	Assembly overview - radiator cowl and radiator fan	362
4.3	Removing and installing radiator	363
4.4	Removing and installing water radiator for charge air cooling circuit	375
4.5	Removing and installing radiator cowl	381
4.6	Removing and installing radiator fan	387
21	Turbocharging/supercharging	390
1	Turbocharger	390
1.1	Assembly overview - turbocharger	390
1.2	Removing and installing turbocharger	398
1.3	Renewing vacuum unit for turbocharger	414
1.4	Removing and installing connection for turbocharger	427
2	Charge air system	429
2.1	Assembly overview - charge air system	429
2.2	Removing and installing charge pressure sender G31	432
2.3	Checking charge air system for leaks	432
2.4	Removing and installing air intake pipe	435
2.5	Checking charge air cooler for leaks	437
23	Mixture preparation - injection	444
1	Injection system	444
1.1	Schematic overview - fuel system	444
1.2	Overview of fitting locations - injection system	445
1.3	Filling/bleeding fuel system	455
1.4	Checking fuel system for leaks	456
2	Vacuum system	457



2.1	Connection diagram – vacuum system	457
2.2	Checking vacuum system	458
3	Injectors/high-pressure accumulator (rail)	459
3.1	Assembly overview - injectors	459
3.2	Assembly overview - fuel rail	461
3.3	Adapting correction values for injectors	462
3.4	Testing injectors	463
3.5	Checking return flow rate of injectors with engine running	464
3.6	Checking return flow rate of injectors at starter speed	470
3.7	Checking open injectors	474
3.8	Removing and installing injectors	476
3.9	Removing and installing high-pressure lines	481
3.10	Removing and installing fuel rail	484
4	Air filter	489
4.1	Assembly overview - air filter housing	489
4.2	Removing and installing air filter housing	491
4.3	Removing and installing air guide on lock carrier	494
5	Intake manifold	498
5.1	Assembly overview – intake manifold	498
5.2	Removing and installing intake manifold	502
5.3	Removing and installing throttle valve module J338	506
6	Senders and sensors	509
6.1	Removing and installing fuel pressure regulating valve N276	509
6.2	Checking fuel pressure regulating valve N276	516
6.3	Removing and installing fuel pressure sender G247	518
6.4	Removing and installing air mass meter G70/intake air temperature sender G42	519
6.5	Removing and installing pressure differential sender G505	521
6.6	Removing and installing exhaust gas pressure sensor 1 G450	525
6.7	Removing and installing NOx sender 2 G687	526
6.8	Removing and installing charge air temperature sender ahead of charge air cooler G810	528
6.9	Removing and installing charge air temperature sender after charge air cooler G811	528
6.10	Removing and installing fuel temperature sender G81	529
6.11	Removing and installing control unit for NOx sender GX30	530
6.12	Removing and installing temperature and pressure sender for low-pressure fuel system GX20	539
7	Engine/motor control unit	541
7.1	Removing and installing engine control unit J623	541
7.2	Removing and installing engine control unit J623 (with protective housing)	542
8	High-pressure pump	549
8.1	Assembly overview - high-pressure pump	549
8.2	Removing and installing high-pressure pump	549
9	Lambda probe	554
9.1	Assembly overview - Lambda probe	554
9.2	Removing and installing lambda probe	556
26	Exhaust system	560
1	Exhaust pipes and silencers	560
1.1	Assembly overview – silencers	560
1.2	Assembly overview - front exhaust pipe	564
1.3	Removing and installing front exhaust pipe	568
1.4	Separating exhaust pipes from silencers	570
1.5	Removing and installing silencer	571
1.6	Aligning exhaust system free of stress	577
1.7	Checking exhaust system for leaks	578
1.8	Installation position of clamp	578



1.9	Align end exhaust pipes	580
1.10	Removing and installing bracket for front exhaust pipe	580
2	Emission control	582
2.1	Assembly overview – emission control	582
2.2	Removing and installing catalytic converter	588
2.3	Removing and installing particulate filter	590
2.4	Removing and installing emission control module	590
2.5	Removing and installing exhaust flap control unit J883	602
3	SCR system (selective catalytic reduction)	604
3.1	Assembly overview – reducing agent tank	604
3.2	Assembly overview - reducing agent supply line	612
3.3	Assembly overview - delivery module for reducing agent	616
3.4	Assembly overview – filler tube for reducing agent tank	616
3.5	Removing and installing reducing agent tank	618
3.6	Removing and installing front section of reducing agent supply line	631
3.7	Removing and installing delivery module for reducing agent	656
3.8	Removing and installing injector for reduction agent N474	658
3.9	Removing and installing control unit for reducing-agent heater J891	662
3.10	Assembly overview - injector for reducing agent	669
3.11	Draining reducing agent tank	671
3.12	Removing and installing rear section of reducing agent supply line	674
3.13	Removing and installing filler pipe for reducing agent tank	681
3.14	Disconnecting reducing agent supply line	691
3.15	SCR - resetting learnt values	696
4	Exhaust gas temperature regulation	698
4.1	Assembly overview – exhaust gas temperature regulation	698
4.2	Removing and installing exhaust gas temperature sender 1 G235	700
4.3	Removing and installing exhaust gas temperature sender 2 G448	704
4.4	Removing and installing exhaust gas temperature sender 3 G495	706
4.5	Removing and installing exhaust gas temperature sender 4 G648	708
5	Exhaust gas recirculation	710
5.1	Assembly overview – exhaust gas recirculation	710
5.2	Removing and installing exhaust gas recirculation cooler	715
5.3	Removing and installing exhaust gas recirculation valve 1 GX5	722
5.4	Removing and installing exhaust gas recirculation valve 2 GX6	724
5.5	Removing and installing exhaust gas recirculation temperature sensor G98	725
5.6	Checking exhaust gas recirculation cooler for leaks	728
28	Glow plug system	729
1	Glow plug system	729
1.1	Assembly overview – glow plug system	729
1.2	Removing and installing glow plug	731
1.3	Removing and installing automatic glow period control unit J179	734
1.4	Removing and installing Hall sender G40	734
1.5	Removing and installing engine speed sender G28	735