

001 - 2.0l diesel engine , DFGA,DFGC,DFHA	1-29
1. 2.0l diesel engine , DFGA,DFGC,DFHA	1
2. Battery, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B	2
3. Starter, Terminal 30 voltage supply relay, High heat output relay, Auxiliary air heater control unit, Fuse holder B, Fuse 3 on fuse holder B, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	3
4. Fuse holder B, Fuse 4 on fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B	4
5. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert, Fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 10 on fuse holder B	5
6. Relay for reducing agent metering system, Fuse holder B, Fuse holder C, Fuse 1 on fuse holder C, Fuse 20 on fuse holder C, Fuse 49 on fuse holder C	6
7. Automatic glow period control unit, Low heat output relay, Fuse holder B, Fuse 24 on fuse holder B	7
8. Switch module 2 in centre console, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	8
9. Data bus diagnostic interface, Engine/motor control unit	9
10. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	10
11. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	11
12. Control unit for NOx sender, Engine/motor control unit, Control unit for NOx sender 2, Radiator fan	12
13. Brake light switch, Lambda probe 1 before catalytic converter, Lambda probe, Clutch position sender, ABS control unit, Engine/motor control unit, Lambda probe heater	13
14. Accelerator pedal module, Air mass meter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Heater element for crankcase breather	14
15. Alternator with voltage regulator, Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	15
16. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	16
17. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve	17
18. Throttle valve module, Engine speed sender, Hall sender, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Throttle valve module, Engine/motor control unit	18
19. Charge pressure sender, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Engine/motor control unit, Injector for reducing agent	19
20. Exhaust gas temperature sender 1, Engine/motor control unit	20
21. Coolant temperature sender, Fuel temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	21
22. Engine/motor control unit, Exhaust flap control unit	22
23. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Exhaust flap control unit, Valve for oil pressure control, Coolant valve for cylinder head	23
24. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Exhaust gas recirculation potentiometer, Exhaust gas recirculation potentiometer 2, Engine/motor control unit, Exhaust gas recirculation control motor, Exhaust gas recirculation control motor 2	24
25. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	25
26. Fuel pressure sender, Engine/motor control unit, Camshaft control valve 1, Fuel pressure regulating valve, Fuel metering valve	26
27. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	27
28. Delivery unit for reducing agent metering system, Temperature sender for reducing agent, Reducing agent level sender, Reducing agent quality sensor, Engine/motor control unit, Pump for reducing agent, Reducing agent return flow pump	28
29. Delivery unit for reducing agent metering system, Heater for reducing agent tank (heater circuit 1)	29
002 - 2.0l petrol engine , CZPA,DKZA,DRFA	30-60
1. 2.0l petrol engine , CZPA,DKZA,DRFA	30
2. Battery, Battery monitor control unit, Fuse holder B	31
3. Starter, Fuse holder B	32
4. Fuse holder B	33
5. Operating unit for driving mode selection. Fuse holder B. Fuse holder C	34

6. Operating unit for driving mode selection, Data bus diagnostic interface, Engine/motor control unit	35
7. Engine/motor control unit	36
8. Engine/motor control unit	37
9. Accelerator pedal module, Lambda probe 1 before catalytic converter, Engine/motor control unit	38
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	39
11. Air mass meter, Gearbox neutral position sender, Engine/motor control unit	40
12. Temperature sender before particulate filter, Temperature sender after particulate filter, Radiator fan control unit, Engine/motor control unit, Radiator fan	41
13. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	42
14. Fuel tank leak detection module, Engine/motor control unit	43
15. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	44
16. Alternator, Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit	45
17. Intake manifold sender, Pressure differential sender for particulate filter, Engine/motor control unit	46
18. Radiator outlet coolant temperature sender, Fuel pressure sender for low pressure, Engine/motor control unit	47
19. Brake light switch, Engine/motor control unit, Charge pressure positioner	48
20. Clutch position sender, Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	49
21. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	50
22. Engine/motor control unit, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4	51
23. Intake manifold sender, Engine/motor control unit, Coolant valve for gearbox, Inlet cam actuator B for cylinder 4	52
24. Throttle valve module, Throttle valve module, Engine/motor control unit	53
25. Hall sender, Coolant temperature sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	54
26. Engine speed sender, Knock sensor 1, Hall sender 3, Engine/motor control unit, Actuator for engine temperature regulation	55
27. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Coolant shut-off valve, Turbocharger air recirculation valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	56
28. Stage 3 oil pressure switch, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Fuel pressure regulating valve, Exhaust camshaft control valve 1, Auxiliary pump for heating	57
29. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	58
30. Switch module 2 in centre console, Fuel delivery unit, Onboard supply control unit, Start/stop operation warning lamp, Driving mode selection warning lamp	59
31. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	60
003 - Electromechanical steering , (1N3),(1N7)	61-63
1. Electromechanical steering , (1N3),(1N7)	61
2. Steering moment sender, Power steering control unit, Fuse holder A	62
3. Data bus diagnostic interface	63
004 - Anti-lock brake system (ABS) , (L0L)	64-72
1. Anti-lock brake system (ABS) , (L0L)	64
2. Fuse holder B, Fuse holder C	65
3. Rear left speed sensor, ABS control unit, Data bus diagnostic interface	66
4. Front left speed sensor, ABS control unit, Data bus diagnostic interface, Left parking brake motor	67
5. Rear right speed sensor, Clutch position sender, ABS control unit, Right parking brake motor	68
6. Brake fluid level warning contact, Front right brake pad wear sender, Front right speed sensor, Vacuum sender, ABS control unit, Onboard supply control unit	69
7. Parking brake button	70
8. Tyre Pressure Monitoring System control unit, Dash panel insert	71
9. Switch module 1 in centre console, Button for TCS and electronic stabilisation program	72
005 - Anti-lock brake system (ABS) , (L0R)	73-82
1. Anti-lock brake system (ABS) , (L0R)	73
2. Fuse holder B, Fuse holder C	74

3. Battery, Vacuum sender, ABS control unit	75
4. ABS control unit, Data bus diagnostic interface, Left parking brake motor	76
5. Rear right speed sensor, ABS control unit	77
6. Front right speed sensor, Rear left speed sensor, Front left speed sensor, Clutch position sender, ABS control unit, Right parking brake motor	78
7. Parking brake button	79
8. Parking brake button, Brake fluid level warning contact, Front right brake pad wear sender, Onboard supply control unit	80
9. Switch module 1 in centre console, Dash panel insert	81
10. Switch module 1 in centre console, Tyre Pressure Monitoring System control unit	82
<b>006 - Airbag systems , (L0L)</b>	<b>83-94</b>
1. Airbag systems , (L0L)	83
2. Airbag control unit, Fuse holder C, Fuse holder G, Diagnostic connection	84
3. Key-operated switch to deactivate airbag on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Data bus diagnostic interface, Warning lamp for airbag deactivated on front passenger side	85
4. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	86
5. Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	87
6. Airbag control unit, Control unit for front right belt tensioner, Side airbag igniter on driver side, Side airbag igniter on front passenger side	88
7. Belt switch for seat row 2, driver side, Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	89
8. Side airbag crash sensor on driver side, Airbag control unit	90
9. Side airbag crash sensor on front passenger side, Airbag control unit	91
10. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Emergency call module control unit and communication unit	92
11. Front pressure hose sensor for pedestrian protection, Airbag control unit	93
12. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	94
<b>007 - Airbag systems , (L0R)</b>	<b>95-107</b>
1. Airbag systems , (L0R)	95
2. Airbag control unit, Fuse holder C, Fuse holder G, Diagnostic connection	96
3. Key-operated switch to deactivate airbag on front passenger side, Rear side airbag crash sensor on driver side, Rear side airbag crash sensor on passenger side, Airbag control unit, Data bus diagnostic interface, Warning lamp for airbag deactivated on front passenger side	97
4. Airbag control unit, Steering column electronics control unit, Airbag igniter on driver side, Airbag igniter 1 on front passenger side, Rear belt tensioner igniter on driver side, Rear belt tensioner igniter on passenger side	98
5. Airbag control unit, Control unit for front left belt tensioner, Driver seat belt tensioner igniter 1, Front passenger seat belt tensioner igniter 1, Driver side curtain airbag igniter, Front passenger side curtain airbag igniter, Driver side knee airbag igniter	99
6. Airbag control unit, Control unit for front right belt tensioner, Side airbag igniter on driver side, Side airbag igniter on front passenger side	100
7. Belt switch for seat row 2, middle, Belt switch for seat row 2, passenger side, Airbag control unit, Rear side airbag igniter on driver side, Rear side airbag igniter on passenger side	101
8. Belt switch for seat row 2, driver side, Side airbag crash sensor on front passenger side, Airbag control unit	102
9. Side airbag crash sensor on driver side, Airbag control unit	103
10. Driver side belt switch, Front passenger side belt switch, Seat occupied sensor on front passenger side, Crash sensor for front airbag, Airbag control unit, Emergency call module control unit and communication unit	104
11. Front pressure hose sensor for pedestrian protection, Airbag control unit	105
12. Trigger 1 for pedestrian protection, Trigger 2 for pedestrian protection, Airbag control unit	106
13. Driver side crash sensor for pedestrian protection, Front passenger side crash sensor for pedestrian protection, Centre crash sensor for pedestrian protection	107
<b>008 - Convenience system , (L0L)</b>	<b>108-136</b>
1. Convenience system , (L0L)	108
2. Fuse holder C	109
3. Potentiometer for horizontal adjustment of driver side mirror, Potentiometer for vertical adjustment of driver side mirror, Driver door control unit, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Heated exterior mirror on driver side	110

4. Driver door control unit, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side door warning lamp, Entry light in exterior mirror, driver side, Heated exterior mirror on driver side	111
5. Driver door control unit, Front left entry light	112
6. Operating unit for window regulator in driver door, Rear window regulator isolation switch, Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Driver side interior locking button for central locking system, Childproof lock button, Operating unit for window regulator in driver door, Driver door control unit, Driver side interior locking warning lamp, Window regulator lock warning lamp, Warning lamp for activated left childproof lock, Warning lamp for activated right childproof lock	113
7. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Rear lid remote release button, Fold-in mirror switch, Driver door control unit, Central locking SAFELOCK function warning lamp, Mirror adjustment switch illumination bulb, Light for driver side interior door handle illumination, Light for driver door background lighting	114
8. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Driver door lock unit, Driver door central locking motor, Driver side window regulator motor, Driver door central locking SAFELOCK function motor	115
9. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side fold-in mirror motor, Heated exterior mirror on passenger side	116
10. Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Entry light in exterior mirror, passenger side, Heated exterior mirror on passenger side	117
11. Front passenger door control unit, Front right entry light	118
12. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger door background lighting	119
13. Front passenger side window regulator button, Front passenger door contact switch, Front passenger door central locking actuator for SAFELOCK function, Front passenger door control unit, Button illumination bulb, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor	120
14. Rear driver side window regulator button, Front passenger door control unit, Rear driver side door control unit, Front passenger side window regulator motor	121
15. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Rear left door lock unit, Rear left door central locking motor, lock, Rear driver side window regulator motor, Light for rear door background lighting, driver side	122
16. Rear driver side door control unit, Rear driver side window regulator motor	123
17. Rear passenger side window regulator button, Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Rear passenger side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	124
18. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear right door lock unit, Rear right door central locking motor, lock, Rear passenger side window regulator motor, Light for rear door background lighting, passenger side	125
19. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Rear passenger side door control unit, Rear right door lock unit, Rear right door central locking motor, lock	126
20. Front left footwell light, Front right footwell light, Rear passenger side window regulator motor	127
21. Interior mirror, Anti-dazzle interior mirror button, Data bus diagnostic interface, Front interior light	128
22. Rain and light sensor, Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	129
23. Rear lid handle, Rear lid handle release button, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor	130
24. Button to close rear lid in luggage compartment, Rear lid control unit	131
25. Sensor in motor 1 for rear lid, Sensor in motor 2 for rear lid, Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	132
26. Anti-trapping sender, Anti-trapping sender 2, Rear lid warning buzzer, Rear lid control unit, Power latching for rear lid, Power latching motor for rear lid	133
27. Onboard supply control unit. Rear lid control unit	134

28. Button for deactivating interior monitoring and vehicle inclination sensor, Onboard supply control unit	135
29. Onboard supply control unit	136
009 - Convenience system , (L0R)	137-165
1. Convenience system , (L0R)	137
2. Fuse holder C	138
3. Potentiometer for horizontal adjustment of driver side mirror, Potentiometer for vertical adjustment of driver side mirror, Driver door control unit, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor, Heated exterior mirror on driver side	139
4. Driver door control unit, Driver side turn signal repeater bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Entry light in exterior mirror, driver side, Heated exterior mirror on driver side	140
5. Driver door control unit, Driver side door warning lamp, Front right entry light	141
6. Operating unit for window regulator in driver door, Rear window regulator isolation switch, Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Childproof lock button, Operating unit for window regulator in driver door, Driver door control unit, Window regulator lock warning lamp, Warning lamp for activated left childproof lock, Warning lamp for activated right childproof lock	142
7. Exterior mirror adjuster, Mirror adjustment switch, Mirror adjustment changeover switch, Exterior mirror heater button, Rear lid remote release button, Fold-in mirror switch, Driver door control unit, Mirror adjustment switch illumination bulb, Light for driver side interior door handle illumination, Light for driver door background lighting	143
8. Driver side interior locking button for central locking system, Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Driver side interior locking warning lamp, Driver door lock unit, Driver door central locking motor, Driver side window regulator motor, Driver door central locking SAFELOCK function motor, Connection 2 in driver side door wiring harness	144
9. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	145
10. Front passenger door control unit, Front passenger side turn signal repeater bulb, Passenger side exterior mirror, Front passenger side fold-in mirror motor, Entry light in exterior mirror, passenger side, Heated exterior mirror on passenger side	146
11. Front passenger door control unit, Front left entry light	147
12. Front passenger door control unit, Light for passenger side interior door handle illumination, Light for passenger door background lighting	148
13. Front passenger side window regulator button, Front passenger door contact switch, Front passenger door central locking actuator for SAFELOCK function, Front passenger door control unit, Button illumination bulb, Front passenger door lock unit, Front passenger door central locking motor, Front passenger side window regulator motor, Front passenger door central locking SAFELOCK function motor, Earth connection 4, in front passenger side door wiring harness	149
14. Rear driver side window regulator button, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Rear driver side window regulator motor, Light for rear door background lighting, driver side	150
15. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Rear driver side door control unit, Rear right door lock unit, Rear right door central locking motor, lock, Rear driver side window regulator motor	151
16. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Rear right door lock unit, Rear right door central locking motor, lock, Rear driver side window regulator motor	152
17. Rear passenger side window regulator button, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear passenger side window regulator motor, Light for rear door background lighting, passenger side	153
18. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Rear passenger side door control unit, Rear left door lock unit, Rear left door central locking motor, lock	154
19. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Rear left door lock unit, Rear left door central locking motor, lock, Rear passenger side window regulator motor	155
20. Interior mirror, Anti-dazzle interior mirror button, Front left footwell light, Front right footwell light, Front interior light	156
21. Rain and light sensor	157

22. Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	158
23. Rear lid handle, Rear lid handle release button, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor	159
24. Rear lid control unit	160
25. Sensor in motor 1 for rear lid, Sensor in motor 2 for rear lid, Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	161
26. Anti-trapping sender, Anti-trapping sender 2, Rear lid warning buzzer, Rear lid control unit, Power latching motor for rear lid	162
27. Onboard supply control unit, Rear lid control unit	163
28. Button for deactivating interior monitoring and vehicle inclination sensor, Onboard supply control unit	164
29. Onboard supply control unit	165
<b>010 - LED headlights , (8IT),(8Q3)</b>	<b>166-169</b>
1. LED headlights , (8IT),(8Q3)	166
2. Onboard supply control unit, Control unit for cornering light and headlight range control, Front left headlight, Fuse holder C	167
3. Onboard supply control unit, Control unit for cornering light and headlight range control, Front right headlight	168
4. Rear left vehicle level sender, Data bus diagnostic interface, Control unit for cornering light and headlight range control	169
<b>011 - Basic equipment</b>	<b>170-187</b>
1. Basic equipment	170
2. Treble horn, Bass horn, Heated rear window relay, Horn relay, Fuse holder B, Fuse holder C	171
3. Terminal 15 voltage supply relay, Fuse holder C	172
4. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit	173
5. Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	174
6. Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	175
7. Light switch, Rotary light switch, Headlight range control regulator, Onboard supply control unit, Button illumination bulb	176
8. Hazard warning light switch, Glove compartment light switch, Onboard supply control unit, Indicator lamp for hazard warning light, Luggage compartment light, Glove compartment light	177
9. Front interior light button, Rear interior light button, Front interior light (door contact) button, Front left reading light button, Front right reading light button, Onboard supply control unit, Electric torch, Front interior light, Interior light, Front left reading light, Front right reading light	178
10. Rear left reading light button, Rear right reading light button, Brake light switch, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Engine/motor control unit, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light	179
11. Ignition/starter switch, Selector mechanism, Turn signal switch, Intermittent wiper switch, Cruise control system switch, Multifunction display call-up button, Cruise control system (CCS) SET button, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Selector lever sensors control unit, Airbag igniter on driver side, Ignition key withdrawal lock solenoid	180
12. Airbag coil connector and return ring with slip ring, Onboard supply control unit, Steering column electronics control unit, Rear left fog light bulb, Left tail light bulb, Left tail light cluster 2, Left brake light bulb, Left reversing light bulb, Left number plate light	181
13. Fuel tank filler flap central locking actuator, Onboard supply control unit, Rear right fog light bulb, Right tail light bulb, Left tail light cluster, Right tail light cluster, Right tail light cluster 2, Rear left turn signal bulb, Rear right turn signal bulb, Right brake light bulb, Right reversing light bulb, Left brake and tail light bulb, Right brake and tail light bulb, Right number plate light	182
14. Onboard supply control unit	183
15. Central locking rear lid lock unit, Onboard supply control unit, High-level brake light bulb, Rear lid lock unit, Rear lid central locking motor	184
16. Immobiliser reader coil, Dash panel insert	185
17. Data bus diagnostic interface, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Heated rear window	186

18. Heater and air conditioning controls, Data bus diagnostic interface, Control unit for electronic steering column lock	187
012 - Electric seat adjustment with memory function , (3PH),(3PN),(3PR),(L0L)	188-196
1. Electric seat adjustment with memory function , (3PH),(3PN),(3PR),(L0L)	188
2. Operating unit for front left seat adjustment, Operating unit 2 for front left seat adjustment, Driver seat adjustment control unit, Front passenger seat adjustment thermal fuse 1, Fuse holder C	189
3. Driver seat lumbar support adjustment switch, Data bus diagnostic interface, Driver seat adjustment control unit, Driver seat backrest adjustment motor	190
4. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat height adjustment motor, Driver seat rake adjustment motor	191
5. Operating unit 2 for front right seat adjustment, Front passenger seat adjustment control unit, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	192
6. Operating unit for front right seat adjustment, Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment control unit	193
7. Front passenger seat adjustment control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat backrest adjustment motor	194
8. Front passenger seat adjustment control unit, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	195
9. Front passenger seat adjustment control unit, Front passenger seat lumbar support height adjustment motor	196
013 - Fuse assignment	197-228
1. Fuse assignment	197
2. Battery, Alternator with voltage regulator, Power steering control unit, Fuse holder A, Radiator fan	198
3. ABS control unit, Battery monitor control unit, Engine/motor control unit	199
4. Clutch position sender, Alarm horn, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B, Windscreen wiper motor	200
5. Starter, Treble horn, Bass horn, Horn relay, Engine/motor control unit, Fuse holder B	201
6. Main relay, Terminal 30 voltage supply relay, High heat output relay, Auxiliary air heater control unit, Engine/motor control unit, Fuse holder B	202
7. Brake light switch, Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Control unit for NOx sender, Air mass meter, Heater element for crankcase breather, Fuse holder B	203
8. Fuel pump control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	204
9. Heated windscreens relay, Engine component current supply relay, Fuse holder B, Heated windscreens	205
10. Automatic glow period control unit, Fuse holder B	206
11. Oil level and oil temperature sender, Low heat output relay, Auxiliary heater control unit, Fuse holder B, Charge air cooling pump	207
12. Exhaust flap control unit, Charge pressure control solenoid valve, Coolant shut-off valve, Coolant valve for gearbox	208
13. Fuel pressure regulating valve, Fuel metering valve, Coolant valve for cylinder head, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	209
14. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve, Exhaust camshaft control valve 1, Piston cooling jet control valve, Auxiliary pump for heating	210
15. Valve for oil pressure control, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	211
16. Ignition coil 2 with output stage, Ignition coil 3 with output stage, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4	212
17. Onboard supply control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage	213
18. Front passenger seat adjustment thermal fuse 1, Fuse holder C	214
19. Selector mechanism, Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Tyre Pressure Monitoring System control unit, Steering column electronics control unit, Data bus diagnostic interface, Remote control receiver for auxiliary coolant heater, Fuse holder C	215
20. Rotary light switch, Parking brake button, Operating unit for driving mode selection, Rain and light sensor, Anti-theft alarm sensor, Display unit for front information display and operating unit control unit, Control unit for head-up display, Fuse holder C	216
21. Fresh air blower control unit, Electronically controlled damping control unit, Front passenger door control unit, Control unit 1 for information electronics, Control unit for front left belt	217

tensioner, Rear passenger side door control unit, Fuse holder C, Rear passenger side window regulator motor	218
22. Control unit for front right belt tensioner, Fuse holder C, USB charging socket fuse, 12 V socket, 12 V socket 2, 12 V socket 3, USB charging socket 1	218
23. Heated rear window relay, Terminal 15 voltage supply relay, Relay for power sockets, Amplitude modulation (AM) frequency filter, Fuse holder C	219
24. Airbag control unit, Parking aid control unit, Lane change assist control unit, Lane change assist control unit 2, Warning lamp for airbag deactivated on front passenger side, Front camera for driver assist systems, Fuse holder C	220
25. Interior mirror, Switch module 1 in centre console, Headlight range control regulator, Reversing light switch, Air quality sensor, Pressure sender for refrigerant circuit, Adaptive cruise control unit, Fuse holder C, Diagnostic connection	221
26. Front left headlight, Front right headlight, Fuse holder C, Rear window wiper motor	222
27. Rear lid handle, Control unit for electronic steering column lock, Control unit for overhead view camera, Interface for entry and start system, Dash panel insert, USB hub, Fuse holder C	223
28. Sliding sunroof adjustment control unit, Driver door control unit, Digital sound package control unit, Rear driver side door control unit, Light 1 for roof contour lighting, Light 2 for roof contour lighting, Fuse holder C, Rear driver side window regulator motor	224
29. Trailer detector control unit, Front passenger seat adjustment control unit, Driver seat adjustment control unit, Fuse holder C	225
30. All-wheel drive control unit, Rear lid control unit, Control unit for reducing agent heater, Fuse holder C	226
31. Delivery unit for reducing agent metering system, Relay for reducing agent metering system, Fuse holder C, DC/AC converter with socket, 12 V - 230 V	227
32. Battery, Battery monitor control unit, Fuse holder G, Terminal 30 wiring junction	228
<b>014 - Earthing concept</b>	<b>229-247</b>
1. Earthing concept	229
2. Power steering control unit, Engine/motor control unit, Earth point, on left in engine compartment, Earth point 1, on front of left longitudinal member	230
3. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender	231
4. Radiator fan, Earth point 3, on front of left longitudinal member	232
4. Control unit for NOx sender, Left fog light bulb, Front left headlight, Ignition coil 1 with output stage, Windscreen wiper motor, Earth point, on cylinder head	232
5. Mechatronic unit for dual clutch gearbox, Air conditioner compressor regulating valve, Auxiliary pump for heating	233
6. Brake light switch, Brake fluid level warning contact, Oil level and oil temperature sender, Clutch position sender, Fuse holder B, Charge air cooling pump	234
7. Rotary light switch, Driver exterior door handle, Front passenger exterior door handle, Driver door control unit, Onboard supply control unit, Diagnostic connection, Earth point, lower part of left A-pillar	235
8. Steering column electronics control unit, Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Front interior light	236
9. Front passenger seat adjustment control unit, Driver seat adjustment control unit, Control unit for front left belt tensioner, Earth point, on lower part of left B-pillar, Earth point, in front left footwell	237
10. Rear driver side door control unit, Rear left door lock unit, Rear driver side window regulator motor, Heated seat cushion for front passenger seat, Heated bench seat cushion for rear left seat	238
11. Rear lid control unit, Rear passenger side door control unit, Rear right door lock unit, Metering pump, Rear passenger side window regulator motor, Heated bench seat cushion for rear right seat, Earth point, on lower part of right B-pillar	239
12. Button to close rear lid in luggage compartment, Left tail light cluster, Left tail light cluster 2, Amplitude modulation (AM) frequency filter, DC/AC converter with socket, 12 V - 230 V, Power latching for rear lid	240
13. Delivery unit for reducing agent metering system, All-wheel drive control unit, Rear lid power opening control unit, Right tail light cluster, Heater for reducing agent line (heater circuit 2), Earth point 1, on right rear wheel housing	241
14. Rear lid handle, Control unit 1 for information electronics, Control unit for navigation system, Front right footwell light, USB charging socket 1	242
15. Driver exterior door handle, Front passenger exterior door handle, Fresh air blower control unit, Sliding sunroof adjustment control unit, Light 1 for roof contour lighting, Light 2 for roof contour lighting, Glove compartment light, Earth point, lower part of right A-pillar	243
16. ABS control unit, Auxiliary heater control unit, Right fog light bulb, Front right headlight, Earth point, on right headlight, Earth point 1, on front of right longitudinal member	244
17. Bonnet contact switch, Pressure sender for refrigerant circuit, Interface for entry and start system	245
18. Selector mechanism, Hazard warning light switch, Heater and air conditioning controls, Switch	246

module 1 in centre console, Switch module 2 in centre console	
19. Auxiliary air heater control unit, 12 V socket 2, 12 V socket 3	247
015 - Electric seat adjustment with memory function , (3PJ),(3PN),(3PR),(L0R)	248-256
1. Electric seat adjustment with memory function , (3PJ),(3PN),(3PR),(L0R)	248
2. Operating unit for front left seat adjustment, Operating unit 2 for front left seat adjustment,	249
Front passenger seat adjustment control unit, Fuse holder C, Front passenger seat adjustment thermal fuse 1	
3. Front passenger seat lumbar support adjustment switch, Data bus diagnostic interface, Front passenger seat adjustment control unit, Front passenger seat backrest adjustment motor	250
4. Front passenger seat adjustment control unit, Front passenger seat longitudinal adjustment motor, Front passenger seat rake adjustment motor, Front passenger seat height adjustment motor	251
5. Operating unit 2 for front right seat adjustment, Front passenger seat adjustment control unit, Driver seat adjustment control unit, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	252
6. Operating unit for front right seat adjustment, Driver seat lumbar support adjustment switch, Driver seat adjustment control unit	253
7. Driver seat adjustment control unit, Driver seat longitudinal adjustment motor, Driver seat backrest adjustment motor	254
8. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat height adjustment motor, Driver seat rake adjustment motor	255
9. Driver seat adjustment control unit, Driver seat lumbar support height adjustment motor	256
016 - Lane change assist , (7Y1),(7Y5)	257-260
1. Lane change assist , (7Y1),(7Y5)	257
2. Lane change assist control unit 2, Fuse holder C, Driver side exterior mirror	258
3. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit 2	259
4. Lane change assist control unit, Passenger side exterior mirror	260
017 - Entry and start authorisation , (4F2),(4I3)	261-267
1. Entry and start authorisation , (4F2),(4I3)	261
2. Onboard supply control unit, Engine/motor control unit, Interface for entry and start system, Fuse holder C	262
3. Starter button, Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	263
4. Driver exterior door handle, Interface for entry and start system	264
5. Front passenger exterior door handle, Interface for entry and start system	265
6. Rear lid power opening control unit, Interface for entry and start system, Interior aerial 2 for entry and start system	266
7. Interface for entry and start system, Rear bumper aerial for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system	267
018 - Heated windscreen , (4GW)	268-269
1. Heated windscreen , (4GW)	268
2. Heated windscreen relay, Onboard supply control unit, Fuse holder B, Heated windscreen	269
019 - Window wash/wipe system, headlight washer system , (8X1),(8N4),(8N6),(9T1)	270-272
1. Window wash/wipe system, headlight washer system , (8X1),(8N4),(8N6),(9T1)	270
2. Onboard supply control unit, Windscreen wiper motor, Headlight washer system pump, Windscreen and rear window washer pump	271
3. Windscreen washer fluid level sender, Onboard supply control unit, Rear window wiper motor	272
020 - Dual clutch gearbox 0DL , (0EX)	273-277
1. Dual clutch gearbox 0DL , (0EX)	273
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	274
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	275
4. Selector mechanism, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox, Fuse holder C	276
5. Selector mechanism, Onboard supply control unit, Steering column electronics control unit	277
021 - Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	278-280
1. Multifunction steering wheel , (1XX),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	278
2. Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Airbag igniter on driver side, Fuse holder C	279
3. Selector mechanism, Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit, Steering column electronics control unit, Engine/motor control unit, Heated steering wheel	280
022 - Climatronic , (KH7)	281-289
1. Climatronic , (KH7)	281
2. Heater and air conditioning controls, Fresh air blower control unit, Fuse holder C, Fresh air blower	282

3. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Climatronic control unit	283
4. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit, Data bus diagnostic interface	284
5. Heater and air conditioning controls, Air conditioner compressor regulating valve	285
6. Heater and air conditioning controls, Potentiometer for left temperature flap control motor, Potentiometer for right temperature flap control motor, Front left temperature flap, Front right temperature flap, Left temperature flap control motor, Right temperature flap control motor	286
7. Heater and air conditioning controls, Potentiometer for front air distribution flap control motor, Potentiometer for fresh air/air recirculation, air flow flap control motor, Air distribution flap, Air recirculation flap, Fresh air/air recirculation, air flow flap control motor, Front air distribution flap control motor	287
8. Heater and air conditioning controls, Potentiometer for defroster flap control motor, Footwell vent temperature sender, Evaporator temperature sensor, Potentiometer for rear temperature flap control motor, Defroster flap, Defroster flap control motor, Rear temperature flap control motor	288
9. Heater and air conditioning controls, Sunlight penetration photosensor, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender	289
<b>023 - Anti-theft alarm system , (7AS)</b>	<b>290-292</b>
1. Anti-theft alarm system , (7AS)	290
2. Button for deactivating interior monitoring and vehicle inclination sensor, Alarm horn, Onboard supply control unit, Fuse holder B, Front interior light	291
3. Anti-theft alarm sensor, Fuse holder C	292
<b>024 - Parking aid (PDC) , (7X2),(7X5),(8A8),(8A9)</b>	<b>293-299</b>
1. Parking aid (PDC) , (7X2),(7X5),(8A8),(8A9)	293
2. Rear parking aid warning buzzer, Front parking aid warning buzzer, Parking aid control unit, Data bus diagnostic interface, Fuse holder C	294
3. Switch module 2 in centre console, Parking aid button, Park assist steering button, Parking aid control unit, Onboard supply control unit, Parking aid warning lamp, Warning lamp for park assist steering, Button illumination bulb	295
4. Parking aid control unit	296
5. Parking aid control unit	297
6. Rear left parking aid sender, Rear centre left parking aid sender, Rear centre right parking aid sender, Rear right parking aid sender, Parking aid control unit	298
7. Rear left park assist steering sender, Rear right park assist steering sender, Parking aid control unit	299
<b>025 - Adaptive chassis control DCC , (2H4)</b>	<b>300-304</b>
1. Adaptive chassis control DCC , (2H4)	300
2. Front left vehicle level sender, Front left body acceleration sender, Electronically controlled damping control unit, Front left shock absorber damping adjustment valve, Fuse holder C	301
3. Front right vehicle level sender, Front right body acceleration sender, Electronically controlled damping control unit, Front right shock absorber damping adjustment valve	302
4. Rear left vehicle level sender, Rear body acceleration sender, Electronically controlled damping control unit, Data bus diagnostic interface, Rear left shock absorber damping adjustment valve, Rear right shock absorber damping adjustment valve	303
5. Switch module 2 in centre console, Driving mode selection button, Operating unit for driving mode selection, Onboard supply control unit, Driving mode selection warning lamp, Earth point on central tube for dash panel, centre left, Earth point on central tube for dash panel, centre right	304
<b>026 - Radio navigation system</b>	<b>305-319</b>
1. Radio navigation system	305
2. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	306
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	307
4. Control unit 1 for information electronics, USB hub, USB connection 1	308
5. Control unit 1 for information electronics, USB hub, USB connection 1, USB connection 2	309
6. Control unit 1 for information electronics, Telephone microphone, Connection for external audio sources	310
7. Control unit 1 for information electronics	311
8. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	312
9. Control unit 1 for information electronics	313
10. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	314
11. Control unit 1 for information electronics, Dash panel insert, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	315
12. Control unit 1 for information electronics	316

13. Control unit 1 for information electronics, Roof aerial, GPS aerial	317
14. Control unit 1 for information electronics	318
15. Control unit 1 for information electronics, Left aerial module, Right aerial module, Heated rear window	319
027 - Reversing camera (Rear Assist) , (KA2)	320-321
1. Reversing camera (Rear Assist) , (KA2)	320
2. Rear lid handle, Control unit 1 for information electronics	321
028 - Auxiliary coolant heater , (9M9)	322-324
1. Auxiliary coolant heater , (9M9)	322
2. Temperature sensor, Overheating sensor, Auxiliary heater control unit, Data bus diagnostic interface, Fuse holder B, Fuse holder C, Combustion air blower, Metering pump	323
3. Auxiliary heater control unit, Glow plug with flame monitor, Roof aerial, Remote control receiver for auxiliary coolant heater, Circulation pump	324
029 - Radiator fan	325-327
1. Radiator fan	325
2. Radiator fan control unit, Radiator fan	326
3. Radiator fan control unit, Radiator fan	327
030 - Seat heating , (4A3),(4A4)	328-336
1. Seat heating , (4A3),(4A4)	328
2. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C	329
3. Onboard supply control unit	330
4. Heated seat cushion for driver seat	331
5. Heated seat cushion for driver seat, Heated backrest for driver seat	332
6. Heated seat cushion for front passenger seat	333
7. Heated seat cushion for front passenger seat, Heated backrest for front passenger seat	334
8. Operating and display unit for rear air conditioning system, Heated bench seat cushion for rear left seat, Heated bench seat cushion for rear right seat	335
9. Operating and display unit for rear air conditioning system, Heated backrest for rear left seat, Heated backrest for rear right seat	336
031 - All-wheel drive , (1X1)	337-340
1. All-wheel drive , (1X1)	337
2. All-wheel drive control unit, Onboard supply control unit, Data bus diagnostic interface, Fuse holder C, All-wheel drive coupling pump	338
3. Coupling point in luggage compartment, left	339
4. Torque vectoring control unit 1, Torque vectoring control unit 2	340
032 - Data bus network	341-376
1. Data bus network	341
2. Fuse holder B, Fuse holder C	342
3. Data bus diagnostic interface, Diagnostic connection	343
4. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	344
5. ABS control unit, Data bus diagnostic interface, Brake servo	345
6. Power steering control unit, Data bus diagnostic interface, Control unit 1 for information electronics	346
7. Multimedia system operating unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	347
8. Data bus diagnostic interface, Control unit 1 for information electronics	348
9. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics	349
10. Rear lid handle, Air quality sensor, Pressure sender for refrigerant circuit, Auxiliary heater control unit, Data bus diagnostic interface, Reversing camera, Air conditioner compressor	350
11. Battery monitor control unit, Data bus diagnostic interface, Control unit for front left belt tensioner, Control unit for front right belt tensioner, Remote control receiver for auxiliary coolant heater, DC/AC converter with socket, 12 V - 230 V, High-voltage heater (PTC)	351
12. Control unit for NOx sender, Adaptive cruise control unit, Data bus diagnostic interface, Engine/motor control unit	352
13. Data bus diagnostic interface, Engine/motor control unit	353
14. Data bus diagnostic interface, Engine/motor control unit, Engine sound generator control unit	354
15. Selector mechanism, Selector lever, Airbag control unit, Data bus diagnostic interface, Selector lever sensors control unit	355
16. Data bus diagnostic interface, Coupling point in interior, below left	356
17. Interior mirror, Tyre Pressure Monitoring System control unit, Data bus diagnostic interface	357
18. Data bus diagnostic interface, Lane change assist control unit, Lane change assist control unit	358
2. Front camera for driver assist systems	
19. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Heater control unit, Fresh air blower control unit, Climatronic control unit, Air	359

conditioning system control unit, Data bus diagnostic interface, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Rear driver side window regulator motor	
20. Driver door control unit, Data bus diagnostic interface, Light for driver door background lighting	360
21. Data bus diagnostic interface, Front passenger seat adjustment control unit, Driver seat adjustment control unit, Rear lid power opening control unit, Interface for entry and start system	361
22. Data bus diagnostic interface, Rear lid control unit, Control unit for electronic steering column lock, Control unit for head-up display, Emergency call module control unit and communication unit	362
23. Multifunction indicator, Sliding sunroof adjustment control unit, Control unit in dash panel insert, Data bus diagnostic interface, Dash panel insert, Light 1 for roof contour lighting, Light 2 for roof contour lighting	363
24. Front passenger door control unit, Data bus diagnostic interface, Light for passenger door background lighting	364
25. Trailer detector control unit, Data bus diagnostic interface, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Rear passenger side window regulator motor	365
26. Operating unit for driving mode selection, Steering column electronics control unit, Data bus diagnostic interface	366
27. All-wheel drive control unit, Data bus diagnostic interface	367
28. Electronically controlled damping control unit, Parking aid control unit, Data bus diagnostic interface, Control unit for overhead view camera	368
29.	369
30. Alternator with voltage regulator, Control unit for reducing agent heater, Coupling point in engine compartment, left	370
31. Torque vectoring control unit 1, Torque vectoring control unit 2	371
32. Rain and light sensor, Alarm horn, Onboard supply control unit	372
33. Anti-theft alarm sensor, Wiper motor control unit, Onboard supply control unit, Coupling point for roof, Windscreen wiper motor, Driver side windscreen wiper motor, Front passenger side windscreen wiper motor	373
34. Output module 1 for right LED headlight, Output module 1 for left LED headlight, Output module for left headlight, Output module for right headlight, Front left headlight, Front right headlight, Left headlight range control motor, Right headlight range control motor, Left dynamic cornering light control motor, Right dynamic cornering light control motor	374
35. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive	375
36. High-voltage battery 1, Module monitor control unit for batteries, Battery module 4, Battery module 0	376
<b>033 - Trailer coupling , (1M6),(1M5),(1M8)</b>	<b>377-381</b>
1. Trailer coupling , (1M6),(1M5),(1M8)	377
2. Trailer detector control unit	378
3. Trailer detector control unit	379
4. Button for electric swivelling towing bracket, Trailer detector control unit	380
5. Trailer detector control unit, Towing bracket	381
<b>034 - Head-up display , (KS2)</b>	<b>382-385</b>
1. Head-up display , (KS2)	382
2. Operating unit for head-up display, Control unit for head-up display	383
3. Control unit for head-up display, Head-up display module	384
4. Control unit for head-up display	385
<b>035 - Overhead view camera , (KA6)</b>	<b>386-389</b>
1. Overhead view camera , (KA6)	386
2. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for overhead view camera, Fuse holder C	387
3. Rear lid handle, Control unit for overhead view camera, Left overhead view camera, Right overhead view camera, Rear overhead view camera, Driver side exterior mirror, Passenger side exterior mirror	388
4. Control unit for overhead view camera, Front overhead view camera	389
<b>036 - Air conditioning system , (KH6)</b>	<b>390-395</b>
1. Air conditioning system , (KH6)	390
2. Fresh air blower control unit, Fuse holder C, Fresh air blower	391
3. Heater and air conditioning controls, Pressure sender for refrigerant circuit, Air conditioning system control unit	392
4. Heater and air conditioning controls, Air conditioner compressor regulating valve	393
5. Heater and air conditioning controls, Evaporator temperature sensor, Potentiometer for air distribution flap control motor, Air distribution flap, Air distribution flap control motor	394
6. Heater and air conditioning controls, Potentiometer for temperature flap control motor, Data bus diaanostic interface. Temperature flap. Temperature flap control motor. Air recirculation flap	395

control motor	
037 - Sound system DYNAUDIO , (9VC),(I8F),(I8J)	396-402
1. Sound system DYNAUDIO , (9VC),(I8F),(I8J)	396
2. Digital sound package control unit, Control unit 1 for information electronics, Dash panel insert, Fuse holder C	397
3. Digital sound package control unit, Control unit 1 for information electronics, Front left bass loudspeaker, TV tuner	398
4. Digital sound package control unit, Front left treble loudspeaker	399
5. Digital sound package control unit, Front right bass loudspeaker, Centre loudspeaker	400
6. Digital sound package control unit, Front right treble loudspeaker	401
7. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker, Subwoofer	402
038 - Adaptive cruise control , (8T7),(8T8),(6K2),(6K3),(6K4)	403-405
1. Adaptive cruise control , (8T7),(8T8),(6K2),(6K3),(6K4)	403
2. Adaptive cruise control unit, Front camera for driver assist systems	404
3. Adaptive cruise control unit, Front camera for driver assist systems	405
039 - 1.4l petrol engine , CZCA,CZDA,CZDB	406-423
1. 1.4l petrol engine , CZCA,CZDA,CZDB	406
2. Battery, Alternator, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B, Fuse 22 on fuse holder B	407
3. Starter, Main relay, Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 23 on fuse holder B	408
4. Fuel delivery unit, Fuel pump control unit, Fuse holder B, Fuse 8 on fuse holder B, Fuse 9 on fuse holder B, Fuse 10 on fuse holder B	409
5. Fuel delivery unit, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	410
6. Ignition/starter switch, Engine/motor control unit, Interface for entry and start system, Fuse 49 on fuse holder C	411
7. Power steering control unit, Engine/motor control unit	412
8. Switch module 2 in centre console, Start/Stop operation button, Driving mode selection button, Onboard supply control unit, Engine/motor control unit, Start/Stop operation warning lamp, Driving mode selection warning lamp	413
9. Trailer detector control unit, Onboard supply control unit, Data bus diagnostic interface, Engine/motor control unit	414
10. Oil pressure switch, Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Radiator fan control unit, Engine/motor control unit, Radiator fan, Charge air cooling pump	415
11. Brake light switch, Clutch position sender, Gearbox neutral position sender, ABS control unit, Engine/motor control unit	416
12. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	417
13. Accelerator pedal module, Throttle valve module, Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Throttle valve module, Engine/motor control unit	418
14. Engine speed sender, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	419
15. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Hall sender 3, Engine/motor control unit	420
16. Hall sender, Knock sensor 1, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Valve for oil pressure control	421
17. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	422
18. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	423
040 - 1.4l petrol engine , CZEADJVA	424-442
1. 1.4l petrol engine , CZEADJVA	424
2. Battery, Starter, Alternator, Alternator with voltage regulator, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	425
3. Main relay, Fuse holder B	426
4. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert. Fuel pump control unit. Dash panel insert. Fuse holder B	427

5. Switch module 2 in centre console, Start/Stop operation button, Driving mode selection button, Operating unit for driving mode selection, Onboard supply control unit, Data bus diagnostic interface, Start/Stop operation warning lamp, Driving mode selection warning lamp, Fuse holder C	428
6. Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit	429
7. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit	430
8. Oil pressure switch, Oil pressure switch for reduced oil pressure, Radiator outlet coolant temperature sender, Radiator fan control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan, Charge air cooling pump	431
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Lambda probe, Lambda probe after catalytic converter, Gearbox neutral position sender, Engine/motor control unit, Lambda probe heater, Lambda probe 1 heater after catalytic converter	432
10. Accelerator pedal module, Throttle valve module, Accelerator position sender, Accelerator position sender 2, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Throttle valve module, Engine/motor control unit	433
11. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	434
12. Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	435
13. Engine/motor control unit	436
14. Engine speed sender, Coolant temperature sender, Fuel pressure sender, Engine/motor control unit, Charge pressure positioner	437
15. Intake manifold sender, Charge pressure sender, Charge pressure sender, Intake air temperature sender, Intake manifold pressure sender, Intake air temperature sender 2, Hall sender 3, Exhaust gas pressure sensor 1, Engine/motor control unit	438
16. Hall sender, Engine/motor control unit, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3	439
17. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2	440
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Fuel pressure regulating valve	441
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	442
<b>041 - Sliding/tilting sunroof , (3FJ)</b>	<b>443-446</b>
1. Sliding/tilting sunroof , (3FJ)	443
2. Sliding sunroof adjustment control unit, Data bus diagnostic interface, Light 1 for roof contour lighting, Fuse holder C	444
3. Sunroof button, Sliding sunroof adjustment control unit, Light 2 for roof contour lighting	445
4. Sliding sunroof adjustment control unit, Sliding sunroof motor, Sunroof roller blind motor	446
<b>042 - LED headlights , (8IU),(8IX),(8Q5)</b>	<b>447-451</b>
1. LED headlights , (8IU),(8IX),(8Q5)	447
2. Onboard supply control unit, Front left headlight, Fuse holder C	448
3. Onboard supply control unit, Control unit for cornering light and headlight range control, Front right headlight	449
4. Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	450
5. Rear left vehicle level sender, Data bus diagnostic interface, Control unit for cornering light and headlight range control	451
<b>043 - Electrically adjustable lumbar support on seat without electric adjustment , (8I2),(8I9)</b>	<b>452-455</b>
1. Electrically adjustable lumbar support on seat without electric adjustment , (8I2),(8I9)	452
2. Driver seat lumbar support adjustment switch, Driver seat massage function button, Driver seat adjustment control unit, Front passenger seat adjustment thermal fuse 1, Fuse holder C	453
3. Front passenger seat lumbar support adjustment switch, Front passenger seat adjustment control unit, Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	454
4. Front passenger seat adjustment control unit, Front passenger seat lumbar support longitudinal adjustment motor, Front passenger seat lumbar support height adjustment motor	455
<b>044 - Electrically adjustable lumbar support on seat without electric adjustment , (8I3),(8I9)</b>	<b>456-459</b>
1. Electrically adjustable lumbar support on seat without electric adjustment , (8I3),(8I9)	456
2. Front passenger seat lumbar support adjustment switch, Front passenger seat massage function button, Front passenger seat adjustment control unit, Front passenger seat adjustment thermal fuse 1, Fuse holder C	457
3. Driver seat lumbar support adjustment switch, Driver seat massage function button, Front passenger seat adjustment control unit, Driver seat adjustment control unit, Front passenger seat lumbar support longitudinal adjustment motor. Front passenger seat lumbar support height adjustment	458

motor	
4. Driver seat adjustment control unit, Driver seat lumbar support longitudinal adjustment motor, Driver seat lumbar support height adjustment motor	459
045 - Dual clutch gearbox 0D9 , (0ES)	460-464
1. Dual clutch gearbox 0D9 , (0ES)	460
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	461
3. Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	462
4. Selector mechanism, Onboard supply control unit, Steering column electronics control unit, Mechatronic unit for dual clutch gearbox	463
5. Selector mechanism	464
046 - 12 V sockets , (7B3)	465-467
1. 12 V sockets , (7B3)	465
2. Cigarette lighter, 12 V socket, 12 V socket 2	466
3. 12 V socket 3	467
047 - DC/AC converter with socket , (9Z3)	468-469
1. DC/AC converter with socket , (9Z3)	468
2. Data bus diagnostic interface, Fuse holder C, Electric socket 1 fuse, DC/AC converter with socket, 12 V - 230 V	469
048 - Front camera for driver assist systems , (QK1)	470-471
1. Front camera for driver assist systems , (QK1)	470
2. Adaptive cruise control unit, Front camera for driver assist systems, Windscreen heater for front sensors	471
049 - Steering column electronics for heated steering wheel , (2ZD),(2ZW)	472-474
1. Steering column electronics for heated steering wheel , (2ZD),(2ZW)	472
2. Selector mechanism, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Fuse holder C	473
3. Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Heated steering wheel	474
050 - Mobile telephone systems , (9IF),(9IH),(9IJ),(9IM),(9ZK),(9ZX)	475-477
1. Mobile telephone systems , (9IF),(9IH),(9IJ),(9IM),(9ZK),(9ZX)	475
2. Two-way signal amplifier for mobile telephone/data services, Roof aerial, Storage compartment with interface for mobile telephone, LTE aerial 2	476
3. Two-way signal amplifier for mobile telephone/data services, Roof aerial, Storage compartment with interface for mobile telephone	477
051 - Emergency call module , (I8C),(I8F),(I8J)	478-482
1. Emergency call module , (I8C),(I8F),(I8J)	478
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit	479
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Roof aerial	480
4. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, LTE aerial 2, Loudspeaker for emergency call module	481
5. Emergency call module control unit and communication unit, Telephone microphone	482
052 - 1.6l diesel engine , DGDB	483-510
1. 1.6l diesel engine , DGDB	483
2. Battery, Battery monitor control unit, Starter relay 1, Fuse holder B	484
3. Starter, High heat output relay, Starter relay 2, Fuse holder B	485
4. Terminal 30 voltage supply relay, Auxiliary air heater control unit, Fuse holder B	486
5. Fuel delivery unit, Fuel pump control unit, Dash panel insert, Fuse holder B	487
6. Relay for reducing agent metering system, Fuse holder C	488
7. Automatic glow period control unit, Low heat output relay, Fuse holder B	489
8. Switch module 2 in centre console, Onboard supply control unit, Engine/motor control unit, Fuse holder B	490
9. Data bus diagnostic interface, Engine/motor control unit	491
10. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	492
11. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	493
12. Control unit for NOx sender, Air mass meter, Engine/motor control unit, Heater element for crankcase breather, Radiator fan	494
13. Lambda probe 1 before catalytic converter, Engine/motor control unit, Control unit for NOx sender 2	495
14. Brake light switch, Clutch position sender, Engine/motor control unit	496
15. Accelerator pedal module, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Engine/motor control unit, Injector for reducing agent	497
16. Enaine/motor control unit. Glow plus 3. Glow plus 1. Glow plus 2. Glow plus 4	498

17. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve	499
18. Alternator with voltage regulator, Delivery unit for reducing agent metering system, Engine/motor control unit, Charge air cooling pump	500
19. Delivery unit for reducing agent metering system, Engine/motor control unit	501
20. Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	502
21. Engine/motor control unit, Control unit for reducing agent heater	503
22. Engine/motor control unit, Exhaust flap control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	504
23. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	505
24. Throttle valve module, Hall sender, Engine/motor control unit	506
25. Engine speed sender, Charge pressure sender, Fuel pressure sender, Position sender for charge pressure positioner, Engine/motor control unit	507
26. Coolant temperature sender, Exhaust gas temperature sender 1, Pressure differential sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	508
27. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Fuel temperature sender, Engine/motor control unit	509
28. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	510
<b>053 - 2.0l diesel engine , CRFD,CRGA,CRGB,CYKC,DBGC</b>	<b>511-534</b>
1. 2.0l diesel engine , CRFD,CRGA,CRGB,CYKC,DBGC	511
2. Battery, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	512
3. Starter, Terminal 30 voltage supply relay, High heat output relay, Auxiliary air heater control unit, Fuse holder B	513
4. Fuse holder B, Fuse holder C	514
5. Automatic glow period control unit, Low heat output relay, Fuse holder B	515
6. Operating unit for driving mode selection, Fuse holder B	516
7. Engine/motor control unit	517
8. Brake light switch, Coolant temperature sender, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	518
9. Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	519
10. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	520
11. Alternator with voltage regulator, Data bus diagnostic interface, Engine/motor control unit, Charge air cooling pump	521
12. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	522
13. Fuel temperature sender, Temperature sensor 2 for exhaust recirculation, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	523
14. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 3, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	524
15. Accelerator pedal module, Engine/motor control unit, Exhaust gas recirculation cooler changeover valve, Valve for oil pressure control, Coolant valve for cylinder head	525
16. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	526
17. Engine/motor control unit	527
18. Charge pressure sender, Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit, Exhaust flap control unit	528
19. Oil level and oil temperature sender, Engine/motor control unit, Charge pressure control solenoid valve, Auxiliary pump for heating	529
20. Fuel pressure sender, Exhaust gas pressure sensor 1, Position sender for charge pressure positioner, Engine/motor control unit	530
21. Throttle valve module, Engine speed sender, Hall sender, Engine/motor control unit, Radiator fan	531
22. Lambda probe 1 before catalytic converter, Water separator sender, Air mass meter, Engine/motor control unit	532
23. Fuel delivery unit, Fuel gauge sender 2, Fuel pressure sender for low pressure, Fuel pump control unit, Engine/motor control unit, Dash panel insert	533
24. Switch module 2 in centre console, Onboard supply control unit	534
<b>054 - 2.0l petrol engine , CHHB,DKTA</b>	<b>535-560</b>
1. 2.0l petrol engine , CHHB,DKTA	535
2. Battery, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	536
3. Starter, Main relay, Fuse holder B	537
4. Engine component power supply relay, Fuse holder B	538
5. Switch module 2 in centre console. Operatinig unit for drivina mode selection. Onboard supply	539

control unit, Steering column electronics control unit	
6. Operating unit for driving mode selection, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Fuse holder C	540
7. Engine/motor control unit	541
8. Alternator with voltage regulator, Charge pressure sender, Radiator outlet coolant temperature sender, Engine/motor control unit, Coolant valve for gearbox, Radiator fan	542
9. Engine/motor control unit, Coolant shut-off valve	543
10. Oil level and oil temperature sender, Power steering control unit, Engine/motor control unit	544
11. ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	545
12. Ignition/starter switch, Accelerator pedal module, Engine/motor control unit, Interface for entry and start system	546
13. Lambda probe 1 before catalytic converter, Engine/motor control unit	547
14. Brake light switch, Oil pressure switch, Oil pressure switch for reduced oil pressure, Lambda probe 1 after catalytic converter, Engine/motor control unit	548
15. Engine/motor control unit, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4, Exhaust cam actuator A for cylinder 1	549
16. Engine/motor control unit, Exhaust cam actuator B for cylinder 1, Exhaust cam actuator A for cylinder 2, Exhaust cam actuator B for cylinder 2, Exhaust cam actuator A for cylinder 3, Exhaust cam actuator B for cylinder 3, Exhaust cam actuator A for cylinder 4, Exhaust cam actuator B for cylinder 4	550
17. Hall sender 3, Temperature sender before particulate filter, Temperature sender after particulate filter, Engine/motor control unit	551
18. Throttle valve module, Intake manifold sender, Engine speed sender, Engine/motor control unit	552
19. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	553
20. Knock sensor 1, Coolant temperature sender, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	554
21. Engine/motor control unit, Turbocharger air recirculation valve, Fuel pressure regulating valve, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	555
22. Fuel pressure sender for low pressure, Pressure differential sender for particulate filter, Engine/motor control unit, Charge pressure positioner	556
23. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Actuator for engine temperature regulation	557
24. Stage 3 oil pressure switch, Hall sender, Fuel pressure sender, Intake manifold flap potentiometer, Engine/motor control unit	558
25. Fuel delivery unit	559
26. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	560
<b>055 - 2.0l diesel engine , CUAA</b>	<b>561-590</b>
1. 2.0l diesel engine , CUAA	561
2. Starter, Airbag control unit, Battery monitor control unit, Fuse holder G, Terminal 30 wiring junction	562
3. Low heat output relay, Fuse holder B	563
4. Starter relay 1, Starter relay 2, Fuse holder B	564
5. Terminal 30 voltage supply relay, High heat output relay, Auxiliary air heater control unit, Fuse holder B	565
6. Fuse holder B, Fuse holder C	566
7. Fuse holder C	567
8. Switch module 2 in centre console, Onboard supply control unit	568
9. Oil pressure switch, Oil pressure switch for reduced oil pressure, Charge pressure sender, Fuel temperature sender, Engine/motor control unit	569
10. Coolant temperature sender, Exhaust gas temperature sender 1, Exhaust gas pressure sensor 1, Pressure differential sender, Engine/motor control unit	570
11. Fuel pressure sender, Engine/motor control unit, Turbocharger 1 control unit	571
12. Throttle valve module, Charge pressure sender 2, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	572
13. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	573
14. Engine speed sender, Hall sender, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	574
15. Coolant temperature sender 2, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve, Valve for oil pressure control, Coolant valve for cylinder head	575
16. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Engine/motor control unit, Dash panel insert	576
17. Exhaust gas temperature sender 4, Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	577

18. Engine/motor control unit	578
19. Brake light switch, Air mass meter, Engine/motor control unit	579
20. Accelerator pedal module, Control unit for NOx sender, NOx sender, Engine/motor control unit	580
21. Lambda probe 1 before catalytic converter, Control unit 2 for NOx sender, Particulate sensor, Engine/motor control unit	581
22. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Heater element for crankcase breather	582
23. Engine/motor control unit, Injector for reducing agent	583
24. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	584
25. Exhaust gas temperature sender 3, Data bus diagnostic interface, Engine/motor control unit	585
26. Exhaust gas temperature sender 2, Engine/motor control unit, Exhaust flap control unit, Actuator for engine temperature regulation	586
27. Alternator with voltage regulator, Oil level and oil temperature sender, Engine/motor control unit, Charge air cooling pump, Auxiliary pump for heating	587
28. Water separator sender, Engine/motor control unit, Control unit for reducing agent heater	588
29. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	589
30. Delivery unit for reducing agent metering system, Engine/motor control unit	590
<b>056 - Tail light clusters with LEDs , (8SQ)</b>	<b>591-593</b>
1. Tail light clusters with LEDs , (8SQ)	591
2. Onboard supply control unit, Left tail light cluster, Left tail light cluster 2	592
3. Onboard supply control unit, Right tail light cluster, Right tail light cluster 2	593
<b>057 - Window wash/wipe system, headlight washer system , (8N4),(8N6),(8X1),(9T1)</b>	<b>594-596</b>
1. Window wash/wipe system, headlight washer system , (8N4),(8N6),(8X1),(9T1)	594
2. Windscreen wiper motor, Headlight washer system pump, Windscreen and rear window washer pump	595
3. Windscreen washer fluid level sender, Rear window wiper motor, Left washer jet heater element, Right washer jet heater element	596
<b>058 - Radio and navigation system (South Korea) , (ER7)</b>	<b>597-609</b>
1. Radio and navigation system (South Korea) , (ER7)	597
2. Control unit 1 for information electronics, Control unit for navigation system, Telephone microphone, Fuse holder C	598
3. Control unit 1 for information electronics, Control unit for navigation system, Connection for external audio sources	599
4. Control unit 1 for information electronics, Control unit for navigation system, Roof aerial, GPS aerial	600
5. Control unit 1 for information electronics, USB hub, USB connection 2	601
6. Control unit 1 for information electronics, USB hub, USB connection 1	602
7. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	603
8. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	604
9. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	605
10. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	606
11. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	607
12. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert, Left aerial module	608
13. Control unit 1 for information electronics, Left aerial module, Heated rear window	609
<b>059 - TV tuner, card reader unit (Japan) , (QU1),(QV1),(Q0C)</b>	<b>610-615</b>
1. TV tuner, card reader unit (Japan) , (QU1),(QV1),(Q0C)	610
2. TV aerial 2, TV aerial 3, TV tuner, Fuse holder C, Heated rear window	611
3. Control unit 1 for information electronics, TV aerial 1, TV tuner, Right aerial module, Heated rear window	612
4. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, TV tuner	613
5. Toll collection sender, Chip card reader control unit, Control unit 1 for information electronics, USB hub	614
6. Chip card reader control unit, Traffic data aerial	615
<b>060 - Emergency call module , (NZ3)</b>	<b>616-619</b>
1. Emergency call module , (NZ3)	616
2. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit, Fuse holder C	617
3. Control unit 1 for information electronics. Emeraency call module control unit and communication	618

unit, Roof aerial	
4. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Telephone microphone, Loudspeaker for emergency call module	619
<b>061 - Heated windscreen , (4GX)</b>	<b>620-622</b>
1. Heated windscreen , (4GX)	620
2. Onboard supply control unit, Fuse holder B	621
3. Fuse holder B, Heated windscreen	622
<b>062 - Fuse assignment</b>	<b>623-681</b>
1. Fuse assignment	623
2. Battery, Alternator with voltage regulator, Fuse holder A	624
3. Power steering control unit, Fuse holder A, Radiator fan	625
4. ABS control unit, Battery monitor control unit, Fuse holder B	626
5. Alarm horn, Brake servo, Fuse holder B, Windscreen wiper motor	627
6. Starter, Clutch position sender, Engine/motor control unit, Starter relay 1, Starter relay 2, Fuse holder B	628
7. Treble horn, Bass horn, High heat output relay, Horn relay, Auxiliary air heater control unit, Engine/motor control unit, Fuse holder B	629
8. Main relay, Terminal 30 voltage supply relay, Engine/motor control unit, Fuse holder B	630
9. Brake light switch, Fuse holder B	631
10. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Control unit 3 for NOx sender, Control unit 1 for particulate sensor, Air mass meter, Particulate sensor, Heater element for crankcase breather, Fuse holder B	632
11. Fuel pump control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B	633
12. Engine component power supply relay, Fuse holder B, Air conditioner compressor, High-voltage heater (PTC)	634
13. Heated windscreen relay, Fuse holder B, Heated windscreen	635
14. Automatic glow period control unit, Low heat output relay, Fuse holder B	636
15. Fuse holder B, Auxiliary hydraulic pump 1 for gearbox oil, Coolant circulation pump before power and control electronics for electric drive	637
16. Auxiliary heater control unit, Fuse holder B	638
17. Oil level and oil temperature sender, Exhaust flap control unit 2, Charge air cooling pump, Coolant pump for high-voltage battery	639
18. Coolant shut-off valve	640
19. Exhaust flap control unit, Charge pressure control solenoid valve, Fuel tank shut-off valve	641
20. Coolant valve for gearbox, Coolant changeover valve 2, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit	642
21. Fuel tank leak detection module, Coolant valve for cylinder head, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	643
22. Activated charcoal filter solenoid valve 1, Fuel pressure regulating valve, Fuel metering valve, Coolant circulation pump	644
23. Camshaft control valve 1, Exhaust camshaft control valve 1, Auxiliary pump for heating	645
24. Turbocharger air recirculation valve, Intake manifold flap valve, Piston cooling jet control valve	646
25. Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Inlet camshaft control valve 1	647
26. Ignition coil 2 with output stage, Ignition coil 3 with output stage, Inlet cam actuator A for cylinder 1, Inlet cam actuator B for cylinder 1, Inlet cam actuator A for cylinder 2, Inlet cam actuator B for cylinder 2, Inlet cam actuator A for cylinder 3, Inlet cam actuator B for cylinder 3, Inlet cam actuator A for cylinder 4, Inlet cam actuator B for cylinder 4	648
27. Onboard supply control unit, Ignition coil 1 with output stage, Ignition coil 4 with output stage	649
28. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Actuator for engine temperature regulation, Coolant regulating valve	650
29. Cam adjustment actuator 6, Cam adjustment actuator 7, Cam adjustment actuator 8, Injector 2, cylinder 1, Injector 2, cylinder 2, Injector 2, cylinder 3, Injector 2, cylinder 4	651
30. Fuse holder C	652
31. Front passenger seat adjustment thermal fuse 1, Fuse holder C	653
32. Selector mechanism, Heater and air conditioning controls, Tyre Pressure Monitoring System control unit, Ignition key withdrawal lock solenoid, Remote control receiver for auxiliary coolant heater, Fuse holder C	654
33. Rotary light switch, Operating and display unit for rear air conditioning system, Operating unit for driving mode selection, Rain and light sensor, Anti-theft alarm sensor, Fuse holder C	655
34. Charaina unit 1 for hiah-voltadie batterv. Parkina brake button. Power and control electronics	656

for electric drive, Fuse holder C	
35. Ignition/starter switch, Steering column electronics control unit, Display unit for front information display and operating unit control unit, Control unit for head-up display, Fuse holder C	657
36. Data bus diagnostic interface, Control unit 1 for information electronics, Control unit for front left belt tensioner, Fuse holder C	658
37. Fresh air blower control unit, Fuse holder C, USB charging socket fuse, USB charging socket 1	659
38. Heated rear window relay, Control unit for front right belt tensioner, Amplitude modulation (AM) frequency filter, Fuse holder C, 12 V socket, 12 V socket 2, 12 V socket 3	660
39. Terminal 15 voltage supply relay, Rear lid control unit, Relay for power sockets, Fuse holder C	661
40. Airbag control unit, Parking aid control unit, Lane change assist control unit, Lane change assist control unit 2, Warning lamp for airbag deactivated on front passenger side, Front camera for driver assist systems, Fuse holder C	662
41. Interior mirror, Switch module 1 in centre console, Reversing light switch, Air quality sensor, Pressure sender for refrigerant circuit, Fuse holder C, Maintenance connector for high-voltage system, Vacuum pump for brakes	663
42. Headlight range control regulator, Adaptive cruise control unit, Fuse holder C, Diagnostic connection	664
43. Front left headlight, Front right headlight, Air conditioner compressor regulating valve, Fuse holder C	665
44. Engine sound generator control unit, Fuse holder C, Rear window wiper motor	666
45. Rear lid handle, Control unit for electronic steering column lock, Control unit for overhead view camera, Interface for entry and start system, Fuse holder C	667
46. Dash panel insert, USB hub, Fuse holder C, USB connection 1	668
47. Front passenger door control unit, Rear passenger side door control unit, Light for rear passenger side interior door handle illumination, Fuse holder C, Coupling point for front right door, Rear passenger side window regulator motor	669
48. Sliding sunroof adjustment control unit, Light 1 for roof contour lighting, Light 2 for roof contour lighting, Fuse holder C, Light for passenger door background lighting	670
49. Driver door control unit, Fuse holder C, Coupling point for front left door	671
50. Trailer detector control unit, Rear driver side door control unit, Light for rear driver side interior door handle illumination, Fuse holder C, Rear driver side window regulator motor, Light for driver door background lighting	672
51. Trailer detector control unit, Digital sound package control unit, Front passenger seat adjustment control unit, Driver seat adjustment control unit, Fuse holder C	673
52. All-wheel drive control unit, Control unit for reducing agent heater, Torque vectoring control unit 1, Torque vectoring control unit 2, Fuse holder C	674
53. Fuse holder C	675
54. Electronically controlled damping control unit, Fuse holder C, Electric socket 1 fuse, DC/AC converter with socket, 12 V - 230 V	676
55. Delivery unit for reducing agent metering system, Relay for reducing agent metering system, Fuse holder C	677
56. Fuse holder C	678
57. Battery, Battery monitor control unit, Fuse holder G, Terminal 30 wiring junction	679
58. Fuse holder F, Fuse holder G	680
59. High-voltage battery 1, Module monitor control unit for batteries	681
<b>063 - Earthing concept</b>	<b>682-713</b>
1. Earthing concept	682
2. Battery, Battery monitor control unit, Power steering control unit, Engine/motor control unit, Earth point, on left in engine compartment, Earth point 1, on front of left longitudinal member	683
3. Power and control electronics for electric drive, Radiator fan, Coolant circulation pump before power and control electronics for electric drive, Earth point 3, on front of left longitudinal member	684
4. Charging unit 1 for high-voltage battery, Refrigerant shut-off valve 1 for hybrid battery, Refrigerant shut-off valve for high-voltage battery heat exchanger, Three-phase current drive, Air conditioner compressor, High-voltage heater (PTC)	685
5. Oil pressure switch, Oil pressure switch for reduced oil pressure, Exhaust gas temperature sender 4	686
6. Ignition coil 1 with output stage, Coolant circulation pump, Coolant pump for high-temperature circuit, Coolant pump for low-temperature circuit, Earth point, on cylinder head	687
7. Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1, Coolant valve for gearbox	688
8. Left fog light bulb, Front left headlight, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	689
9. Control unit for NOx sender, Particulate sensor, Mechatronic unit for dual clutch gearbox, Windscreen wiper motor, Auxiliary hydraulic pump 1 for gearbox oil	690
10. Module for battery charge selector buttons. Control unit 2 for NOx sender. Air conditioner	691

compressor regulating valve, Auxiliary pump for heating	
11. Brake light switch, Brake fluid level warning contact, Oil level and oil temperature sender, Clutch position sender, Brake servo, Fuse holder B, Charge air cooling pump, Coolant pump for high-voltage battery	692
12. Digital sound package control unit, Driver side exterior mirror, Passenger side exterior mirror, Light for driver door background lighting, Earth point, in front left footwell	693
13. Driver exterior door handle, Rain and light sensor, Driver door control unit, Control unit for electronic steering column lock, Diagnostic connection, Driver door lock unit, Earth point, lower part of left A-pillar	694
14. Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface	695
15. Rotary light switch, Dash panel insert, Front camera for driver assist systems, Fuse holder C	696
16. Fuse holder C, Front interior light	697
17. Front passenger seat adjustment control unit, Driver seat adjustment control unit, Control unit for front left belt tensioner, Earth point, on lower part of left B-pillar	698
18. Rear left door lock unit, Rear driver side window regulator motor, Heated seat cushion for front passenger seat, Heated bench seat cushion for rear left seat	699
19. Rear driver side door control unit, Rear passenger side door control unit, Light for rear driver side interior door handle illumination, Light for rear passenger side interior door handle illumination, Rear right door lock unit, Metering pump, Rear passenger side window regulator motor, Heated bench seat cushion for rear right seat, Earth point, on lower part of right B-pillar	700
20. Fuel pump control unit, Rear lid control unit, Left tail light cluster 2	701
21. Button to close rear lid in luggage compartment, Amplitude modulation (AM) frequency filter, DC/AC converter with socket, 12 V - 230 V, Power latching for rear lid	702
22. All-wheel drive control unit, Rear lid power opening control unit, Left tail light cluster, Right tail light cluster, Earth point 1, on right rear wheel housing	703
23. Delivery unit for reducing agent metering system, Heater for reducing agent line (heater circuit 2)	704
24. Rear lid handle, Control unit 1 for information electronics, Control unit for navigation system	705
25. USB charging socket 1, USB connection 1	706
26. ABS control unit, Front right footwell light, Driver side exterior mirror, Passenger side exterior mirror, Glove compartment light, Earth point, on right headlight	707
27. Front passenger exterior door handle, Fresh air blower control unit, Light 1 for roof contour lighting, Light 2 for roof contour lighting, Light for passenger door background lighting, Earth point, lower part of right A-pillar	708
28. Sliding sunroof adjustment control unit, Auxiliary heater control unit, Right fog light bulb, Front right headlight, Refrigerant shut-off valve for heater and air conditioning unit, Vacuum pump for brakes, Earth point 1, on front of right longitudinal member	709
29. Hazard warning light switch, Heater and air conditioning controls, Bonnet contact switch, Pressure sender for refrigerant circuit, Interface for entry and start system	710
30. Selector mechanism, Switch module 1 in centre console, Switch module 2 in centre console	711
31. Auxiliary air heater control unit, Control unit for head-up display, Torque vectoring control unit 1, Torque vectoring control unit 2, Cigarette lighter, 12 V socket 2, 12 V socket 3	712
32. High-voltage battery 1, Module monitor control unit for batteries, Engine sound generator control unit	713
<b>064 - Entry and start authorisation , (4F2),(4I3)</b>	<b>714-720</b>
1. Entry and start authorisation , (4F2),(4I3)	714
2. Onboard supply control unit, Engine/motor control unit, Interface for entry and start system, Fuse holder C	715
3. Data bus diagnostic interface, Control unit for electronic steering column lock, Interface for entry and start system	716
4. Driver exterior door handle, Front passenger exterior door handle, Interface for entry and start system	717
5. Driver exterior door handle, Front passenger exterior door handle, Interface for entry and start system	718
6. Rear lid power opening control unit, Interface for entry and start system, Luggage compartment aerial for entry and start system, Interior aerial 1 for entry and start system, Interior aerial 2 for entry and start system	719
7. Starter button, Interface for entry and start system, Rear bumper aerial for entry and start system	720
<b>065 - LED headlights , (8IU),(8IX),(8Q5)</b>	<b>721-725</b>
1. LED headlights , (8IU),(8IX),(8Q5)	721
2. Onboard supply control unit, Front left headlight, Fuse holder C	722
3. Onboard supply control unit, Control unit for cornering light and headlight range control, Front right headlight	723
4. Rear left vehicle level sender. Onboard supply control unit. Data bus diaanostic interface.	724-725

Control unit for cornering light and headlight range control	
066 - USB charging sockets , (UQ2)	726-727
1. USB charging sockets , (UQ2)	726
2. USB charging socket fuse, Fuse holder C, USB charging socket 1	727
067 - Radio navigation system , (I8C),(I8F),(I8J)	728-742
1. Radio navigation system , (I8C),(I8F),(I8J)	728
2. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Fuse holder C	729
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	730
4. Control unit 1 for information electronics, USB hub	731
5. Control unit 1 for information electronics, USB hub	732
6. Control unit 1 for information electronics, Connection for external audio sources	733
7. Control unit 1 for information electronics	734
8. Control unit 1 for information electronics, USB connection 1	735
9. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	736
10. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	737
11. Control unit 1 for information electronics, Dash panel insert, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	738
12. Control unit 1 for information electronics, Roof aerial, GPS aerial	739
13. Control unit 1 for information electronics	740
14. Control unit 1 for information electronics, Left aerial module, Right aerial module, Heated rear window	741
15. Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	742
068 - Radio and navigation system (South Korea) , (ER7)	743-756
1. Radio and navigation system (South Korea) , (ER7)	743
2. Control unit 1 for information electronics, Control unit for navigation system, Telephone microphone, Fuse holder C, USB charging socket fuse, USB charging socket 1	744
3. Control unit 1 for information electronics, Control unit for navigation system, Connection for external audio sources	745
4. Control unit 1 for information electronics, Control unit for navigation system	746
5. Control unit 1 for information electronics, Control unit for navigation system, Roof aerial, GPS aerial	747
6. Control unit 1 for information electronics, Control unit for navigation system, USB hub	748
7. Control unit 1 for information electronics, USB hub, USB connection 1	749
8. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, USB connection 1	750
9. Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	751
10. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	752
11. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	753
12. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	754
13. Control unit in dash panel insert, Data bus diagnostic interface, Control unit 1 for information electronics, Dash panel insert, Digital radio aerial	755
14. Onboard supply control unit, Control unit 1 for information electronics, Left aerial module, Heated rear window	756
069 - Basic equipment	757-775
1. Basic equipment	757
2. Treble horn, Bass horn, Heated rear window relay, Horn relay, Fuse holder B, Fuse holder C	758
3. Terminal 15 voltage supply relay, Fuse holder C	759
4. Brake fluid level warning contact, Ambient temperature sensor, Coolant shortage indicator sender, Onboard supply control unit	760
5. Onboard supply control unit, Left fog light bulb, Left daytime running light bulb, Front left headlight, Front left turn signal bulb, Left headlight dipped beam bulb, Left headlight main beam bulb, Left headlight range control motor	761
6. Onboard supply control unit, Right fog light bulb, Right daytime running light bulb, Front right headlight, Front right turn signal bulb, Right headlight dipped beam bulb, Right headlight main beam bulb, Right headlight range control motor	762
7. Rotary light switch, Light switch, Onboard supply control unit	763
8. Hazard warning light switch, Glove compartment light switch, Onboard supply control unit.	764

Indicator lamp for hazard warning light, Luggage compartment light, Glove compartment light	
9. Front interior light button, Rear interior light button, Front interior light (door contact) button, Front left reading light button, Front right reading light button, Onboard supply control unit, Electric torch, Front interior light, Interior light, Front left reading light, Front right reading light	765
10. Rear left reading light button, Rear right reading light button, Driver vanity mirror contact switch, Front passenger vanity mirror contact switch, Onboard supply control unit, Rear left reading light, Rear right reading light, Front passenger side illuminated vanity mirror, Driver side illuminated vanity mirror, Rear left interior light, Rear right interior light, Interior light	766
11. Heater and air conditioning controls, Onboard supply control unit, Data bus diagnostic interface, Control unit for electronic steering column lock	767
12. Turn signal switch, Intermittent wiper switch, Cruise control system switch, Multifunction display call-up button, Cruise control system (CCS) SET button, Airbag coil connector and return ring with slip ring, Horn plate, Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Airbag igniter on driver side, Ignition key withdrawal lock solenoid	768
13. Ignition/starter switch, Onboard supply control unit, Rear left fog light bulb, Left tail light bulb, Left tail light cluster 2, Left brake light bulb, Left reversing light bulb	769
14. Brake light switch, Onboard supply control unit, Engine/motor control unit, Rear right fog light bulb, Right tail light bulb, Right tail light cluster 2, Right brake light bulb, Right reversing light bulb, Left number plate light, Right number plate light	770
15. Fuel tank filler flap central locking actuator, Onboard supply control unit, Left tail light cluster, Right tail light cluster, Rear left turn signal bulb, Rear right turn signal bulb, Left brake and tail light bulb, Right brake and tail light bulb	771
16. Onboard supply control unit, High-level brake light bulb	772
17. Central locking rear lid lock unit, Onboard supply control unit, Amplitude modulation (AM) frequency filter, Frequency modulation (FM) frequency filter in negative wire, Frequency modulation (FM) frequency filter in positive wire, Rear lid lock unit, Rear lid central locking motor, Heated rear window	773
18. Immobiliser reader coil, Control unit 1 for information electronics, Dash panel insert	774
19. Earth point on central tube for dash panel, centre left, Earth point on central tube for dash panel, centre right	775
070 - Multifunction steering wheel , (1XX),(1XT),(2FD),(2FE),(2FM),(2FT),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	776-778
1. Multifunction steering wheel , (1XX),(1XT),(2FD),(2FE),(2FM),(2FT),(2PK),(2PU),(2ZD),(2ZH),(2ZW)	776
2. Horn plate, Airbag control unit, Multifunction steering wheel control unit, Onboard supply control unit, Steering column electronics control unit, Data bus diagnostic interface, Engine/motor control unit, Airbag igniter on driver side, Fuse holder C	777
3. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on left in steering wheel, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit, Heated steering wheel	778
071 - Steering column electronics for heated steering wheel , (1XT),(2FM),(2FT),(2PS),(2PT),(2ZD),(2ZW)	779-781
1. Steering column electronics for heated steering wheel , (1XT),(2FM),(2FT),(2PS),(2PT),(2ZD),(2ZW)	779
2. Airbag control unit, Onboard supply control unit, Steering column electronics control unit, Engine/motor control unit, Fuse holder C	780
3. Steering column electronics control unit, Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Heated steering wheel	781
072 - 1.5l petrol engine , DACA,DACB,DADA,DPBE,DPCA	782-802
1. 1.5l petrol engine , DACA,DACB,DADA,DPBE,DPCA	782
2. Battery, Starter, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B	783
3. Main relay, Fuse holder B	784
4. Fuse holder C, Vacuum pump for brakes	785
5. Switch module 2 in centre console, Onboard supply control unit	786
6. Engine/motor control unit, Radiator fan	787
7. Accelerator pedal module, Radiator outlet coolant temperature sender, Gearbox neutral position sender, Engine/motor control unit	788
8. Brake light switch, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	789
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	790
10. Data bus diagnostic interface, Engine/motor control unit, Exhaust flap control unit	791
11. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	792
12. Enaine/motor control unit	793

13. Pressure sensor for activated charcoal filter air flushing, Oil level and oil temperature sender, Engine/motor control unit	794
14. Oil pressure sender, Charge pressure sender, Engine/motor control unit, Charge pressure positioner	795
15. Engine speed sender, Knock sensor 1, Fuel pressure sender, Exhaust gas pressure sensor 1, Engine/motor control unit	796
16. Intake manifold sender, Coolant temperature sender, Engine outlet coolant temperature sender, Inlet camshaft position sender, Exhaust camshaft position sender, Engine/motor control unit	797
17. Throttle valve module, Engine/motor control unit, Fuel metering valve, Actuator for engine temperature regulation	798
18. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4, Activated charcoal filter solenoid valve 1, Inlet camshaft control valve 1	799
19. Engine/motor control unit, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet cam actuator for cylinder 2, Exhaust cam actuator for cylinder 2, Inlet cam actuator for cylinder 3, Exhaust cam actuator for cylinder 3, Auxiliary pump for heating	800
20. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 1, Spark plug 2, Spark plug 3, Spark plug 4	801
21. Fuel delivery unit, Fuel gauge sender 2, Fuel pump control unit, Dash panel insert	802
<b>073 - Dual clutch gearbox 0GC , (0IJ)</b>	<b>803-807</b>
1. Dual clutch gearbox 0GC , (0IJ)	803
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder B, Fuse holder C	804
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Auxiliary hydraulic pump 1 for gearbox oil	805
4. Selector mechanism, Onboard supply control unit, Mechatronic unit for dual clutch gearbox, Selector lever position display	806
5. Selector mechanism, Data bus diagnostic interface	807
<b>074 - Convenience system , (L0L)</b>	<b>808-845</b>
1. Convenience system , (L0L)	808
2. Fuse holder C	809
3. Fuse holder C	810
4. Coupling point for front left door	811
5. Coupling point for front left door	812
6. Coupling point for front left door	813
7. Potentiometer for horizontal adjustment of driver side mirror, Potentiometer for vertical adjustment of driver side mirror, Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Heated exterior mirror on driver side	814
8. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Entry light in exterior mirror, driver side, Heated exterior mirror on driver side	815
9. Driver door control unit, Front left entry light	816
10. Driver side interior locking button for central locking system, Driver door control unit, Driver side interior locking warning lamp	817
11. Exterior mirror adjuster, Operating unit for window regulator in driver door, Rear window regulator isolation switch, Front left window regulator switch, Mirror adjustment switch, Mirror adjustment changeover switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Exterior mirror heater button, Fold-in mirror switch, Childproof lock button, Operating unit for window regulator in driver door, Driver door control unit, Window regulator lock warning lamp, Warning lamp for activated left childproof lock, Warning lamp for activated right childproof lock, Mirror adjustment switch illumination bulb	818
12. Rear lid remote release button, Remote release button for fuel filler flap and rear lid, Driver door control unit, Central locking SAFELOCK function warning lamp, Light for driver side interior door handle illumination, Driver side door warning lamp	819
13. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Driver door lock unit, Driver door central locking motor, Driver side window regulator motor, Driver door central locking SAFELOCK function motor	820
14. Rear driver side window regulator button, Rear driver side window regulator motor, Light for driver door background lighting	821
15. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Rear left door lock unit, Rear left door central locking motor, lock, Rear driver side window regulator motor, Light for rear door background lighting, driver side	822
16. Light for rear driver side interior door handle illumination	823

17. Coupling point for front right door	824
18. Coupling point for front right door	825
19. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Front passenger side fold-in mirror motor, Heated exterior mirror on passenger side	826
20. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Front passenger side fold-in mirror motor, Entry light in exterior mirror, passenger side, Heated exterior mirror on passenger side	827
21. Front passenger door control unit, Front right entry light	828
22. Front passenger door control unit, Light for passenger side interior door handle illumination	829
23. Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Front passenger side window regulator motor	830
24. Front passenger door contact switch, Front passenger door central locking actuator for SAFELOCK function, Front passenger door control unit, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor, Light for passenger door background lighting	831
25. Rear passenger side window regulator button, Rear passenger side window regulator motor, Light for passenger door background lighting	832
26. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Light for rear passenger side interior door handle illumination, Rear right door lock unit, Rear right door central locking motor, lock, Light for rear door background lighting, passenger side	833
27. Front left footwell light, Front right footwell light, Light for rear passenger side interior door handle illumination	834
28. Interior mirror, Anti-dazzle interior mirror button, Data bus diagnostic interface, Front interior light	835
29. Rain and light sensor, Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	836
30. Rear lid handle, Rear lid handle release button, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor	837
31. Button to close rear lid in luggage compartment	838
32. Sensor in motor 1 for rear lid, Sensor in motor 2 for rear lid, Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	839
33. Anti-trapping sender, Anti-trapping sender 2, Rear lid control unit, Power latching for rear lid, Power latching motor for rear lid	840
34. Rear lid warning buzzer, Rear lid control unit	841
35. Onboard supply control unit, Rear lid control unit	842
36. Button for deactivating interior monitoring and vehicle inclination sensor, Onboard supply control unit	843
37. Onboard supply control unit	844
38. Onboard supply control unit	845
<b>075 - Convenience system , (L0R)</b>	<b>846-883</b>
1. Convenience system , (L0R)	846
2. Fuse holder C	847
3. Fuse holder C	848
4. Coupling point for front right door	849
5. Coupling point for front right door	850
6.	851
7. Potentiometer for horizontal adjustment of driver side mirror, Potentiometer for vertical adjustment of driver side mirror, Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Driver side mirror adjustment motor 2, Driver side mirror adjustment motor, Heated exterior mirror on driver side	852
8. Driver door control unit, Driver side exterior mirror turn signal bulb, Driver side exterior mirror, Driver side fold-in mirror motor, Entry light in exterior mirror, driver side, Heated exterior mirror on driver side	853
9. Driver door control unit, Driver side door warning lamp, Front right entry light	854
10. Driver door control unit	855
11. Operating unit for window regulator in driver door, Rear window regulator isolation switch, Front left window regulator switch, Rear left window regulator switch, in driver door, Rear right window regulator switch, in driver door, Front right window regulator switch in driver door, Driver side interior locking button for central locking system, Childproof lock button, Operating unit for window regulator in driver door, Driver door control unit, Driver side interior locking warning lamp, Window regulator lock warning lamp, Warning lamp for activated left childproof lock, Warning lamp for activated right childproof lock	856
12. Exterior mirror adjuster. Mirror adjustment switch. Mirror adjustment chaneover switch.	857

Exterior mirror heater button, Rear lid remote release button, Fold-in mirror switch, Driver door control unit, Mirror adjustment switch illumination bulb, Light for driver side interior door handle illumination	
13. Driver door contact switch, Driver side contact switch in lock cylinder, Driver door central locking actuator for SAFELOCK function, Driver door control unit, Driver door lock unit, Driver door central locking motor, Driver side window regulator motor, Driver door central locking SAFELOCK function motor, Connection 2 in driver side door wiring harness	858
14. Light for driver door background lighting	859
15. Rear driver side window regulator button, Rear driver side window regulator motor	860
16. Rear right door contact switch, Rear right central locking lock unit, Rear right door central locking actuator for SAFELOCK function, Light for rear driver side interior door handle illumination, Rear right door lock unit, Rear right door central locking motor, lock, Light for rear door background lighting, driver side	861
17. Light for rear driver side interior door handle illumination, Coupling point for front left door	862
18. Coupling point for front left door	863
19. Potentiometer for horizontal adjustment of front passenger side mirror, Potentiometer for vertical adjustment of front passenger side mirror, Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Front passenger side mirror adjustment motor 2, Front passenger side mirror adjustment motor, Heated exterior mirror on passenger side	864
20. Front passenger door control unit, Front passenger side exterior mirror turn signal bulb, Passenger side exterior mirror, Front passenger side fold-in mirror motor, Entry light in exterior mirror, passenger side, Heated exterior mirror on passenger side	865
21. Front passenger door control unit, Front left entry light	866
22. Front passenger door control unit, Light for passenger side interior door handle illumination	867
23. Front passenger side window regulator button, Front passenger door control unit, Button illumination bulb, Light for passenger side interior door handle illumination, Front passenger side window regulator motor	868
24. Front passenger door contact switch, Front passenger door central locking actuator for SAFELOCK function, Front passenger door control unit, Front passenger door lock unit, Front passenger door central locking motor, Front passenger door central locking SAFELOCK function motor, Light for passenger door background lighting, Earth connection 4, in front passenger side door wiring harness	869
25. Rear passenger side window regulator button, Rear passenger side window regulator motor	870
26. Rear left door contact switch, Rear left central locking lock unit, Rear left door central locking actuator for SAFELOCK function, Light for rear passenger side interior door handle illumination, Rear left door lock unit, Rear left door central locking motor, lock	871
27. Front left footwell light, Front right footwell light, Light for rear passenger side interior door handle illumination, Light for rear door background lighting, passenger side	872
28. Interior mirror, Anti-dazzle interior mirror button, Front interior light	873
29. Rain and light sensor, Rear lid power opening sender, Rear lid power opening sender 2, Rear lid power opening control unit, Interface for entry and start system	874
30. Rear lid handle, Rear lid handle release button, Central locking rear lid lock unit, Rear lid lock unit, Rear lid central locking motor	875
31. Button to close rear lid in luggage compartment	876
32. Sensor in motor 1 for rear lid, Sensor in motor 2 for rear lid, Rear lid control unit, Motor 1 for rear lid, Motor 2 for rear lid	877
33. Anti-trapping sender, Anti-trapping sender 2, Rear lid control unit, Power latching motor for rear lid	878
34. Rear lid warning buzzer, Rear lid control unit	879
35. Onboard supply control unit, Rear lid control unit	880
36. Button for deactivating interior monitoring and vehicle inclination sensor, Onboard supply control unit	881
37. Onboard supply control unit	882
38. Onboard supply control unit	883
<b>076 - Lane change assist , (7Y1),(7Y5)</b>	<b>884-887</b>
1. Lane change assist , (7Y1),(7Y5)	884
2. Data bus diagnostic interface, Lane change assist control unit, Fuse holder C, Driver side exterior mirror, Passenger side exterior mirror	885
3. Lane change assist control unit, Lane change assist control unit 2	886
4. Lane change assist control unit 2, Driver side exterior mirror, Passenger side exterior mirror	887
<b>077 - Sound system DYNAUDIO , (9VC),(8AR)</b>	<b>888-894</b>
1. Sound system DYNAUDIO , (9VC),(8AR)	888
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Centre loudspeaker, Fuse holder C	889
3. Digital sound package control unit, Front left bass loudspeaker	890
4. Digital sound package control unit, Front left treble loudspeaker	891

5. Digital sound package control unit, Front right bass loudspeaker, Subwoofer	892
6. Digital sound package control unit, Front right treble loudspeaker	893
7. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	894
078 - Emergency call module , (8AR),(I8I)	895-900
1. Emergency call module , (8AR),(I8I)	895
2. Airbag control unit, Data bus diagnostic interface, Emergency call module control unit and communication unit, Loudspeaker for emergency call module, Fuse holder C	896
3. Control unit 1 for information electronics, Emergency call module control unit and communication unit	897
4. Operating unit for preparation for mobile telephone, Emergency call module control unit and communication unit	898
5. Emergency call module control unit and communication unit, Roof aerial, LTE aerial 2	899
6. Emergency call module control unit and communication unit, Telephone microphone	900
079 - USB charging sockets , (U9C)	901-902
1. USB charging sockets , (U9C)	901
2. Onboard supply control unit, USB charging socket fuse, Fuse holder C, USB charging socket 1	902
080 - Radio navigation system , (8AR),(I8I),(8RE),(8RM)	903-913
1. Radio navigation system , (8AR),(I8I),(8RE),(8RM)	903
2. Fuse holder C	904
3. Data bus diagnostic interface, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics, Dash panel insert	905
4. Multimedia system operating unit, Display unit for front information display and operating unit control unit, Control unit 1 for information electronics	906
5. Onboard supply control unit, Control unit 1 for information electronics, USB connection 1	907
6. Digital sound package control unit, Control unit 1 for information electronics, Emergency call module control unit and communication unit, Telephone microphone	908
7. Control unit 1 for information electronics, Front left treble loudspeaker, Front left bass loudspeaker	909
8. Control unit 1 for information electronics, Front right treble loudspeaker, Front right bass loudspeaker	910
9. Control unit 1 for information electronics, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	911
10. Control unit 1 for information electronics, Roof aerial, GPS aerial, Left aerial module, LTE aerial 1	912
11. Control unit 1 for information electronics, Left aerial module, Right aerial module, Heated rear window	913
081 - LED headlights , (8IR)	914-917
1. LED headlights , (8IR)	914
2. Onboard supply control unit, Front left headlight	915
3. Onboard supply control unit, Front right headlight	916
4. Onboard supply control unit, Left fog light bulb, Right fog light bulb	917
082 - Tail light clusters with LEDs , (8SQ)	918-925
1. Tail light clusters with LEDs , (8SQ)	918
2. Reversing light switch, Onboard supply control unit, Fuse holder C	919
3. Onboard supply control unit, Left tail light cluster	920
4. Onboard supply control unit, Right tail light cluster	921
5. Onboard supply control unit	922
6. Onboard supply control unit	923
7. Left tail light cluster 2	924
8. Right tail light cluster 2	925
083 - LED headlights , (8IU),(8IX),(8Q5)	926-930
1. LED headlights , (8IU),(8IX),(8Q5)	926
2. Onboard supply control unit, Front left headlight, Fuse holder B, Fuse holder C	927
3. Onboard supply control unit, Left fog light bulb, Right fog light bulb, Front right headlight	928
4. Rear left vehicle level sender, Onboard supply control unit, Data bus diagnostic interface, Control unit for cornering light and headlight range control	929
5. Data bus diagnostic interface, Control unit for cornering light and headlight range control	930
084 - 2.0l diesel engine , DTRC,DTSA,DTSB,DTUA	931-963
1. 2.0l diesel engine , DTRC,DTSA,DTSB,DTUA	931
2. Battery, Battery monitor control unit, Fuse holder B	932
3. Starter, Auxiliary air heater control unit, Fuse holder B	933
4. Fuse holder B	934
5. Fuse holder B	935
6. Fuse holder B, Fuse holder C	936
7. Switch module 2 in centre console. Onboard supply control unit	937

8. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert	938
9. Engine/motor control unit	939
10. Air mass measurement module, Clutch position sender, ABS control unit, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	940
11. Water separator sender, Gearbox neutral position sender, Engine/motor control unit	941
12. Accelerator pedal module, Engine/motor control unit, Heater element for crankcase breather, Injector for reducing agent	942
13. Brake light switch, Exhaust gas temperature sender 4, Engine/motor control unit, Radiator fan	943
14. Lambda probe 1 before catalytic converter, Control unit for NOx sender, Control unit 2 for NOx sender, Engine/motor control unit	944
15. Control unit 3 for NOx sender, Control unit 1 for particulate sensor, Engine/motor control unit	945
16. Engine/motor control unit, Exhaust flap control unit	946
17. Oil level and oil temperature sender, Engine/motor control unit, Injector 2 for reducing agent	947
18. Alternator with voltage regulator, Engine/motor control unit, Valve for oil pressure control, Charge air cooling pump, Auxiliary pump for heating	948
19. Steering column electronics control unit, Engine/motor control unit	949
20. Ignition/starter switch, Delivery unit for reducing agent metering system, Engine/motor control unit, Interface for entry and start system	950
21. Delivery unit for reducing agent metering system, Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	951
22. Engine/motor control unit, Control unit for reducing agent heater	952
23. Data bus diagnostic interface, Engine/motor control unit	953
24. Engine/motor control unit, Glow plug 3, Glow plug 1, Glow plug 2, Glow plug 4	954
25. Oil pressure sender, Exhaust gas temperature sender 1, Pressure differential sender, Engine/motor control unit, Fuel pressure regulating valve	955
26. Charge pressure sender, Coolant temperature sender, Exhaust gas temperature sender 1, Coolant temperature sender for charge air cooler, Engine/motor control unit	956
27. Engine outlet coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Temperature sensor 2 for exhaust recirculation, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	957
28. Throttle valve module, Engine/motor control unit, Fuel metering valve	958
29. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Engine/motor control unit	959
30. Engine temperature regulation module, Engine/motor control unit, Charge pressure positioner	960
31. Fuel pressure sender, Engine/motor control unit, Actuator for engine temperature regulation, Coolant regulating valve, Piston cooling jet control valve	961
32. Temperature and pressure sender for low-pressure fuel system, Engine speed sender, Inlet camshaft position sender, Engine/motor control unit	962
33. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	963
085 - 2.0l petrol engine , DNFG,DNPA,DSFE	964-990
1. 2.0l petrol engine , DNFG,DNPA,DSFE	964
2. Battery, Battery monitor control unit, Fuse holder B	965
3. Starter, Fuse holder B	966
4. Fuse holder B	967
5. Switch module 2 in centre console, Operating unit for driving mode selection, Onboard supply control unit, Fuse holder C	968
6. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Radiator fan	969
7. Brake light switch, Dual exhaust gas temperature sensor 1, Radiator outlet coolant temperature sender, Engine/motor control unit	970
8. Accelerator pedal module, Engine/motor control unit	971
9. Lambda probe 1 after catalytic converter, Data bus diagnostic interface, Engine/motor control unit	972
10. Alternator with voltage regulator, Charge pressure sender, Engine/motor control unit	973
11. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Exhaust flap control unit, Interface for entry and start system	974
12. Engine/motor control unit, Exhaust flap control unit, Exhaust flap control unit 2	975
13. Tank breather pressure sensor 1, Engine/motor control unit	976
14. Lambda probe 1 before catalytic converter, Engine speed sender, Hall sender 3, Engine/motor control unit	977
15. Engine speed sender, Coolant temperature sender, Sender 1 for turbocharger speed, Pressure differential sender for particulate filter, Engine/motor control unit	978
16. Intake manifold sender, Knock sensor 1, Engine/motor control unit, Fuel metering valve	979
17. Throttle valve module, Engine/motor control unit, Actuator for engine temperature regulation	980
18. Oil pressure switch. Oil pressure switch for reduced oil pressure. Stage 2 oil pressure switch.	981

Charge pressure control module, Engine/motor control unit		
19. Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	982	
20. Cam adjustment actuator 7, Cam adjustment actuator 8, Engine/motor control unit, Coolant valve for gearbox, Coolant circulation pump	983	
21. Engine/motor control unit, Ignition coil 1 with output stage, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Spark plug 1, Spark plug 2, Spark plug 3	984	
22. Oil level and oil temperature sender, Engine/motor control unit, Ignition coil 4 with output stage, Exhaust camshaft control valve 1, Valve for oil pressure control, Spark plug 4	985	
23. Engine/motor control unit, Activated charcoal filter solenoid valve 1, Camshaft control valve 1, Turbocharger air recirculation valve, Intake manifold flap valve	986	
24. Hall sender, Fuel pressure sender, Engine/motor control unit, Piston cooling jet control valve	987	
25. Intake manifold flap potentiometer, Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3	988	
26. Fuel delivery unit, Fuel pump control unit, Engine/motor control unit, Dash panel insert, Injector, cylinder 4	989	
27. Fuel delivery unit, Fuel gauge sender 2, Dash panel insert	990	
<b>086 - 1.4l petrol engine , DGEA</b>	<b>991-1012</b>	
1. 1.4l petrol engine , DGEA	991	
2. Battery, Battery monitor control unit, Fuse holder B, Fuse holder F	992	
3. Fuse holder B	993	
4. Fuel delivery unit, Fuel pump control unit, Dash panel insert, Fuse holder B	994	
5. Switch module 2 in centre console, Onboard supply control unit	995	
6. Radiator outlet coolant temperature sender, Engine/motor control unit, Radiator fan	996	
7. Accelerator pedal module, Tank pressure sensor, Temperature sender after electric drive motor, Engine/motor control unit	997	
8. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Brake servo	998	
9. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	999	
10. Power and control electronics for electric drive, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	1000	
11. Temperature sender before particulate filter, Temperature sender after particulate filter, Data bus diagnostic interface, Engine/motor control unit	1001	
12. Engine/motor control unit, Fuel tank shut-off valve, Coolant circulation pump before power and control electronics for electric drive	1002	
13. Oil level and oil temperature sender, Engine/motor control unit	1003	
14. Engine/motor control unit, Coolant valve for gearbox, Coolant changeover valve 2, Coolant pump for high-temperature circuit	1004	
15. Oil pressure switch, Oil pressure switch for reduced oil pressure, Inlet camshaft position sender, Engine/motor control unit	1005	
16. Intake manifold sender, Coolant temperature sender, Coolant temperature sender for heater, Exhaust camshaft position sender, Engine/motor control unit	1006	
17. Engine speed sender, Fuel pressure sender, Pressure differential sender for particulate filter, Engine/motor control unit	1007	
18. Charge pressure sender, Charge pressure control module, Knock sensor 1, Engine/motor control unit	1008	
19. Throttle valve module, Engine/motor control unit, Fuel metering valve	1009	
20. Engine/motor control unit, Ignition coil 1 with output stage, Activated charcoal filter solenoid valve 1, Exhaust camshaft control valve 1, Valve for oil pressure control, Inlet camshaft control valve 1, Spark plug 1, Coolant pump for low-temperature circuit	1010	
21. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	1011	
22. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1012	
<b>087 - Dual clutch gearbox 0DD , DGEA</b>	<b>1013-1017</b>	
1. Dual clutch gearbox 0DD , DGEA	1013	
2. Engine/motor control unit, Mechatronic unit for dual clutch gearbox, Fuse holder A, Fuse holder C	1014	
3. Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1015	
4. Selector mechanism, Data bus diagnostic interface, Mechatronic unit for dual clutch gearbox	1016	
5. Selector mechanism, Onboard supply control unit	1017	
<b>088 - High-voltage system , DGEA</b>	<b>1018-1022</b>	
1. High-voltage system , DGEA	1018	
2. Power and control electronics for electric drive, Fuse holder A, Fuse holder B, Fuse holder C	1019	
3. Coolant shortage indicator sender 2, Power and control electronics for electric drive, Data bus diagnostic interface, Engine/motor control unit	1020	
4. Chardina unit 1 for hiah-voltade battery. Power and control electronics for electric drive.	1021	

Three-phase current drive		
5. High-voltage battery 1, Power and control electronics for electric drive, Three-phase current drive		1022
089 - High-voltage battery system , DGEA		1023-1039
1. High-voltage battery system , DGEA		1023
2. Fuse holder B, Fuse holder C, High-voltage heater (PTC)		1024
3. Refrigerant shut-off valve 1 for hybrid battery, Maintenance connector for high-voltage system		1025
4. Charging unit 1 for high-voltage battery		1026
5. Airbag control unit, Data bus diagnostic interface		1027
6. High-voltage battery 1, Module monitor control unit for batteries, Switching unit for high-voltage battery, Coolant pump for high-voltage battery		1028
7. High-voltage battery 1, Module monitor control unit for batteries, Switching unit for high-voltage battery		1029
8. High-voltage battery 1, Module monitor control unit for batteries, Switching unit for high-voltage battery		1030
9. High-voltage battery 1, Battery temperature sender, Power and control electronics for electric drive, Module monitor control unit for batteries, Switching unit for high-voltage battery		1031
10. High-voltage battery 1, Battery temperature sender 2, Module monitor control unit for batteries, Precharge contactor for high-voltage battery, Protection resistor for high-voltage battery, Switching unit for high-voltage battery		1032
11. High-voltage battery 1, Current sensor 2 for high-voltage battery, Module monitor control unit for batteries, High-voltage battery power contactor 1, High-voltage battery power contactor 2, Switching unit for high-voltage battery, High-voltage system fuse 1		1033
12. High-voltage battery 1, Current sensor for high-voltage battery, Module monitor control unit for batteries, Switching unit for high-voltage battery		1034
13. High-voltage battery 1		1035
14. High-voltage battery 1, Battery module 1, Battery module 0		1036
15. High-voltage battery 1, Battery module 1, Battery module 2, Battery module 3		1037
16. High-voltage battery 1, Battery module 4, Battery module 5		1038
17. High-voltage battery 1, Battery module 5, Battery module 6, Battery module 7		1039
090 - Pilot line for high-voltage system , DGEA		1040-1042
1. Pilot line for high-voltage system , DGEA		1040
2. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, Maintenance connector for high-voltage system, Air conditioner compressor, High-voltage heater (PTC)		1041
3. High-voltage battery 1, Module monitor control unit for batteries, Switching unit for high-voltage battery		1042
091 - Engine sound generator , DGEA		1043-1045
1. Engine sound generator , DGEA		1043
2. Engine sound generator control unit, Actuator 1 for engine sound generator, Fuse holder C		1044
3. Data bus diagnostic interface, Engine/motor control unit, Engine sound generator control unit		1045
092 - Air conditioning system for models with high-voltage system , DGEA		1046-1053
1. Air conditioning system for models with high-voltage system , DGEA		1046
2. Fresh air blower control unit, Fuse holder B, Fuse holder C		1047
3. Heater and air conditioning controls, Air quality sensor, Pressure sender for refrigerant circuit		1048
4. Heater and air conditioning controls, Data bus diagnostic interface, Air conditioner compressor		1049
5. Heater and air conditioning controls, Refrigerant shut-off valve for high-voltage battery heat exchanger, Three-phase current drive, High-voltage heater (PTC)		1050
6. Heater and air conditioning controls, Operating and display unit for rear air conditioning system, Footwell vent temperature sender, Evaporator temperature sensor, Refrigerant shut-off valve for heater and air conditioning unit		1051
7. Heater and air conditioning controls, Potentiometer for front air distribution flap control motor, Temperature flap, Air distribution flap, Air recirculation flap, Front air distribution flap control motor		1052
8. Heater and air conditioning controls, Left vent temperature sender, Right vent temperature sender, Rear vent temperature sender		1053
093 - Charging sockets for high-voltage system , DGEA		1054-1060
1. Charging sockets for high-voltage system , DGEA		1054
2. Charging unit 1 for high-voltage battery, Module for battery charge selector buttons, Fuse holder B, Maintenance connector for high-voltage system		1055
3. Charging unit 1 for high-voltage battery, Actuator for high-voltage charging flap lock 1, High-voltage battery charging socket 1		1056
4. Charging unit 1 for high-voltage battery, Data bus diagnostic interface, High-voltage battery charging socket 1		1057
5. Charging unit 1 for high-voltage battery, Power and control electronics for electric drive, High-voltage heater (PTC)		1058
6. Chardina unit 1 for high-voltage battery. Air conditioner compressor		1059

7. High-voltage battery 1, Module monitor control unit for batteries, Switching unit for high-voltage battery	1060
094 - 2.0l petrol engine , DNNA	1061-1086
1. 2.0l petrol engine , DNNA	1061
2. Battery, Battery monitor control unit, Fuse holder B	1062
3. Starter, Fuse holder B	1063
4. Fuse holder B	1064
5. Switch module 2 in centre console, Operating unit for driving mode selection, Onboard supply control unit, Fuse holder C	1065
6. Fuel delivery unit, Fuel pump control unit, Dash panel insert	1066
7. Fuel gauge sender 2, Engine/motor control unit, Dash panel insert	1067
8. Brake light switch, Engine/motor control unit, Radiator fan	1068
9. Dual exhaust gas temperature sensor 1, Engine/motor control unit, Mechatronic unit for dual clutch gearbox	1069
10. Accelerator pedal module, Engine/motor control unit	1070
11. Lambda probe 1 after catalytic converter, Lambda probe 1 before catalytic converter, Engine/motor control unit	1071
12. Alternator with voltage regulator, Charge pressure sender, Data bus diagnostic interface, Engine/motor control unit	1072
13. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	1073
14. Radiator outlet coolant temperature sender, Engine/motor control unit	1074
15. Engine/motor control unit	1075
16. Oil pressure switch for reduced oil pressure, Stage 2 oil pressure switch, Knock sensor 1, Coolant temperature sender, Oil level and oil temperature sender, Engine/motor control unit	1076
17. Oil pressure switch, Cam adjustment actuator 1, Cam adjustment actuator 2, Cam adjustment actuator 3, Cam adjustment actuator 4, Cam adjustment actuator 5, Cam adjustment actuator 6, Engine/motor control unit	1077
18. Cam adjustment actuator 7, Cam adjustment actuator 8, Hall sender 3, Engine/motor control unit, Fuel metering valve	1078
19. Engine speed sender, Pressure differential sender for particulate filter, Engine/motor control unit, Camshaft control valve 1, Turbocharger air recirculation valve, Exhaust camshaft control valve 1	1079
20. Throttle valve module, Engine/motor control unit, Activated charcoal filter solenoid valve 1, Coolant valve for gearbox	1080
21. Intake manifold sender, Charge pressure control module, Engine/motor control unit	1081
22. Engine temperature regulation module, Engine/motor control unit, Ignition coil 1 with output stage, Spark plug 1	1082
23. Engine/motor control unit, Ignition coil 2 with output stage, Ignition coil 3 with output stage, Ignition coil 4 with output stage, Spark plug 2, Spark plug 3, Spark plug 4	1083
24. Hall sender, Fuel pressure sender, Engine/motor control unit, Coolant circulation pump	1084
25. Intake manifold flap potentiometer, Engine/motor control unit, Intake manifold flap valve, Valve for oil pressure control, Piston cooling jet control valve	1085
26. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1086
095 - Electromechanical brake servo , DGEA	1087-1089
1. Electromechanical brake servo , DGEA	1087
2. Data bus diagnostic interface, Engine/motor control unit, Brake servo, Fuse holder B	1088
3. Onboard supply control unit, Brake servo	1089
096 - Multifunction steering wheel , (1XX),(1XT),(2FD),(2FE),(2FM),(2FT),(2PD),(2PE),(2PS),(2PT)	1090-1093
1. Multifunction steering wheel , (1XX),(1XT),(2FD),(2FE),(2FM),(2FT),(2PD),(2PE),(2PS),(2PT)	1090
2. Heated steering wheel sender, Horn plate, Multifunction steering wheel control unit, Steering column electronics control unit, Airbag igniter on driver side, Heated steering wheel	1091
3. Multifunction buttons on left in steering wheel, Multifunction steering wheel control unit, Control unit for steering wheel contact detection, Heated steering wheel	1092
4. Tiptronic switch in steering wheel to shift up, Tiptronic switch in steering wheel to shift down, Multifunction buttons on right in steering wheel, Multifunction steering wheel control unit	1093
097 - Front camera for driver assist systems , (QK1)	1094-1096
1. Front camera for driver assist systems , (QK1)	1094
2. Data bus diagnostic interface, Front camera for driver assist systems, Fuse holder C, Windscreen heater for front sensors	1095
3. Adaptive cruise control unit, Front camera for driver assist systems	1096
098 - Sound system DYNAUDIO , (8RI)	1097-1102
1. Sound system DYNAUDIO , (8RI)	1097
2. Digital sound package control unit, Data bus diagnostic interface, Control unit 1 for information electronics, Fuse holder C	1098

3. Digital sound package control unit, Centre loudspeaker, Subwoofer	1099
4. Digital sound package control unit, Front left treble loudspeaker, Front left bass loudspeaker	1100
5. Digital sound package control unit, Front right treble loudspeaker, Front right bass loudspeaker	1101
6. Digital sound package control unit, Rear left treble loudspeaker, Rear left bass loudspeaker, Rear right treble loudspeaker, Rear right bass loudspeaker	1102
099 - 2.0l diesel engine , DFGA	1103-1130
1. 2.0l diesel engine , DFGA	1103
2. Battery, Battery monitor control unit, Starter relay 1, Starter relay 2, Fuse holder B, Fuse 17 on fuse holder B, Fuse 18 on fuse holder B	1104
3. Starter, Terminal 30 voltage supply relay, High heat output relay, Auxiliary air heater control unit, Fuse holder B, Fuse 11 on fuse holder B, Fuse 12 on fuse holder B, Fuse 22 on fuse holder B, Fuse 23 on fuse holder B	1105
4. Fuse holder B, Fuse 3 on fuse holder B, Fuse 4 on fuse holder B, Fuse 5 on fuse holder B, Fuse 6 on fuse holder B, Fuse 7 on fuse holder B, Fuse 8 on fuse holder B	1106
5. Fuel gauge sender, Fuel delivery unit, Fuel system pressurisation pump, Fuel gauge sender 2, Control unit in dash panel insert, Fuel pump control unit, Dash panel insert, Fuse holder B, Fuse 10 on fuse holder B	1107
6. Relay for reducing agent metering system, Fuse holder C, Fuse 1 on fuse holder C, Fuse 20 on fuse holder C, Fuse 49 on fuse holder C	1108
7. Automatic glow period control unit, Low heat output relay, Fuse holder B, Fuse 24 on fuse holder B	1109
8. Switch module 2 in centre console, Onboard supply control unit	1110
9. Engine/motor control unit	1111
10. Engine/motor control unit	1112
11. Ignition/starter switch, Steering column electronics control unit, Engine/motor control unit, Interface for entry and start system	1113
12. Data bus diagnostic interface, Engine/motor control unit, Radiator fan	1114
13. Control unit for NOx sender, Water separator sender, Engine/motor control unit, Control unit for NOx sender 2	1115
14. Brake light switch, Lambda probe 1 before catalytic converter, Lambda probe, Engine/motor control unit, Lambda probe heater	1116
15. Accelerator pedal module, Air mass meter, Accelerator position sender, Accelerator position sender 2, Engine/motor control unit, Heater element for crankcase breather	1117
16. Alternator with voltage regulator, Oil level and oil temperature sender, Engine/motor control unit, Auxiliary pump for heating	1118
17. Cylinder 3 combustion chamber pressure sender, Engine/motor control unit, Glow plug 1, Glow plug 2, Glow plug 3, Glow plug 4	1119
18. Exhaust gas temperature sender 4, Engine/motor control unit, Charge pressure control solenoid valve	1120
19. Engine speed sender, Hall sender, Fuel pressure sender, Engine/motor control unit	1121
20. Charge pressure sender, Position sender for charge pressure positioner, Engine/motor control unit, Injector for reducing agent	1122
21. Fuel temperature sender, Exhaust gas temperature sender 1, Engine/motor control unit	1123
22. Coolant temperature sender, Exhaust gas temperature sender 2, Exhaust gas temperature sender 3, Charge air temperature sender before charge air cooler, Charge air temperature sender after charge air cooler, Engine/motor control unit	1124
23. Oil pressure switch, Oil pressure switch for reduced oil pressure, Engine/motor control unit, Exhaust flap control unit, Valve for oil pressure control, Coolant valve for cylinder head	1125
24. Exhaust gas recirculation valve 1, Exhaust gas recirculation valve 2, Exhaust gas recirculation potentiometer, Exhaust gas recirculation potentiometer 2, Engine/motor control unit, Exhaust gas recirculation control motor, Exhaust gas recirculation control motor 2	1126
25. Engine/motor control unit, Injector, cylinder 1, Injector, cylinder 2, Injector, cylinder 3, Injector, cylinder 4	1127
26. Throttle valve module, Throttle valve drive for electric throttle, Throttle valve drive angle sender 1 for electric throttle, Throttle valve drive angle sender 2 for electric throttle, Throttle valve module, Engine/motor control unit, Fuel pressure regulating valve, Fuel metering valve	1128
27. Engine/motor control unit, Control unit for reducing agent heater, Heater for reducing agent line (heater circuit 2)	1129
28. Delivery unit for reducing agent metering system, Temperature sender for reducing agent, Reducing agent level sender, Reducing agent quality sensor, Engine/motor control unit, Pump for reducing agent, Reducing agent return flow pump, Heater for reducing agent tank (heater circuit 1)	1130
801 -- Fitting locations: Earth points - 3	1131-1156
1. Earth points	1131-1156
1.1 Earth points in front part of vehicle	1134-1145
1.1.1 Front from left	1135
1.1.2 Front from left. additional earth points for models with hybrid drive system	1136

1.1.3 Front from right	1137
1.1.4 1.4l petrol engine, CZCA, CZDA, CZDB, CZE, DGEA, DJVA	1138
1.1.5 1.5l petrol engine, DACA, DACB, DADA, DPBE, DPCA	1139
1.1.6 2.0l petrol engine, CHHB, CZPA, DNFG, DNPA, DRFA, DSFE	1140
1.1.7 2.0l petrol engine, DNNA	1141
1.1.8 Manual gearbox, 02Q, 0BB	1142
1.1.9 Manual gearbox, 0A6	1143
1.1.10 Dual clutch gearbox, 0D9, 0DL, 0GC	1144
1.1.11 Dual clutch gearbox, 0DD	1145
1.2 Earth points in middle part of vehicle	1146-1149
1.2.1 Left interior	1146
1.2.2 Right interior	1147
1.2.3 Interior, centre	1148
1.2.4 Steering wheel	1149
1.3 Earth points in rear part of vehicle	1150-1153
1.3.1 Right of luggage compartment	1151
1.3.2 Left of luggage compartment, rear lid	1151
1.3.3 Luggage compartment left, additional earth points for models with hybrid drive	1152
1.3.4 Rear side, view from right	1153
1.4 Earth points on roof	1154
1.4.1 Earth points on roof	1154
1.5 Earth points on vehicle underbody	1155-1156
1.5.1 Earth points for models with hybrid drive system	1156
802 - -Fitting locations: Fuses - 3	1157-1278
1. Fuses	1157-1278
1.1 Fuse holder A -SA-	1157-1162
1.1.1 Fitting location of fuse holder A -SA-	1158
1.1.2 Fuse assignment for fuse holder A -SA-, from January 2016, only models with battery in engine compartment	1159
1.1.3 Fuse assignment for fuse holder A -SA-, from August 2016, only models with battery in luggage compartment	1160
1.1.4 Fitting location of fuse holder A -SA-, for models with hybrid drive system, from November 2020	1160-1161
1.1.5 Fuse assignment for fuse holder A -SA-, for models with hybrid drive system, from November 2020	1162
1.2 Fuse holder B -SB-	1163-1206
1.2.1 Fitting location of fuse holder B -SB-	1163
1.2.2 Fuse assignment for fuse holder B -SB-, from January 2016	1164-1167
1.2.3 Fuse assignment for fuse holder B -SB-, from May 2016	1168-1171
1.2.4 Fuse assignment for fuse holder B -SB-, from May 2017	1172-1175
1.2.5 Fuse assignment for fuse holder B -SB-, from November 2017	1176-1179
1.2.6 Fuse assignment for fuse holder B -SB-, from July 2018	1180-1183
1.2.7 Fuse assignment for fuse holder B -SB-, from November 2018	1184-1187
1.2.8 Fuse assignment for fuse holder B -SB-, from March 2020	1188-1191
1.2.9 Fuse assignment for fuse holder B -SB-, from July 2020	1192-1196
1.2.10 Fuse assignment for fuse holder B -SB-, from November 2020	1197-1201
1.2.11 Fuse assignment for fuse holder B -SB-, from November 2021	1202-1206
1.3 Fuse holder C -SC-	1207-1261
1.3.1 Fitting location of fuse holder C -SC-, LHD models	1208
1.3.2 Fitting location of fuse holder C -SC-, RHD models	1209
1.3.3 Fuse assignment for fuse holder C -SC-, from January 2016	1210-1213
1.3.4 Fuse assignment for fuse holder C -SC-, from May 2016	1214-1217
1.3.5 Fuse assignment for fuse holder C -SC-, from November 2016	1218-1222
1.3.6 Fuse assignment for fuse holder C -SC-, from May 2017	1223-1226
1.3.7 Fuse assignment for fuse holder C -SC-, from November 2017	1227-1230
1.3.8 Fuse assignment for fuse holder C -SC-, from July 2018	1231-1235
1.3.9 Fuse assignment for fuse holder C -SC-, from November 2018	1236-1239
1.3.10 Fuse assignment for fuse holder C -SC-, from July 2019	1240-1243
1.3.11 Fuse assignment for fuse holder C -SC-, from July 2020	1244-1247
1.3.12 Fuse assignment for fuse holder C -SC-, from November 2020	1248-1252
1.3.13 Fuse assignment for fuse holder C -SC-, from July 2021	1253-1257
1.3.14 Fuse assignment for fuse holder C -SC-, from November 2021	1258-1261
1.4 Fuse holder G -SG-	1262-1264
1.4.1 Fitting location of fuse holder G -SG-, from January 2016	1262-1263
1.4.2 Fuse assignment for fuse holder G -SG-, from January 2016	1264
1.5 Fuse holder F -SF-. for models with hvbrid drive	1265-1266

1.5.1 Fitting location of fuse holder F -SF-, for models with hybrid drive system, from November 2020	1265
1.5.2 Fuse assignment for fuse holder F -SF-, for models with hybrid drive system, from November 2020	1266
<b>1.6 Fitting location of single fuses</b>	<b>1267-1273</b>
1.6.1 Fitting location of individual fuses, left-hand drive models, from January 2016	1267
1.6.2 Fitting location of individual fuses, left-hand drive models, from July 2020	1268
1.6.3 Fitting location of individual fuses, right-hand drive models, from January 2016	1269
1.6.4 Fitting location of individual fuses, right-hand drive models, from July 2020	1270
1.6.5 Fuse assignment, individual fuses, left-hand drive models, from January 2016	1271
1.6.6 Fuse assignment, individual fuses, left-hand drive models, from July 2020	1272
1.6.7 Fuse assignment, individual fuses, right-hand drive models, from January 2016	1272
1.6.8 Fuse assignment, individual fuses, right-hand drive models, from July 2020	1273
<b>1.7 High-voltage system fuse 1 -S350-</b>	<b>1274-1275</b>
1.7.1 Fitting location of high-voltage system fuse 1 -S350-, from November 2020	1274
1.7.2 Fuse assignment for high-voltage system fuse 1 -S350-, from November 2020	1275
<b>1.8 High-voltage system fuse 3 -S353-</b>	<b>1276-1278</b>
1.8.1 Fitting location of high-voltage system fuse 3 -S353-, from November 2020	1276
1.8.2 Fuse assignment for high-voltage system fuse 3 -S353-, from November 2020	1277-1278
<b>803 -- Fitting locations: Relays - 3</b>	<b>1279-1291</b>
<b>1. Relays</b>	<b>1279-1291</b>
<b>1.1 Relays on fuse holder B -SB-</b>	<b>1281-1284</b>
1.1.1 Relays on fuse holder B -SB-, version 1, from January 2016	1281
1.1.2 Relays on fuse holder B -SB-, version 1, from November 2020	1282
1.1.3 Relays on fuse holder B -SB-, version 2, from January 2016	1283
1.1.4 Relays on fuse holder B -SB-, version 2, from January 2016	1284
<b>1.2 Relays on fuse holder C -SC-</b>	<b>1285-1289</b>
1.2.1 Relays on fuse holder C -SC-, left-hand drive models, from January 2016	1286
1.2.2 Relays on fuse holder C -SC-, left-hand drive models, from July 2018	1287
1.2.3 Relays on fuse holder C -SC-, right-hand drive models, from January 2016	1288
1.2.4 Relays on fuse holder C -SC-, right-hand drive models, from July 2018	1289
<b>1.3 Relays in switching unit for high-voltage battery -SX6- , from May 2019</b>	<b>1290-1291</b>
1.3.1 Relays in switching unit for high-voltage battery -SX6- , from May 2019	1290-1291
<b>804 -- Fitting locations: front part of vehicle - 3</b>	<b>1292-1375</b>
<b>1. Fitting locations: front part of vehicle</b>	<b>1292-1375</b>
<b>1.1 Front bumper</b>	<b>1319</b>
<b>1.2 Front from left</b>	<b>1320-1322</b>
<b>1.3 Front from left, additional components for vehicles with hybrid drive</b>	<b>1323</b>
<b>1.4 Front from right</b>	<b>1324-1325</b>
<b>1.5 1.4l petrol engine, CZCA, CZDA, CZDB, CZEA, DJVA</b>	<b>1326-1329</b>
1.5.1 1.4l petrol engine, CZCA, CZDA, CZDB, CZEA, DJVA, from front	1326
1.5.2 1.4l petrol engine, CZCA, CZDA, CZDB, CZEA, DJVA, from above	1327
1.5.3 1.4l petrol engine, CZCA, CZDA, CZDB, CZEA, DJVA, from rear	1328-1329
<b>1.6 1.4l petrol engine, DGEA, for models with hybrid drive</b>	<b>1330-1332</b>
1.6.1 1.4l petrol engine, DGEA, from front, for models with hybrid drive	1330
1.6.2 1.4l petrol engine, DGEA, from above, for models with hybrid drive	1331
1.6.3 1.4l petrol engine, DGEA, from rear, for models with hybrid drive	1332
<b>1.7 1.5l petrol engine, DACA, DACB, DADA, DPBE, DPCA</b>	<b>1333-1336</b>
1.7.1 1.5l petrol engine, DACA, DACB, DADA, DPBE, DPCA, from front	1334
1.7.2 1.5l petrol engine, DACA, DACB, DADA, DPBE, DPCA, from above	1334
1.7.3 1.5l petrol engine, DACA, DACB, DADA, DPBE, DPCA, from right	1335
1.7.4 1.5l petrol engine, DACA, DACB, DADA, DPBE, DPCA, from rear	1336
<b>1.8 2.0l petrol engine, CHHB, CZPA, DKTA, DKZA, DRFA</b>	<b>1337-1343</b>
1.8.1 2.0l petrol engine, CHHB, CZPA, DKTA, DKZA, DRFA, from front	1338
1.8.2 2.0l petrol engine, CZPA, DKTA, DKZA, DRFA, from above	1339
1.8.3 2.0l petrol engine, CHHB, from above	1339
1.8.4 2.0l petrol engine, CZPA, DKTA, DKZA, DRFA, from left	1340
1.8.5 2.0l petrol engine, CHHB, from left	1341
1.8.6 2.0l petrol engine, CHHB, CZPA, DKTA, DKZA, DRFA, from right	1342
1.8.7 2.0l petrol engine, CHHB, CZPA, DKTA, DKZA, DRFA, from rear	1343
<b>1.9 2.0l petrol engine, DNFG, DNPA, DSFE</b>	<b>1344-1349</b>
1.9.1 2.0l petrol engine, DNFG, DNPA, DSFE, from front	1345
1.9.2 2.0l petrol engine, DNFG, DNPA, DSFE, from above	1346
1.9.3 2.0l petrol engine, DNFG, DNPA, DSFE, from left	1346
1.9.4 2.0l petrol engine, DNFG, DNPA, DSFE, from right	1347
1.9.5 2.0l petrol engine, DNFG, DNPA, DSFE, from rear	1348-1349

1.10 2.0l petrol engine, DNNA	1350-1353
1.10.1 2.0l petrol engine, DNNA, from front	1350
1.10.2 2.0l petrol engine, DNNA, from above	1351
1.10.3 2.0l petrol engine, DNNA, from right	1352
1.10.4 2.0l petrol engine, DNNA, from rear	1353
1.11 1.6l diesel engine, DGDB	1354-1357
1.11.1 1.6l diesel engine, DGDB, from front	1355
1.11.2 1.6l diesel engine, DGDB, from above	1355
1.11.3 1.6l diesel engine, DGDB, from left	1356
1.11.4 1.6l diesel engine, DGDB, from rear	1357
1.12 2.0l diesel engine, CRFD, CRGA, CRGB, CYKC, DBGC, DFGA, DFGC, DFHA	1358-1361
1.12.1 2.0l diesel engine, CRFD, CRGA, CRGB, CYKC, DBGC, DFGA, DFGC, DFHA, from front	1359
1.12.2 2.0l diesel engine, CRFD, CRGA, CRGB, CYKC, DBGC, DFGA, DFGC, DFHA, from above	1359
1.12.3 2.0l diesel engine, CRFD, CRGA, CRGB, CYKC, DBGC, DFGA, DFGC, DFHA, from left	1360
1.12.4 2.0l diesel engine, CRFD, CRGA, CRGB, CYKC, DBGC, DFGA, DFGC, DFHA, from rear	1361
1.13 2.0l bi-turbo diesel engine, CUAA	1362-1365
1.13.1 2.0l bi-turbo diesel engine, CUAA, from front	1363
1.13.2 2.0l bi-turbo diesel engine, CUAA, from above	1363
1.13.3 2.0l bi-turbo diesel engine, CUAA, from left	1364
1.13.4 2.0l bi-turbo diesel engine, CUAA, from rear	1365
1.14 2.0l diesel engine, DTRC, DTSA, DTSB, DTUA	1366-1368
1.14.1 2.0l diesel engine, DTRC, DTSA, DTSB, DTUA, from front	1367
1.14.2 2.0l diesel engine, DTRC, DTSA, DTSB, DTUA, from above	1367
1.14.3 2.0l diesel engine, DTRC, DTSA, DTSB, DTUA, from rear	1368
1.15 Manual gearbox	1369-1370
1.15.1 Manual gearbox, 02Q, 0BB	1370
1.15.2 Manual gearbox, 0A6	1370
1.16 Dual clutch gearbox	1371-1375
1.16.1 Dual clutch gearbox, 0D9	1372
1.16.2 Dual clutch gearbox, 0DL	1372
1.16.3 Dual clutch gearbox, 0GC	1373
1.16.4 Dual clutch gearbox, 0DD	1374-1375
805 -- Fitting locations: middle part of vehicle - 3	1376-1440
1. Fitting locations: middle part of vehicle	1376-1440
1.1 At front of interior	1394-1418
1.1.1 Front left of interior, LHD models	1395-1396
1.1.2 Front left of interior, RHD models	1397-1398
1.1.3 Front left of interior, additional components for models with hybrid drive	1399-1400
1.1.4 Front right of interior, LHD models	1401-1402
1.1.5 Front right of interior, RHD models	1403-1404
1.1.6 Front right of interior, additional components for vehicles with hybrid drive	1405
1.1.7 Loudspeaker for emergency call module	1406
1.1.8 Left footwell, LHD models	1407
1.1.9 Right footwell, RHD models	1408
1.1.10 Dash panel, LHD models	1409
1.1.11 Dash panel, RHD models	1410
1.1.12 Steering wheel	1411
1.1.13 Steering column	1411-1412
1.1.14 Front centre console, LHD models	1413
1.1.15 Front centre console, RHD models	1414
1.1.16 Left front seat	1415-1416
1.1.17 Right front seat	1417-1418
1.2 Rear interior	1419-1421
1.2.1 Rear interior, view from left	1419-1420
1.2.2 Rear interior, view from right	1421
1.2.3 Rear centre console	1422
1.3 Roof	1422-1425
1.3.1 Roof, part 1	1423
1.3.2 Roof, part 2, with no sliding/tilting sunroof, 3FA	1424
1.3.3 Roof, part 2, with sliding/tilting sunroof, 3FJ	1425
1.4 Doors	1426-1433
1.4.1 Driver door, left-hand drive models	1426-1427
1.4.2 Driver door, right-hand drive models	1428-1429
1.4.3 Front passenger door, left-hand drive models	1430
1.4.4 Front passenger door, right-hand drive models	1431
1.4.5 Rear left door	1432

1.4.6 Rear right door	1433
1.5 Heater and air conditioning unit	1434-1438
1.5.1 Air conditioning system, KH6, part 1	1434-1435
1.5.2 Air conditioning system, KH6, part 2	1436
1.5.3 Climatronic, KH7, part 1	1437
1.5.4 Climatronic, KH7, part 2	1438
1.6 Connector assignments	1439-1440
1.6.1 Onboard supply control unit -J519-	1439-1440
806 - - Fitting locations: rear part of vehicle - 3	1441-1449
1. Fitting locations: rear part of vehicle	1441-1449
1.1 Rear lid	1443-1444
1.2 Rear bumper	1445
1.3 Rear side, view from right	1446-1447
1.4 Rear side, view from right, additional components for models with hybrid drive	1448
1.5 Rear side, view from left	1449
807 - -Fitting locations: vehicle underbody - 3	1450-1461
1. Fitting locations: vehicle underbody	1450-1461
1.1 Underbody, for models with petrol engine, CHHB, CZCA, CZDA, CZEА, CZPA, CZDE, DACA, DACB, D <del>A</del> <sup>145A</sup> , <sup>1454</sup> DGЕA, DJVA, DKTA, DKZA, DRFA	1455
1.2 Underbody, for models with petrol engine, DNFG, DNPA, DSFE	1455
1.3 Underbody, for models with diesel engine, CRFD, CRGA, CRGB, CUAA, CYKC, DBGC, DFGA, DFGC, <del>D</del> <sup>145D</sup> <sup>1457</sup> DFHA	1457
1.4 Underbody, for models with diesel engine, DTRC, DTSA, DTSB, DTUA	1458
1.5 Underbody, additional components for vehicles with hybrid drive	1459
1.6 High-voltage battery system	1460-1461
830 - -Connector views: parts with prefix A to D - 3	1462-1473
1. Connector views: parts with prefix A to D	1462-1473
1.1 High-voltage battery 1 -AX2-	1462-1464
1.1.1 Connector -T14ay-	1462
1.1.2 Connector -T14az-	1463
1.1.3 Connector -T6cf-	1463
1.1.4 Connector -T6cg-	1464
1.2 Charging unit 1 for high-voltage battery -AX4-	1465-1467
1.2.1 Connector -T60b-	1465
1.2.2 Connector -T4hj-	1466
1.2.3 Connector -T5dz-	1466
1.2.4 Connector -T5eb-	1467
1.2.5 Connector -T5ec-	1468
1.3 Starter -B-	1468-1469
1.3.1 Connector -T1jz-	1468
1.3.2 Connector -T1pd-	1469
1.4 Alternator with voltage regulator -CX1-	1470
1.4.1 Connector -T2cb-	1470
1.5 Ignition/starter switch -D-	1471
1.5.1 Connector -T6bx-	1471
1.5.2 Connector -T6bf-	1471
1.6 Immobiliser reader coil -D2-	1472-1473
1.6.1 Connector -T2on-	1472-1473
831 - -Connector views: parts with prefix E - 3	1474-1522
1. Connector views: parts with prefix E	1474-1522
1.1 Driver side belt switch -E24-	1475
1.1.1 Connector -T2oa-	1475
1.2 Front passenger side belt switch -E25-	1476
1.2.1 Connector -T2ob-	1476
1.3 Glove compartment light switch -E26-	1477
1.3.1 Connector -T3al-	1477
1.4 Headlight range control regulator -E102-	1478
1.4.1 Connector -T7a-	1478
1.5 Driver seat lumbar support adjustment switch -E176-	1479-1480
1.5.1 Connector -T6bt-	1479
1.5.2 Connector -T6h-	1480
1.6 Front passenger seat lumbar support adjustment switch -E177-	1481
1.6.1 Connector -T6bu-	1481
1.6.2 Connector -T6k-	1481
1.7 Key operated switch to deactivate airbag on front passenger side -E224-	1482
1.7.1 Connector -T6u-	1482

1.8 Rear lid remote release button -E233-	1483
1.8.1 Connector -T4cw-	1483
1.9 Operating and display unit for rear air conditioning system -E265-	1484-1485
1.9.1 Connector -T6y-	1484
1.9.2 Connector -T4ay-	1485
1.10 Driver side interior locking button for central locking system -E308-	1486
1.10.1 Connector -T4eu-	1486
1.11 Starter button -E378-	1486
1.11.1 Connector -T4an-	1487
1.12 Button to close rear lid in luggage compartment -E406-	1487-1488
1.12.1 Connector -T4cf-	1487
1.12.2 Connector -T8v-	1488
1.13 Remote release button for fuel filler flap and rear lid -E463-	1489
1.13.1 Connector -T4bq-	1489
1.14 Electric hinged tow coupling attachment button -E474-	1489
1.14.1 Connector -T4av-	1490
1.15 Operating unit for preparation for mobile telephone -E508-	1490
1.15.1 Connector -T6an-	1490
1.16 Button 1 for roof roller blind -E584-	1491
1.16.1 Connector -T4cz-	1491
1.17 Button for deactivating interior monitoring and vehicle inclination sensor -E616-	1492
1.17.1 Connector -T4aw-	1492
1.18 Driver seat massage function button -E670-	1493
1.18.1 Connector -T4u-	1493
1.19 Front passenger seat massage function button -E671-	1494
1.19.1 Connector -T4w-	1494
1.20 Rear driver side window regulator button -E711-	1495
1.20.1 Connector -T4cs-	1495
1.21 Rear passenger side window regulator button -E713-	1496
1.21.1 Connector -T4cu-	1496
1.22 Front passenger side window regulator button -E716-	1497
1.22.1 Connector -T4ck-	1497
1.23 Operating unit for head-up display -E837-	1498
1.23.1 Connector -T6ac-	1498
1.24 Operating unit for driving mode selection -E881-	1499
1.24.1 Connector -T4ap-	1499
1.25 Rotary light switch -EX1-	1500
1.25.1 Connector -T10f-	1500
1.26 Selector mechanism -EX2-	1501
1.26.1 Connector -T10o-	1501
1.27 Hazard warning light switch -EX3-	1502
1.27.1 Connector -T6bv-	1502
1.28 Interior mirror -EX5-	1503
1.28.1 Connector -T8k-	1503
1.29 Driver exterior door handle -EX6-	1504
1.29.1 Connector -T4bw-	1504
1.30 Front passenger exterior door handle -EX7-	1505
1.30.1 Connector -T4bx-	1505
1.31 Exterior mirror adjuster -EX11-	1506
1.31.1 Connector -T6at-	1506
1.32 Parking brake button -EX12-	1507
1.32.1 Connector -T12j-	1507
1.33 Tank flap release -EX13-	1508
1.33.1 Connector -T2fb-	1508
1.34 Heater and air conditioning controls -EX21-	1509-1510
1.34.1 Connector -T20b-	1509
1.34.2 Connector -T16s-	1510
1.34.3 Connector -T16u-	1511
1.35 Switch module 1 in centre console -EX23-	1511
1.35.1 Connector -T6ad-	1511
1.36 Switch module 2 in centre console -EX30-	1512
1.36.1 Connector -T10g-	1512
1.37 Module for battery charge selector buttons -EX32-	1513
1.37.1 Connector -T8cf-	1513
1.38 Operating unit for front left seat adjustment -EX33-	1514
1.38.1 Connector -T12p-	1514

1.39 Operating unit for front right seat adjustment -EX34-	1515
1.39.1 Connector -T12q-	1515
1.40 Operating unit for window regulator in driver door -EX36-	1516
1.40.1 Connector -T10ac-	1516
1.41 Rear lid handle -EX37-	1517-1519
1.41.1 Connector -T8j-	1517
1.41.2 Connector -T2mh-	1518
1.41.3 Connector -T5ay-	1519
1.41.4 Connector -T2dr-	1519
1.42 Operating unit 2 for front left seat adjustment -EX38-	1520
1.42.1 Connector -T6f-	1520
1.43 Operating unit 2 for front right seat adjustment -EX39-	1521-1522
1.43.1 Connector -T6j-	1521-1522
832 - -Connector views: parts with prefix F - 3	1523-1549
1. Connector views: parts with prefix F	1523-1549
1.1 Brake light switch -F-	1523-1524
1.1.1 Connector -T4bi-	1524
1.1.2 Connector -T4dw-	1524
1.2 Oil pressure switch -F1-	1525-1526
1.2.1 Connector -T2bi-	1525
1.2.2 Connector -T1bev-	1526
1.2.3 Connector -T1l-	1527
1.3 Reversing light switch -F4-	1527-1528
1.3.1 Connector -T2gr-	1527
1.3.2 Connector -T2ac-	1528
1.4 Oil pressure switch -F22-	1529
1.4.1 Connector -T1aaah-	1529
1.5 Brake fluid level warning contact -F34-	1530
1.5.1 Connector -T2fz-	1530
1.6 Driver vanity mirror contact switch -F147-	1530
1.6.1 Connector -T2hs-	1530
1.7 Front passenger vanity mirror contact switch -F148-	1531
1.7.1 Connector -T2hr-	1531
1.8 Actuator 1 for camshaft adjustment -F366-	1532
1.8.1 Connector -T2rn-	1532
1.9 Actuator 2 for camshaft adjustment -F367-	1533
1.9.1 Connector -T2ro-	1533
1.10 Actuator 3 for camshaft adjustment -F368-	1534
1.10.1 Connector -T2rp-	1534
1.11 Actuator 4 for camshaft adjustment -F369-	1535
1.11.1 Connector -T2rq-	1535
1.12 Actuator 5 for camshaft adjustment -F370-	1536-1537
1.12.1 Connector -T2rr-	1536
1.12.2 Connector -T2ss-	1537
1.13 Actuator 6 for camshaft adjustment -F371-	1538
1.13.1 Connector -T2rs-	1538
1.14 Actuator 7 for camshaft adjustment -F372-	1538
1.14.1 Connector -T2rt-	1539
1.15 Actuator 8 for camshaft adjustment -F373-	1539
1.15.1 Connector -T2ru-	1539
1.16 Oil pressure switch for reduced oil pressure -F378-	1540-1541
1.16.1 Connector -T2bc-	1540
1.16.2 Connector -T1bew-	1541
1.16.3 Connector -T1a-	1542
1.17 Bonnet contact switch -F387-	1542
1.17.1 Connector -T2fx-	1542
1.18 Belt switch for seat row 2, driver side -F390-	1543
1.18.1 Connector -T2es-	1543
1.19 Belt switch for seat row 2, middle -F391-	1544
1.19.1 Connector -T2eu-	1544
1.20 Belt switch for seat row 2, passenger side -F392-	1545
1.20.1 Connector -T2ez-	1545
1.21 Stage 2 oil pressure switch -F446-	1546-1547
1.21.1 Connector -T2rv-	1546
1.21.2 Connector -T2tb-	1547
1.22 Stage 3 oil pressure switch -F447-	1548

1.22.1 Connector -T2g-	1548
1.23 Actuator for high-voltage charging flap lock 1 -F496-	1548-1549
1.23.1 Connector -T2sy-	1549
833 - -Connector views: parts with prefix G - 3	1550-1710
1. Connector views: parts with prefix G	1550-1710
1.1 Oil pressure sender -G10-	1554
1.1.1 Connector -T3gv-	1554
1.2 Ambient temperature sensor -G17-	1555
1.2.1 Connector -T2gd-	1555
1.3 Engine speed sender -G28-	1556-1558
1.3.1 Connector -T3q-	1556
1.3.2 Connector -T3gg-	1557
1.3.3 Connector -T3d-	1558
1.3.4 Connector -T3ek-	1558
1.4 Charge pressure sender -G31-	1559-1561
1.4.1 Connector -T3gn-	1559
1.4.2 Connector -T4ad-	1560
1.4.3 Connector -T3t-	1561
1.4.4 Connector -T3ep-	1561
1.5 Coolant shortage indicator sender -G32-	1562
1.5.1 Connector -T2fy-	1562
1.6 Windscreen washer fluid level sender -G33-	1563
1.6.1 Connector -T2gk-	1563
1.7 Front right brake pad wear sender -G35-	1564
1.7.1 Connector -T2ha-	1564
1.8 Hall sender -G40-	1565-1567
1.8.1 Connector -T3gs-	1565
1.8.2 Connector -T3g-	1566
1.8.3 Connector -T3eg-	1567
1.8.4 Connector -T3he-	1567
1.9 Rear right speed sensor -G44-	1568
1.9.1 Connector -T2fj-	1568
1.10 Front right speed sensor -G45-	1569
1.10.1 Connector -T2gz-	1569
1.11 Rear left speed sensor -G46-	1570
1.11.1 Connector -T2fh-	1570
1.12 Front left speed sensor -G47-	1571
1.12.1 Connector -T2gx-	1571
1.13 Knock sensor 1 -G61-	1572-1573
1.13.1 Connector -T2h-	1572
1.13.2 Connector -T2w-	1573
1.13.3 Connector -T2rf-	1574
1.14 Coolant temperature sender -G62-	1574-1579
1.14.1 Connector -T2br-	1575
1.14.2 Connector -T2u-	1575
1.14.3 Connector -T2v-	1576
1.14.4 Connector -T2pi-	1577
1.14.5 Connector -T2bl-	1577
1.14.6 Connector -T2qp-	1578
1.14.7 Connector -T2rg-	1579
1.14.8 Connector -T2tc-	1579
1.15 Water separator sender -G63-	1580
1.15.1 Connector -T3go-	1580
1.16 Air mass meter -G70-	1581
1.16.1 Connector -T4bp-	1581
1.17 Rear left vehicle level sender -G76-	1582
1.17.1 Connector -T4az-	1582
1.18 Front left vehicle level sender -G78-	1583
1.18.1 Connector -T4fo-	1583
1.19 Fuel temperature sender -G81-	1584
1.19.1 Connector -T2bk-	1584
1.20 Engine outlet coolant temperature sender -G82-	1585-1586
1.20.1 Connector -T2ek-	1585
1.20.2 Connector -T2qs-	1586
1.21 Radiator outlet coolant temperature sender -G83-	1587
1.21.1 Connector -T2nu-	1587

1.21.2 Connector -T2ti-	1587
1.22 Sunlight penetration photosensor -G107-	1588
1.22.1 Connector -T6q-	1588
1.23 Seat occupied sensor on front passenger side -G128-	1589
1.23.1 Connector -T2oc-	1589
1.24 Left vent temperature sender -G150-	1590
1.24.1 Connector -T2cw-	1590
1.25 Right vent temperature sender -G151-	1591
1.25.1 Connector -T2cv-	1591
1.26 Fuel gauge sender 2 -G169-	1592
1.26.1 Connector -T3at-	1592
1.27 Rear vent temperature sender -G174-	1593
1.27.1 Connector -T2eo-	1593
1.28 Side airbag crash sensor on driver side -G179-	1594
1.28.1 Connector -T2nz-	1594
1.29 Side airbag crash sensor on front passenger side -G180-	1595
1.29.1 Connector -T2lp-	1595
1.30 Crash sensor for front airbag -G190-	1596
1.30.1 Connector -T2ge-	1596
1.31 Footwell vent temperature sender -G192-	1597
1.31.1 Connector -T2mz-	1597
1.32 Rear left parking aid sender -G203-	1598
1.32.1 Connector -T3ce-	1598
1.33 Rear centre left parking aid sender -G204-	1599
1.33.1 Connector -T3cf-	1599
1.34 Rear centre right parking aid sender -G205-	1600
1.34.1 Connector -T3cg-	1600
1.35 Rear right parking aid sender -G206-	1601
1.35.1 Connector -T3bz-	1601
1.36 Exhaust gas temperature sender 1 -G235-	1602-1604
1.36.1 Connector -T3gu-	1602
1.36.2 Connector -T2bt-	1603
1.36.3 Connector -T3v-	1604
1.36.4 Connector -T2qo-	1604
1.37 Air quality sensor -G238-	1605
1.37.1 Connector -T3bd-	1605
1.38 Coolant temperature sender for heater -G241-	1606
1.38.1 Connector -T2sf-	1606
1.39 Fuel pressure sender -G247-	1607-1609
1.39.1 Connector -T3gr-	1607
1.39.2 Connector -T3gi-	1608
1.39.3 Connector -T3l-	1609
1.39.4 Connector -T3ef-	1609
1.40 Front right parking aid sender -G252-	1610
1.40.1 Connector -T3bq-	1610
1.41 Front centre right parking aid sender -G253-	1611
1.41.1 Connector -T3bt-	1611
1.42 Front centre left parking aid sender -G254-	1612
1.42.1 Connector -T3bu-	1612
1.43 Front left parking aid sender -G255-	1613
1.43.1 Connector -T3bs-	1613
1.44 Rear side airbag crash sensor on driver side -G256-	1614
1.44.1 Connector -T2eq-	1614
1.45 Rear side airbag crash sensor on passenger side -G257-	1615
1.45.1 Connector -T2ew-	1615
1.46 Oil level and oil temperature sender -G266-	1616-1617
1.46.1 Connector -T3af-	1616
1.46.2 Connector -T3ah-	1617
1.47 Front right vehicle level sender -G289-	1618
1.47.1 Connector -T4br-	1618
1.48 Hall sender 3 -G300-	1618-1620
1.48.1 Connector -T3a-	1619
1.48.2 Connector -T3gq-	1619
1.48.3 Connector -T3ei-	1620
1.49 Evaporator temperature sensor -G308-	1621
1.49.1 Connector -T2na-	1621

1.50 Intake manifold flap potentiometer -G336-	1621-1622
1.50.1 Connector -T3gj-	1622
1.50.2 Connector -T3ee-	1622
1.51 Front left body acceleration sender -G341-	1623
1.51.1 Connector -T2gn-	1623
1.52 Front right body acceleration sender -G342-	1624
1.52.1 Connector -T2qq-	1624
1.53 Rear body acceleration sender -G343-	1625
1.53.1 Connector -T2dy-	1625
1.54 Rain and light sensor -G397-	1626
1.54.1 Connector -T3ao-	1626
1.55 Tank pressure sensor -G400-	1627
1.55.1 Connector -T3gx-	1627
1.56 Fuel pressure sender for low pressure -G410-	1628-1629
1.56.1 Connector -T3b-	1628
1.56.2 Connector -T4o-	1629
1.57 Charge pressure sender 2 -G447-	1630
1.57.1 Connector -T3u-	1630
1.58 Exhaust gas temperature sender 2 -G448-	1630-1631
1.58.1 Connector -T2pt-	1631
1.58.2 Connector -T2qr-	1631
1.59 Exhaust gas pressure sensor 1 -G450-	1632-1633
1.59.1 Connector -T3r-	1632
1.59.2 Connector -T3uw-	1633
1.60 Toll collection sender -G459-	1634
1.60.1 Connector -T2hd-	1634
1.61 Clutch position sender -G476-	1634
1.61.1 Connector -T5bg-	1635
1.62 Exhaust gas temperature sender 3 -G495-	1635
1.62.1 Connector -T2oy-	1635
1.63 Pressure differential sender -G505-	1636-1637
1.63.1 Connector -T3s-	1636
1.63.2 Connector -T3gt-	1637
1.64 Temperature sender before particulate filter -G506-	1638
1.64.1 Connector -T2rz-	1638
1.65 Temperature sender after particulate filter -G527-	1638
1.65.1 Connector -T2sa-	1639
1.66 Front left sender for park assist steering on left side of vehicle -G568-	1639
1.66.1 Connector -T3bp-	1639
1.67 Front right sender for park assist steering on right side of vehicle -G569-	1640
1.67.1 Connector -T3br-	1640
1.68 Driver side crash sensor for pedestrian protection -G570-	1641-1642
1.68.1 Connector -T2oe-	1641
1.68.2 Connector -T2qf-	1642
1.69 Front passenger side crash sensor for pedestrian protection -G571-	1643
1.69.1 Connector -T2og-	1643
1.69.2 Connector -T2qe-	1643
1.70 Anti-theft alarm sensor -G578-	1644
1.70.1 Connector -T4cc-	1644
1.71 Front pressure hose sensor for pedestrian protection -G579-	1645-1646
1.71.1 Connector -T2fo-	1645
1.71.2 Connector -T2gg-	1646
1.72 Position sender for charge pressure positioner -G581-	1647
1.72.1 Connector -T3y-	1647
1.73 Regulating flap potentiometer -G584-	1647
1.73.1 Connector -T3w-	1648
1.74 Trigger 1 for pedestrian protection -G598-	1648
1.74.1 Connector -T3be-	1648
1.75 Trigger 2 for pedestrian protection -G599-	1649
1.75.1 Connector -T3bf-	1649
1.76 Vacuum sender -G608-	1650
1.76.1 Connector -T3bh-	1650
1.77 Exhaust gas temperature sender 4 -G648-	1651
1.77.1 Connector -T2pa-	1651
1.78 Anti-trapping sender -G673-	1652
1.78.1 Connector -T2hx-	1652

1.79 Sender 1 for turbocharger speed -G688-	1653
1.79.1 Connector -T3ec-	1653
1.80 Temperature sensor 2 for exhaust recirculation -G690-	1654-1655
1.80.1 Connector -T2oz-	1654
1.80.2 Connector -T2qt-	1655
1.81 Centre crash sensor for pedestrian protection -G693-	1656
1.81.1 Connector -T2of-	1656
1.81.2 Connector -T2gg-	1656
1.82 Gearbox neutral position sender -G701-	1657
1.82.1 Connector -T3gh-	1657
1.83 Rear left park assist steering sender -G716-	1658
1.83.1 Connector -T3ca-	1658
1.84 Rear right park assist steering sender -G717-	1659
1.84.1 Connector -T3cb-	1659
1.85 Battery temperature sender -G729-	1660
1.85.1 Connector -T4hk-	1660
1.86 Battery temperature sender 2 -G734-	1661
1.86.1 Connector -T4hl-	1661
1.87 Anti-trapping sender 2 -G753-	1662
1.87.1 Connector -T2hy-	1662
1.88 Temperature sender after electric drive motor -G788-	1663
1.88.1 Connector -T2ry-	1663
1.89 Coolant temperature sender 2 -G802-	1664
1.89.1 Connector -T2bq-	1664
1.90 Pressure sender for refrigerant circuit -G805-	1665
1.90.1 Connector -T3ba-	1665
1.91 Charge air temperature sender before charge air cooler -G810-	1666
1.91.1 Connector -T2bm-	1666
1.92 Charge air temperature sender after charge air cooler -G811-	1667
1.92.1 Connector -T2bp-	1667
1.93 Coolant shortage indicator sender 2 -G837-	1668
1.93.1 Connector -T2sl-	1668
1.94 Current sensor for high-voltage battery -G848-	1669
1.94.1 Connector -T2sx-	1669
1.95 Tank breather pressure sensor 1 -G950-	1670
1.95.1 Connector -T3hf-	1670
1.96 Inlet camshaft position sender -G1002-	1671
1.96.1 Connector -T3ea-	1671
1.97 Exhaust camshaft position sender -G1003-	1672
1.97.1 Connector -T3eb-	1672
1.98 Pressure differential sender for particulate filter -G1037-	1673-1674
1.98.1 Connector -T3eh-	1673
1.98.2 Connector -T3hb-	1674
1.99 Coolant temperature sender for charge air cooler -G1130-	1675
1.99.1 Connector -T2qq-	1675
1.100 Current sensor 2 for high-voltage battery -G1131-	1675
1.100.1 Connector -T2sw-	1676
1.101 Fuel delivery unit -GX1-	1676-1679
1.101.1 Connector -T3ax-	1676
1.101.2 Connector -T4bc-	1677
1.101.3 Connector -T5am-	1678
1.101.4 Connector -T2ey-	1678
1.101.5 Connector -T6bz-	1679
1.101.6 Connector -T2qk-	1680
1.102 Accelerator pedal module -GX2-	1680
1.102.1 Connector -T6ai-	1680
1.103 Throttle valve module -GX3-	1681-1684
1.103.1 Connector -T6b-	1681
1.103.2 Connector -T6b-	1682
1.103.3 Connector -T5e-	1683
1.103.4 Connector -T6bp-	1683
1.103.5 Connector -T5h-	1684
1.103.6 Connector -T6cc-	1685
1.104 Exhaust gas recirculation valve 1 -GX5-	1685
1.104.1 Connector -T6d-	1685
1.105 Exhaust gas recirculation valve 2 -GX6-	1686-1687

1.105.1 Connector -T5f-	1686
1.105.2 Connector -T5n-	1687
1.106 Lambda probe 1 after catalytic converter -GX7-	1688
1.106.1 Connector -T4bn-	1688
1.107 Intake manifold sender -GX9-	1688-1691
1.107.1 Connector -T4a-	1689
1.107.2 Connector -T4g-	1689
1.107.3 Connector -T4i-	1690
1.107.4 Connector -T3ux-	1691
1.107.5 Connector -T4gx-	1691
1.108 Lambda probe 1 before catalytic converter -GX10-	1692-1694
1.108.1 Connector -T6ah-	1692
1.108.2 Connector -T5bc-	1693
1.108.3 Connector -T4fb-	1694
1.108.4 Connector -T5be-	1694
1.109 Delivery unit for reducing agent metering system -GX19-	1695-1696
1.109.1 Connector -T5an-	1695
1.109.2 Connector -T4bd-	1696
1.110 Temperature and pressure sender for low-pressure fuel system -GX20-	1697
1.110.1 Connector -T4k-	1697
1.111 Charge pressure sender -GX26-	1697-1698
1.111.1 Connector -T4f-	1698
1.111.2 Connector -T3gw-	1698
1.112 Control unit for NOx sender -GX30-	1699-1700
1.112.1 Connector -T5bb-	1699
1.112.2 Connector -T5b-	1700
1.113 Engine temperature regulation module -GX33-	1701
1.113.1 Connector -T5o-	1701
1.113.2 Connector -T5eg-	1701
1.114 Charge pressure control module -GX34-	1702-1703
1.114.1 Connector -T6cb-	1702
1.114.2 Connector -T6ce-	1703
1.115 Air mass measurement module -GX35-	1704
1.115.1 Connector -T3dx-	1704
1.116 Fuel tank leak detection module -GX36-	1704
1.116.1 Connector -T4ga-	1705
1.117 Dual exhaust gas temperature sensor 1 -GX41-	1705
1.117.1 Connector -T3el-	1705
1.118 Pressure sensor for activated charcoal filter air flushing -GX44-	1706
1.118.1 Connector -T4gq-	1706
1.119 Control unit 2 for NOx sender -GX46-	1707
1.119.1 Connector -T5d-	1707
1.120 Control unit 3 for NOx sender -GX50-	1708
1.120.1 Connector -T5g-	1708
1.121 Control unit 1 for particulate sensor -GX52-	1709-1710
1.121.1 Connector -T4j-	1709-1710
834 - -Connector views: parts with prefix H to I - 3	1711-1716
1. Connector views: parts with prefix H to I	1711-1716
1.1 Treble horn -H2-	1711
1.1.1 Connector -T2fp-	1711
1.2 Bass horn -H7-	1712
1.2.1 Connector -T2gc-	1712
1.3 Alarm horn -H12-	1712
1.3.1 Connector -T3bc-	1712
1.4 Rear parking aid warning buzzer -H15-	1713
1.4.1 Connector -T2dq-	1713
1.5 Front parking aid warning buzzer -H22-	1714
1.5.1 Connector -T2cu-	1714
1.6 Rear lid warning buzzer -H32-	1715-1716
1.6.1 Connector -T2ib-	1715-1716
835 - -Connector views: parts with prefix J - 3	1717-1851
1. Connector views: parts with prefix J	1717-1851
1.1 ABS control unit -J104-	1719
1.1.1 Connector -T46a-	1719
1.2 Fresh air blower control unit -J126-	1720
1.2.1 Connector -T4ad-	1720

1.3 Airbag control unit -J234-	1721
1.3.1 Connector -T90a-	1721
1.3.2 Connector -T90f-	1721
1.4 Electronically controlled damping control unit -J250-	1722
1.4.1 Connector -T47a-	1722
1.5 Trailer detector control unit -J345-	1723-1725
1.5.1 Connector -T6aa-	1723
1.5.2 Connector -T10p-	1724
1.5.3 Connector -T10q-	1725
1.5.4 Connector -T24a-	1725
1.6 Auxiliary heater control unit -J364-	1726-1727
1.6.1 Connector -T2ft-	1726
1.6.2 Connector -T6ae-	1727
1.7 Battery monitor control unit -J367-	1728-1729
1.7.1 Connector -T2nw-	1728
1.7.2 Connector -T2nw-	1729
1.7.3 Connector -T2ep-	1729
1.8 Driver door control unit -J386-	1730-1731
1.8.1 Connector -T6ap-	1730
1.8.2 Connector -T20h-	1731
1.8.3 Connector -T32e-	1732
1.9 Front passenger door control unit -J387-	1732-1734
1.9.1 Connector -T20q-	1733
1.9.2 Connector -T32g-	1733
1.9.3 Connector -T6br-	1734
1.10 Adaptive cruise control unit -J428-	1735
1.10.1 Connector -T7f-	1735
1.11 Parking aid control unit -J446-	1735-1736
1.11.1 Connector -T26b-	1736
1.11.2 Connector -T18d-	1736
1.12 Multifunction steering wheel control unit -J453-	1737
1.12.1 Connector -T6al-	1737
1.13 All-wheel drive control unit -J492-	1738
1.13.1 Connector -T8r-	1738
1.14 Module monitor control unit for batteries -J497-	1739-1741
1.14.1 Connector -T32i-	1739
1.14.2 Connector -T18e-	1740
1.14.3 Connector -T12u-	1741
1.14.4 Connector -T12v-	1741
1.15 Power steering control unit -J500-	1742-1743
1.15.1 Connector -T3ae-	1742
1.15.2 Connector -T2ca-	1743
1.16 Tyre Pressure Monitoring System control unit -J502-	1744
1.16.1 Connector -T4be-	1744
1.17 Onboard supply control unit -J519-	1744-1746
1.17.1 Connector -T73a-	1745
1.17.2 Connector -T73b-	1745
1.17.3 Connector -T46b-	1746
1.18 Digital sound package control unit -J525-	1747-1748
1.18.1 Connector -T38a-	1747
1.18.2 Connector -T2ej-	1748
1.18.3 Connector -T9c-	1748
1.19 Steering column electronics control unit -J527-	1749-1752
1.19.1 Connector -T14g-	1749
1.19.2 Connector -T4ak-	1750
1.19.3 Connector -T4aj-	1751
1.19.4 Connector -T16d-	1751
1.19.5 Connector -T12l-	1752
1.20 Data bus diagnostic interface -J533-	1753-1754
1.20.1 Connector -T20a-	1753
1.20.2 Connector -T20a-	1754
1.20.3 Connector -T20p-	1754
1.21 Fuel pump control unit -J538-	1755-1756
1.21.1 Connector -T6ab-	1755
1.21.2 Connector -T5ao-	1756
1.22 Auxiliary air heater control unit -J604-	1757

1.22.1 Connector -T3bi-	1757
1.23 Rear lid control unit -J605-	1757-1758
1.23.1 Connector -T32d-	1758
1.23.2 Connector -T10l-	1758
1.24 Engine/motor control unit -J623-	1759-1762
1.24.1 Connector -T94a-	1759
1.24.2 Connector -T94a-	1760
1.24.3 Connector -T105a-	1761
1.24.4 Connector -T91a-	1761
1.24.5 Connector -T60a-	1762
1.25 Chip card reader control unit -J676-	1763-1764
1.25.1 Connector -T10w-	1763
1.25.2 Connector -T2hc-	1764
1.25.3 Connector -T5bm-	1764
1.26 Display unit for front information display and operating unit control unit -J685-	1765-1768
1.26.1 Connector -T12d-	1765
1.26.2 Connector -T12d-	1766
1.26.3 Connector -T5ac-	1767
1.26.4 Connector -T5ac-	1767
1.26.5 Connector -T5dt-	1768
1.27 Front passenger seat adjustment control unit -J720-	1769-1771
1.27.1 Connector -T32b-	1769
1.27.2 Connector -T10c-	1770
1.27.3 Connector -T16q-	1770
1.27.4 Connector -T12k-	1771
1.28 Turbocharger 1 control unit -J724-	1772
1.28.1 Connector -T5dp-	1772
1.29 Mechatronic unit for dual clutch gearbox -J743-	1772-1774
1.29.1 Connector -T16f-	1773
1.29.2 Connector -T20f-	1773
1.29.3 Connector -T10aq-	1774
1.29.4 Connector -T2sj-	1775
1.30 Control unit for cornering light and headlight range control -J745-	1775-1777
1.30.1 Connector -T26d-	1776
1.30.2 Connector -T26d-	1776
1.30.3 Connector -T26c-	1777
1.30.4 Connector -T20af-	1778
1.31 Control unit for electronic steering column lock -J764-	1778
1.31.1 Connector -T4ai-	1778
1.32 Lane change assist control unit -J769-	1779-1780
1.32.1 Connector -T8m-	1779
1.32.2 Connector -T8cc-	1780
1.33 Lane change assist control unit 2 -J770-	1781
1.33.1 Connector -T8n-	1781
1.33.2 Connector -T8cb-	1781
1.34 Control unit 1 for information electronics -J794-	1782-1795
1.34.1 Connector -T8i-	1783
1.34.2 Connector -T5ab-	1784
1.34.3 Connector -T12e-	1784
1.34.4 Connector -T12g-	1785
1.34.5 Connector -T5z-	1786
1.34.6 Connector -T2cx-	1786
1.34.7 Connector -T12t-	1787
1.34.8 Connector -T5dh-	1788
1.34.9 Connector -T4ds-	1788
1.34.10 Connector -T2or-	1789
1.34.11 Connector -T2os-	1790
1.34.12 Connector -T2db-	1790
1.34.13 Connector -T8h-	1791
1.34.14 Connector -T4ao-	1792
1.34.15 Connector -T5aa-	1792
1.34.16 Connector -T12la-	1793
1.34.17 Connector -T4fc-	1794
1.34.18 Connector -T5dx-	1794
1.34.19 Connector -T12m-	1795
1.35 Driver seat adjustment control unit -J810-	1796-1798

1.35.1 Connector -T16a-	1796
1.35.2 Connector -T32a-	1797
1.35.3 Connector -T10a-	1797
1.35.4 Connector -T12a-	1798
1.36 Control unit for front left belt tensioner -J854-	1799
1.36.1 Connector -T5ah-	1799
1.37 Control unit for front right belt tensioner -J855-	1799
1.37.1 Connector -T5ai-	1800
1.38 Control unit for navigation system -J856-	1800-1805
1.38.1 Connector -T10n-	1801
1.38.2 Connector -T2py-	1801
1.38.3 Connector -T2pz-	1802
1.38.4 Connector -T20ae-	1803
1.38.5 Connector -T5dv-	1803
1.38.6 Connector -T5fa-	1804
1.38.7 Connector -T5fc-	1805
1.38.8 Connector -T5fb-	1805
1.39 Control unit for NOx sender 2 -J881-	1806
1.39.1 Connector -T5al-	1806
1.40 Exhaust flap control unit -J883-	1807-1809
1.40.1 Connector -T5m-	1807
1.40.2 Connector -T3au-	1808
1.40.3 Connector -T3em-	1809
1.40.4 Connector -T5j-	1809
1.41 Control unit for reducing agent heater -J891-	1810-1811
1.41.1 Connector -T4bf-	1810
1.41.2 Connector -T5ap-	1811
1.42 Control unit for Head-up Display -J898-	1812
1.42.1 Connector -T18a-	1812
1.43 Rear driver side door control unit -J926-	1812-1814
1.43.1 Connector -T6ar-	1813
1.43.2 Connector -T20i-	1813
1.43.3 Connector -T16h-	1814
1.44 Rear passenger side door control unit -J927-	1815-1816
1.44.1 Connector -T6bs-	1815
1.44.2 Connector -T20j-	1816
1.44.3 Connector -T16t-	1816
1.45 Control unit for overhead view camera -J928-	1817-1820
1.45.1 Connector -T18c-	1817
1.45.2 Connector -T2em-	1818
1.45.3 Connector -T5az-	1819
1.45.4 Connector -T5ax-	1819
1.45.5 Connector -T5au-	1820
1.45.6 Connector -T5av-	1821
1.46 Rear lid power opening control unit -J938-	1821
1.46.1 Connector -T4cv-	1821
1.47 Engine sound generator control unit -J943-	1822
1.47.1 Connector -T12w-	1822
1.48 Exhaust flap control unit 2 -J945-	1823-1824
1.48.1 Connector -T3en-	1823
1.48.2 Connector -T3eo-	1824
1.49 Emergency call module control unit and communication unit -J949-	1825-1827
1.49.1 Connector -T26a-	1825
1.49.2 Connector -T36a-	1826
1.49.3 Connector -T26e-	1826
1.49.4 Connector -T4gp-	1827
1.49.5 Connector -T4dr-	1828
1.50 Interface for entry and start system -J965-	1828
1.50.1 Connector -T40a-	1828
1.51 Two-way signal amplifier for mobile telephone/data services -J984-	1829-1830
1.51.1 Connector -T4au-	1829
1.51.2 Connector -T2dt-	1830
1.51.3 Connector -T2du-	1831
1.52 Battery module 1 -J991-	1831
1.52.1 Connector -T10ax-	1831
1.53 Batterv module 2 -J992-	1832

1.53.1 Connector -T10ay-	1832
1.54 Battery module 3 -J993-	1833
1.54.1 Connector -T10az-	1833
1.55 Battery module 4 -J994-	1834
1.55.1 Connector -T10ba-	1834
1.56 Battery module 5 -J995-	1835
1.56.1 Connector -T10b-	1835
1.57 Battery module 6 -J996-	1836
1.57.1 Connector -T10bb-	1836
1.58 Battery module 7 -J997-	1837
1.58.1 Connector -T10bc-	1837
1.59 Precharge contactor for high-voltage battery -J1044-	1838-1840
1.59.1 Connector -T1bxh-	1838
1.59.2 Connector -T1bhy-	1839
1.59.3 Connector -T1bie-	1840
1.59.4 Connector -T1bif-	1840
1.60 High-voltage battery power contactor 1 -J1057-	1841-1842
1.60.1 Connector -T2sv-	1841
1.60.2 Connector -T1bih-	1842
1.61 High-voltage battery power contactor 2 -J1058-	1843
1.61.1 Connector -T2st-	1843
1.61.2 Connector -T1big-	1843
1.62 Battery module 0 -J1068-	1844
1.62.1 Connector -T10aw-	1844
1.63 Torque vectoring control unit 1 -J1257-	1845
1.63.1 Connector -T11c-	1845
1.64 Torque vectoring control unit 2 -J1258-	1846
1.64.1 Connector -T11d-	1846
1.65 Power and control electronics for electric drive -JX1-	1847-1851
1.65.1 Connector -T28a-	1847
1.65.2 Connector -T5dy-	1848
1.65.3 Connector -T1zzzg-	1849
1.65.4 Connector -T2sk-	1849
1.65.5 Connector -T1zzzh-	1850-1851
836 - -Connector views: parts with prefix K to M - 3	1852-1882
1. Connector views: parts with prefix K to M	1852-1882
1.1 Central locking SAFELOCK function warning lamp -K133-	1852
1.1.1 Connector -T2it-	1852
1.2 Warning lamp for airbag deactivated on front passenger side -K145-	1853
1.2.1 Connector -T4ae-	1853
1.3 Front left footwell light -K268-	1854
1.3.1 Connector -T2cp-	1854
1.4 Front right footwell light -K269-	1855
1.4.1 Connector -T2cq-	1855
1.5 Dash panel insert -KX2-	1856-1857
1.5.1 Connector -T18b-	1856
1.5.2 Connector -T2cs-	1857
1.6 Left fog light bulb -L22-	1858
1.6.1 Connector -T2gf-	1858
1.7 Right fog light bulb -L23-	1858
1.7.1 Connector -T2fs-	1859
1.8 Light for driver side interior door handle illumination -L219-	1859
1.8.1 Connector -T2hm-	1859
1.9 Light for passenger side interior door handle illumination -L220-	1860
1.9.1 Connector -T2mg-	1860
1.10 Light for rear driver side interior door handle illumination -L221-	1861-1862
1.10.1 Connector -T2il-	1861
1.10.2 Connector -T4he-	1862
1.11 Light for rear passenger side interior door handle illumination -L222-	1863
1.11.1 Connector -T2ip-	1863
1.11.2 Connector -T4hf-	1863
1.12 High-level brake light bulb -M25-	1864
1.12.1 Connector -T2dw-	1864
1.13 Front left headlight -MX1-	1865-1867
1.13.1 Connector -T14t-	1865
1.13.2 Connector -T10u-	1866

1.13.3 Connector -T14ak-	1867
1.13.4 Connector -T14an-	1867
1.14 Front right headlight -MX2-	1868-1870
1.14.1 Connector -T14l-	1868
1.14.2 Connector -T10r-	1869
1.14.3 Connector -T14al-	1870
1.14.4 Connector -T14am-	1870
1.15 Left tail light cluster -MX3-	1871-1872
1.15.1 Connector -T5af-	1871
1.15.2 Connector -T5ag-	1872
1.15.3 Connector -T8bf-	1873
1.16 Right tail light cluster -MX4-	1873-1875
1.16.1 Connector -T5ae-	1874
1.16.2 Connector -T5ad-	1874
1.16.3 Connector -T8bj-	1875
1.17 Left tail light cluster 2 -MX5-	1876-1878
1.17.1 Connector -T5br-	1876
1.17.2 Connector -T5bt-	1877
1.17.3 Connector -T8bl-	1877
1.17.4 Connector -T8bk-	1878
1.18 Right tail light cluster 2 -MX6-	1879-1882
1.18.1 Connector -T5bx-	1879
1.18.2 Connector -T5by-	1880
1.18.3 Connector -T8bm-	1880
1.18.4 Connector -T8bn-	1881-1882
837 - -Connector views: parts with prefix N - 3	1883-2003
1. Connector views: parts with prefix N	1883-2003
1.1 Injector, cylinder 1 -N30-	1886-1889
1.1.1 Connector -T2pn-	1886
1.1.2 Connector -T2x-	1886
1.1.3 Connector -T2bd-	1887
1.1.4 Connector -T2ad-	1888
1.1.5 Connector -T3n-	1888
1.1.6 Connector -T2qy-	1889
1.2 Injector, cylinder 2 -N31-	1890-1893
1.2.1 Connector -T2po-	1890
1.2.2 Connector -T2y-	1891
1.2.3 Connector -T2be-	1891
1.2.4 Connector -T2ab-	1892
1.2.5 Connector -T3p-	1893
1.2.6 Connector -T2qz-	1893
1.3 Injector, cylinder 3 -N32-	1894-1897
1.3.1 Connector -T2pp-	1894
1.3.2 Connector -T2z-	1895
1.3.3 Connector -T2bf-	1896
1.3.4 Connector -T2ae-	1896
1.3.5 Connector -T3x-	1897
1.3.6 Connector -T2ra-	1898
1.4 Injector, cylinder 4 -N33-	1898-1902
1.4.1 Connector -T2pq-	1899
1.4.2 Connector -T2aa-	1899
1.4.3 Connector -T2bg-	1900
1.4.4 Connector -T2af-	1901
1.4.5 Connector -T3o-	1901
1.4.6 Connector -T2rb-	1902
1.5 Ignition coil 1 with output stage -N70-	1903-1904
1.5.1 Connector -T4e-	1903
1.5.2 Connector -T4ff-	1904
1.5.3 Connector -T4hb-	1904
1.6 Charge pressure control solenoid valve -N75-	1905-1906
1.6.1 Connector -T2pu-	1905
1.6.2 Connector -T2oo-	1906
1.7 Heater element for crankcase breather -N79-	1907
1.7.1 Connector -T2gs-	1907
1.8 Activated charcoal filter solenoid valve 1 -N80-	1907-1911
1.8.1 Connector -T2b-	1908

1.8.2 Connector -T2b-	1908
1.8.3 Connector -T2ai-	1909
1.8.4 Connector -T2am-	1910
1.8.5 Connector -T2rd-	1910
1.8.6 Connector -T2sh-	1911
1.9 Coolant shut-off valve -N82-	1912
1.9.1 Connector -T2a-	1912
1.10 Ignition coil 2 with output stage -N127-	1912-1914
1.10.1 Connector -T4b-	1913
1.10.2 Connector -T4fg-	1913
1.10.3 Connector -T4gy-	1914
1.11 Airbag igniter 1 on front passenger side -N131-	1915
1.11.1 Connector -T3ak-	1915
1.12 Driver seat belt tensioner igniter 1 -N153-	1915
1.12.1 Connector -T2od-	1916
1.13 Front passenger seat belt tensioner igniter 1 -N154-	1916
1.13.1 Connector -T2ef-	1916
1.14 Rear belt tensioner igniter on driver side -N196-	1917
1.14.1 Connector -T2dx-	1917
1.15 Rear belt tensioner igniter on passenger side -N197-	1918
1.15.1 Connector -T2dv-	1918
1.16 Side airbag igniter on driver side -N199-	1919
1.16.1 Connector -T3gm-	1919
1.17 Side airbag igniter on front passenger side -N200-	1920
1.17.1 Connector -T3dl-	1920
1.18 Rear side airbag igniter on driver side -N201-	1921
1.18.1 Connector -T3ck-	1921
1.19 Rear side airbag igniter on passenger side -N202-	1922
1.19.1 Connector -T3dk-	1922
1.20 Camshaft control valve 1 -N205-	1923-1925
1.20.1 Connector -T2bu-	1923
1.20.2 Connector -T2f-	1924
1.20.3 Connector -T2ah-	1925
1.20.4 Connector -T2re-	1925
1.21 Turbocharger air recirculation valve -N249-	1926-1927
1.21.1 Connector -T2d-	1926
1.21.2 Connector -T2pk-	1927
1.21.3 Connector -T2rh-	1928
1.22 Driver side curtain airbag igniter -N251-	1928
1.22.1 Connector -T2ea-	1928
1.23 Front passenger side curtain airbag igniter -N252-	1929
1.23.1 Connector -T2eb-	1929
1.24 Fuel pressure regulating valve -N276-	1930-1932
1.24.1 Connector -T2pr-	1930
1.24.2 Connector -T2nr-	1931
1.24.3 Connector -T2bj-	1932
1.24.4 Connector -T2k-	1932
1.25 Air conditioner compressor regulating valve -N280-	1933-1934
1.25.1 Connector -T2op-	1933
1.25.2 Connector -T2cj-	1934
1.26 Fuel tank shut-off valve -N288-	1935
1.26.1 Connector -T2sb-	1935
1.27 Fuel metering valve -N290-	1935-1937
1.27.1 Connector -T2ps-	1936
1.27.2 Connector -T2bh-	1936
1.27.3 Connector -T2sg-	1937
1.27.4 Connector -T2ri-	1938
1.28 Ignition coil 3 with output stage -N291-	1938-1940
1.28.1 Connector -T4c-	1939
1.28.2 Connector -T4fh-	1939
1.28.3 Connector -T4gz-	1940
1.29 Ignition coil 4 with output stage -N292-	1941-1942
1.29.1 Connector -T4d-	1941
1.29.2 Connector -T4fi-	1942
1.29.3 Connector -T4ha-	1942
1.30 Driver side knee airbag igniter -N295-	1943

1.30.1 Connector -T2cm-	1943
1.31 Intake manifold flap valve -N316-	1944-1945
1.31.1 Connector -T2i-	1944
1.31.2 Connector -T2ao-	1945
1.31.3 Connector -T2rj-	1946
1.32 Exhaust camshaft control valve 1 -N318-	1946-1948
1.32.1 Connector -T2ns-	1947
1.32.2 Connector -T2e-	1947
1.32.3 Connector -T2rk-	1948
1.33 Front left shock absorber damping adjustment valve -N336-	1949
1.33.1 Connector -T2gy-	1949
1.34 Front right shock absorber damping adjustment valve -N337-	1949
1.34.1 Connector -T2hb-	1950
1.35 Rear left shock absorber damping adjustment valve -N338-	1950
1.35.1 Connector -T2fl-	1950
1.36 Rear right shock absorber damping adjustment valve -N339-	1951
1.36.1 Connector -T2fm-	1951
1.37 Exhaust gas recirculation cooler changeover valve -N345-	1952
1.37.1 Connector -T2bs-	1952
1.38 Valve for oil pressure control -N428-	1953-1956
1.38.1 Connector -T2j-	1953
1.38.2 Connector -T2j-	1954
1.38.3 Connector -T2j-	1955
1.38.4 Connector -T2nt-	1955
1.38.5 Connector -T2pj-	1956
1.38.6 Connector -T2rl-	1957
1.39 Injector for reducing agent -N474-	1957
1.39.1 Connector -T2fn-	1957
1.40 Coolant valve for gearbox -N488-	1958-1959
1.40.1 Connector -T2nv-	1958
1.40.2 Connector -T2rm-	1959
1.41 Coolant valve for cylinder head -N489-	1960
1.41.1 Connector -T2bn-	1960
1.42 Actuator for engine temperature regulation -N493-	1960-1963
1.42.1 Connector -T5a-	1961
1.42.2 Connector -T5a-	1961
1.42.3 Connector -T5dm-	1962
1.42.4 Connector -T5ba-	1963
1.42.5 Connector -T2qu-	1963
1.43 Coolant regulating valve -N515-	1964
1.43.1 Connector -T2qv-	1964
1.44 Refrigerant shut-off valve 1 for hybrid battery -N516-	1965
1.44.1 Connector -T2sq-	1965
1.45 Piston cooling jet control valve -N522-	1966-1967
1.45.1 Connector -T2c-	1966
1.45.2 Connector -T2pl-	1967
1.45.3 Connector -T2rc-	1968
1.46 Injector 2, cylinder 1 -N532-	1968
1.46.1 Connector -T2iu-	1968
1.47 Injector 2, cylinder 2 -N533-	1969
1.47.1 Connector -T2iv-	1969
1.48 Injector 2, cylinder 3 -N534-	1970
1.48.1 Connector -T2iw-	1970
1.49 Injector 2, cylinder 4 -N535-	1971
1.49.1 Connector -T2ix-	1971
1.50 Refrigerant shut-off valve for heater and air conditioner unit -N541-	1972
1.50.1 Connector -T2sz-	1972
1.51 Refrigerant shut-off valve for high-voltage battery heat exchanger -N542-	1973
1.51.1 Connector -T2ta-	1973
1.52 Inlet cam actuator A for cylinder 1 -N576-	1974-1975
1.52.1 Connector -T2n-	1974
1.52.2 Connector -T2n-	1975
1.53 Inlet cam actuator B for cylinder 1 -N577-	1976
1.53.1 Connector -T2m-	1976
1.53.2 Connector -T2m-	1977
1.54 Exhaust cam actuator A for cylinder 1 -N580-	1977

1.54.1 Connector -T2pb-	1977
1.55 Exhaust cam actuator B for cylinder 1 -N581-	1978
1.55.1 Connector -T2pc-	1978
1.56 Inlet cam actuator for cylinder 2 -N583-	1979
1.56.1 Connector -T3j-	1979
1.57 Inlet cam actuator A for cylinder 2 -N584-	1980
1.57.1 Connector -T2o-	1980
1.58 Inlet cam actuator B for cylinder 2 -N585-	1981
1.58.1 Connector -T2p-	1981
1.59 Exhaust cam actuator for cylinder 2 -N587-	1982
1.59.1 Connector -T3h-	1982
1.60 Exhaust cam actuator A for cylinder 2 -N588-	1983
1.60.1 Connector -T2pe-	1983
1.61 Exhaust cam actuator B for cylinder 2 -N589-	1984
1.61.1 Connector -T2pd-	1984
1.62 Inlet cam actuator for cylinder 3 -N591-	1985
1.62.1 Connector -T3k-	1985
1.63 Inlet cam actuator A for cylinder 3 -N592-	1986-1987
1.63.1 Connector -T2r-	1986
1.63.2 Connector -T2r-	1987
1.64 Inlet cam actuator B for cylinder 3 -N593-	1988
1.64.1 Connector -T2q-	1988
1.64.2 Connector -T2q-	1989
1.65 Exhaust cam actuator for cylinder 3 -N595-	1989
1.65.1 Connector -T3i-	1989
1.66 Exhaust cam actuator A for cylinder 3 -N596-	1990
1.66.1 Connector -T2pf-	1990
1.67 Exhaust cam actuator B for cylinder 3 -N597-	1991
1.67.1 Connector -T2pg-	1991
1.68 Inlet cam actuator A for cylinder 4 -N600-	1992
1.68.1 Connector -T2s-	1992
1.69 Inlet cam actuator B for cylinder 4 -N601-	1993
1.69.1 Connector -T2t-	1993
1.70 Exhaust cam actuator A for cylinder 4 -N604-	1994
1.70.1 Connector -T2aw-	1994
1.71 Exhaust cam actuator B for cylinder 4 -N605-	1995
1.71.1 Connector -T2ph-	1995
1.72 Coolant changeover valve 2 -N633-	1996
1.72.1 Connector -T2se-	1996
1.73 Protection resistor for high-voltage battery -N662-	1997-1998
1.73.1 Connector -T1bhz-	1997
1.73.2 Connector -T1bia-	1998
1.74 Inlet camshaft control valve 1 -N727-	1999
1.74.1 Connector -T2si-	1999
1.74.2 Connector -T2th-	1999
1.75 Injector 2 for reducing agent -N758-	2000
1.75.1 Connector -T2qn-	2000
1.76 Brake servo -NX6-	2001-2003
1.76.1 Connector -T4hm-	2001
1.76.2 Connector -T2sr-	2002
1.76.3 Connector -T26f-	2003
838 - -Connector views: parts with prefix O to Q - 3	2004-2013
1. Connector views: parts with prefix O to Q	2004-2013
1.1 Glow plug 1 -Q10-	2004-2005
1.1.1 Connector -T1an-	2004
1.1.2 Connector -T1an-	2005
1.1.3 Connector -T1bgk-	2005
1.2 Glow plug 2 -Q11-	2006-2007
1.2.1 Connector -T1ao-	2006
1.2.2 Connector -T1ao-	2007
1.2.3 Connector -T1bgl-	2008
1.3 Glow plug 4 -Q13-	2008-2009
1.3.1 Connector -T1ap-	2008
1.3.2 Connector -T1ap-	2009
1.3.3 Connector -T1bgm-	2010
1.4 Glow plug 3 -QX3-	2010-2013

1.4.1 Connector -T4n-	2011
1.4.2 Connector -T4n-	2011
1.4.3 Connector -T4fj-	2012-2013
839 - -Connector views: parts with prefix R - 3	2014-2071
1. Connector views: parts with prefix R	2014-2071
1.1 Rear left treble loudspeaker -R14-	2015
1.1.1 Connector -T2ou-	2015
1.1.2 Connector -T2qc-	2016
1.2 Rear left bass loudspeaker -R15-	2016-2017
1.2.1 Connector -T4fd-	2017
1.2.2 Connector -T4fm-	2017
1.3 Rear right treble loudspeaker -R16-	2018-2019
1.3.1 Connector -T2ov-	2018
1.3.2 Connector -T2qd-	2019
1.4 Rear right bass loudspeaker -R17-	2020
1.4.1 Connector -T4fe-	2020
1.4.2 Connector -T4fn-	2020
1.5 Front left treble loudspeaker -R20-	2021-2022
1.5.1 Connector -T2ig-	2021
1.5.2 Connector -T2qa-	2022
1.6 Front left bass loudspeaker -R21-	2023
1.6.1 Connector -T4ch-	2023
1.6.2 Connector -T2qb-	2023
1.7 Front right treble loudspeaker -R22-	2024-2025
1.7.1 Connector -T2ik-	2024
1.7.2 Connector -T2qh-	2025
1.8 Front right bass loudspeaker -R23-	2026
1.8.1 Connector -T4cm-	2026
1.8.2 Connector -T2qi-	2026
1.9 Telephone microphone -R38-	2027
1.9.1 Connector -T2dz-	2027
1.10 TV aerial 1 -R55-	2028
1.10.1 Connector -T4bs-	2028
1.11 TV aerial 2 -R56-	2029
1.11.1 Connector -T2hg-	2029
1.12 TV aerial 3 -R57-	2030
1.12.1 Connector -T2hh-	2030
1.13 TV tuner -R78-	2031-2033
1.13.1 Connector -T12i-	2031
1.13.2 Connector -T2eh-	2032
1.13.3 Connector -T2ei-	2033
1.13.4 Connector -T4ax-	2033
1.14 Left aerial module -R108-	2034-2035
1.14.1 Connector -T4at-	2034
1.14.2 Connector -T2dl-	2035
1.14.3 Connector -T2ki-	2036
1.15 Right aerial module -R109-	2036-2038
1.15.1 Connector -T2dm-	2037
1.15.2 Connector -T2kj-	2037
1.15.3 Connector -T2te-	2038
1.16 Rear bumper aerial for entry and start system -R136-	2039
1.16.1 Connector -T2ev-	2039
1.17 Luggage compartment aerial for entry and start system -R137-	2039
1.17.1 Connector -T2et-	2040
1.18 Interior aerial 1 for entry and start system -R138-	2040
1.18.1 Connector -T2en-	2040
1.19 Interior aerial 2 for entry and start system -R139-	2041
1.19.1 Connector -T2eg-	2041
1.20 Remote control receiver for auxiliary coolant heater -R149-	2042-2043
1.20.1 Connector -T6v-	2042
1.20.2 Connector -T2ow-	2043
1.21 Traffic data aerial -R173-	2044
1.21.1 Connector -T8q-	2044
1.22 Amplitude modulation (AM) frequency filter -R177-	2044-2046
1.22.1 Connector -T2hv-	2045
1.22.2 Connector -T1ov-	2045

1.22.3 Connector -T1ow-	2046
1.23 Frequency modulation (FM) frequency filter in negative wire -R178-	2047
1.23.1 Connector -T1oy-	2047
1.24 Frequency modulation (FM) frequency filter in positive wire -R179-	2047
1.24.1 Connector -T1ox-	2048
1.25 Digital radio aerial -R183-	2048
1.25.1 Connector -T4bo-	2048
1.26 Connection for external audio sources -R199-	2049
1.26.1 Connector -T4af-	2049
1.27 Centre loudspeaker -R208-	2050-2051
1.27.1 Connector -T2co-	2050
1.27.2 Connector -T2tg-	2051
1.28 Subwoofer -R211-	2052
1.28.1 Connector -T4bb-	2052
1.29 Front camera for driver assist systems -R242-	2052-2053
1.29.1 Connector -T12h-	2053
1.29.2 Connector -T12b-	2053
1.30 Front overhead view camera -R243-	2054
1.30.1 Connector -T5bo-	2054
1.31 Actuator 1 for engine sound generator -R257-	2055
1.31.1 Connector -T2sp-	2055
1.32 Storage compartment with interface for mobile telephone -R265-	2056-2057
1.32.1 Connector -T6p-	2056
1.32.2 Connector -T2cn-	2057
1.33 Electric torch -R280-	2058
1.33.1 Connector -T3av-	2058
1.34 USB hub -R293-	2058-2062
1.34.1 Connector -T4ah-	2059-2060
1.34.2 Connector -T5x-	2061
1.34.3 Connector -T5as-	2061
1.34.4 Connector -T5at-	2062
1.34.5 Connector -T5bl-	2063
1.35 LTE aerial 1 -R297-	2063-2064
1.35.1 Connector -T2fc-	2063
1.35.2 Connector -T2td-	2064
1.36 LTE aerial 2 -R306-	2065-2066
1.36.1 Connector -T2hi-	2065
1.36.2 Connector -T2fd-	2066
1.36.3 Connector -T2ql-	2066
1.37 Loudspeaker for emergency call module -R335-	2067-2068
1.37.1 Connector -T2px-	2067
1.37.2 Connector -T2kb-	2068
1.38 Roof aerial -RX5-	2069-2071
1.38.1 Connector -T2di-	2069
1.38.2 Connector -T2ds-	2070
1.38.3 Connector -T2dj-	2070-2071
840 - -Connector views: parts with prefix S to U - 3	2072-2210
1. Connector views: parts with prefix S to U	2072-2210
1.1 Coupling point for exhaust flap control unit -TAGK-	2073-2074
1.1.1 Connector -T5bf-	2073
1.1.2 Connector -T5l-	2074
1.1.3 Connector -T5bd-	2075
1.2 Coupling point for CAN bus for sunroof -TCBSD-	2075
1.2.1 Connector -T6x-	2075
1.3 Coupling point for gearbox oil cooling -TGOK-	2076-2077
1.3.1 Connector -T5dr-	2076
1.3.2 Connector -T5ds-	2077
1.4 Coupling point on front left exterior door handle -TGVL-	2078
1.4.1 Connector -T4ci-	2078
1.4.2 Connector -T4bu-	2078
1.5 Coupling point on front right exterior door handle -TGVR-	2079-2080
1.5.1 Connector -T4bv-	2079
1.5.2 Connector -T4cn-	2080
1.6 Coupling point for roof -TH-	2081
1.6.1 Connector -T16e-	2081
1.6.2 Connector -T16a-	2081

1.7 Coupling point on rear lid, left -THKL-	2082-2085
1.7.1 Connector -T10x-	2082
1.7.2 Connector -T10h-	2083
1.7.3 Connector -T10y-	2084
1.7.4 Connector -T10i-	2084
1.7.5 Connector -T10z-	2085
1.7.6 Connector -T10j-	2086
1.8 Coupling point in luggage compartment, left -THRL-	2086-2092
1.8.1 Connector -T6z-	2087
1.8.2 Connector -T6ak-	2087
1.8.3 Connector -T4bh-	2088
1.8.4 Connector -T4bt-	2089
1.8.5 Connector -T2qx-	2089
1.8.6 Connector -T2qw-	2090
1.8.7 Connector -T6ca-	2091
1.8.8 Connector -T6c-	2091
1.8.9 Connector -T2sc-	2092
1.8.10 Connector -T2sd-	2093
1.9 Coupling point in luggage compartment, centre -THRM-	2093-2094
1.9.1 Connector -T14ax-	2093
1.9.2 Connector -T14aw-	2094
1.10 Coupling point in luggage compartment, right -THRR-	2095
1.10.1 Connector -T3cc-	2095
1.10.2 Connector -T3aw-	2096
1.11 Coupling point 1 for high-voltage charging socket -THVL1-	2096-2097
1.11.1 Connector -T14bb-	2096
1.11.2 Connector -T14ba-	2097
1.12 Coupling point in interior -TI-	2098
1.12.1 Connector -T5di-	2098
1.12.2 Connector -T5dj-	2098
1.13 Coupling point in high-voltage battery -TIHV-	2099-2102
1.13.1 Connector -T10as-	2099
1.13.2 Connector -T10at-	2100
1.13.3 Connector -T10au-	2101
1.13.4 Connector -T10av-	2101
1.13.5 Connector -T2sn-	2102
1.13.6 Connector -T2so-	2103
1.14 Coupling point in interior, centre -TIM-	2103-2104
1.14.1 Connector -T5aj-	2103
1.14.2 Connector -T5ak-	2104
1.15 Coupling point in interior, below left -TIUL-	2105-2113
1.15.1 Connector -T17j-	2105
1.15.2 Connector -T17j-	2106
1.15.3 Connector -T17n-	2107
1.15.4 Connector -T17n-	2107
1.15.5 Connector -T17e-	2108
1.15.6 Connector -T17e-	2109
1.15.7 Connector -T17l-	2109
1.15.8 Connector -T17m-	2110
1.15.9 Connector -T17i-	2111
1.15.10 Connector -T17k-	2111
1.15.11 Connector -T17d-	2112
1.15.12 Connector -T5aw-	2113
1.15.13 Connector -T5bi-	2113
1.16 Coupling point in interior, below right -TIUR-	2114-2119
1.16.1 Connector -T17s-	2114
1.16.2 Connector -T17g-	2115
1.16.3 Connector -T17t-	2116
1.16.4 Connector -T17h-	2116
1.16.5 Connector -T17q-	2117
1.16.6 Connector -T17f-	2118
1.16.7 Connector -T17o-	2118
1.16.8 Connector -T2ck-	2119
1.16.9 Connector -T2cl-	2120
1.17 Coupling point in engine compartment, left -TML-	2120-2143
1.17.1 Connector -T8o-	2122

1.17.2 Connector -T8g-	2122
1.17.3 Connector -T14s-	2123
1.17.4 Connector -T14e-	2124
1.17.5 Connector -T10s-	2124
1.17.6 Connector -T10d-	2125
1.17.7 Connector -T4bj-	2126
1.17.8 Connector -T14b-	2126
1.17.9 Connector -T14r-	2127
1.17.10 Connector -T8f-	2128
1.17.11 Connector -T10t-	2128
1.17.12 Connector -T10e-	2129
1.17.13 Connector -T6m-	2130
1.17.14 Connector -T6ag-	2130
1.17.15 Connector -T14v-	2131
1.17.16 Connector -T14x-	2132
1.17.17 Connector -T14o-	2132
1.17.18 Connector -T14c-	2133
1.17.19 Connector -T4ac-	2134
1.17.20 Connector -T14ah-	2134
1.17.21 Connector -T14as-	2135
1.17.22 Connector -T5bh-	2136
1.17.23 Connector -T5bn-	2136
1.17.24 Connector -T14d-	2137
1.17.25 Connector -T14p-	2138
1.17.26 Connector -T14ai-	2138
1.17.27 Connector -T14aj-	2139
1.17.28 Connector -T4gr-	2140
1.17.29 Connector -T4gs-	2140
1.17.30 Connector -T8bd-	2141
1.17.31 Connector -T8be-	2142
1.17.32 Connector -T14ar-	2142
1.17.33 Connector -T14aq-	2143
1.17.34 Connector -T8ch-	2144
1.18 Coupling point on engine, top left -TMOL-	2144-2148
1.18.1 Connector -T1eo-	2145
1.18.2 Connector -T1kc-	2145
1.18.3 Connector -T6au-	2146
1.18.4 Connector -T6af-	2147
1.18.5 Connector -T14be-	2147
1.18.6 Connector -T14bf-	2148
1.19 Coupling point on engine, top centre -TMOM-	2149-2151
1.19.1 Connector -T8b-	2149
1.19.2 Connector -T8ab-	2150
1.19.3 Connector -T8ci-	2150
1.19.4 Connector -T8cj-	2151
1.20 Coupling point on engine, top right -TMOR-	2152-2156
1.20.1 Connector -T8a-	2152
1.20.2 Connector -T8ad-	2153
1.20.3 Connector -T14a-	2153
1.20.4 Connector -T14aa-	2154
1.20.5 Connector -T14ap-	2155
1.20.6 Connector -T14ao-	2155
1.20.7 Connector -T8bp-	2156
1.20.8 Connector -T8bo-	2157
1.21 Coupling point for rear left side airbag -TSABHL-	2157-2158
1.21.1 Connector -T3as-	2157
1.21.2 Connector -T3cl-	2158
1.22 Coupling point for rear right side airbag -TSABHR-	2159
1.22.1 Connector -T3ay-	2159
1.22.2 Connector -T3di-	2160
1.23 Coupling point for front left side airbag -TSABVL-	2160-2161
1.23.1 Connector -T3aq-	2160
1.23.2 Connector -T3ch-	2161
1.24 Coupling point for front right side airbag -TSABVR-	2162
1.24.1 Connector -T3ap-	2162
1.24.2 Connector -T3di-	2162

1.25 Coupling point for sliding sunroof -TSD-	2163
1.25.1 Connector -T4da-	2163
1.26 Coupling point on rear right bumper -TSFHR-	2164-2165
1.26.1 Connector -T8l-	2164
1.26.2 Connector -T8z-	2165
1.27 Coupling point for rear left seat -TSHL-	2166
1.27.1 Connector -T4ba-	2166
1.28 Coupling point for rear right seat -TSHR-	2166
1.28.1 Connector -T4bg-	2167
1.29 Coupling point for front left seat -TSVL-	2167-2170
1.29.1 Connector -T17b-	2167
1.29.2 Connector -T17a-	2168
1.29.3 Connector -T4x-	2169
1.29.4 Connector -T4t-	2169
1.29.5 Connector -T8c-	2170
1.29.6 Connector -T8d-	2171
1.30 Coupling point for front right seat -TSVR-	2171-2173
1.30.1 Connector -T17c-	2172
1.30.2 Connector -T4em-	2172
1.30.3 Connector -T4en-	2173
1.30.4 Connector -T17v-	2174
1.31 Coupling point for rear left door -TTHL-	2174-2175
1.31.1 Connector -T19c-	2174
1.31.2 Connector -T19a-	2175
1.32 Coupling point for rear right door -TTHR-	2176
1.32.1 Connector -T19d-	2176
1.32.2 Connector -T19b-	2177
1.33 Coupling point for front left door -TTVL-	2177-2185
1.33.1 Connector -T27c-	2178
1.33.2 Connector -T27b-	2178
1.33.3 Connector -T29c-	2179
1.33.4 Connector -T29b-	2180
1.33.5 Connector -T4cj-	2180
1.33.6 Connector -T4cx-	2181
1.33.7 Connector -T4ct-	2182
1.33.8 Connector -T4cr-	2182
1.33.9 Connector -T10aj-	2183
1.33.10 Connector -T10ak-	2184
1.33.11 Connector -T8ac-	2184
1.33.12 Connector -T8bg-	2185
1.34 Coupling point for front right door -TTVR-	2186-2193
1.34.1 Connector -T27d-	2186
1.34.2 Connector -T27a-	2187
1.34.3 Connector -T29d-	2188
1.34.4 Connector -T29a-	2188
1.34.5 Connector -T4cq-	2189
1.34.6 Connector -T4by-	2190
1.34.7 Connector -T4co-	2190
1.34.8 Connector -T10al-	2191
1.34.9 Connector -T10am-	2192
1.34.10 Connector -T8bh-	2192
1.34.11 Connector -T8bi-	2193
1.34.12 Connector -T4dx-	2194
1.35 Terminal 30 wiring junction -TV2-	2194
1.35.1 Connector -T1id-	2194
1.36 Maintenance connector for high-voltage system -TW-	2195-2196
1.36.1 Connector -T4aq-	2195
1.36.2 Connector -T4hi-	2196
1.37 12 V socket -U5-	2197
1.37.1 Connector -T3az-	2197
1.38 DC/AC converter with socket, 12 V - 230 V -U13-	2197
1.38.1 Connector -T3an-	2198
1.39 12 V socket 2 -U18-	2198
1.39.1 Connector -T3am-	2198
1.40 12 V socket 3 -U19-	2199
1.40.1 Connector -T3ar-	2199

1.41 Diagnostic connection -U31-	2200
1.41.1 Connector -T16c-	2200
1.42 USB charging socket 1 -U37-	2201-2202
1.42.1 Connector -T4du-	2201-2202
1.42.2 Connector -T4gn-	2203
1.43 USB connection 1 -U41-	2203-2207
1.43.1 Connector -T5aq-	2204
1.43.2 Connector -T5aq-	2204
1.43.3 Connector -T7b-	2205
1.43.4 Connector -T4gm-	2206-2207
1.43.5 Connector -T5du-	2208
1.44 USB connection 2 -U42-	2208
1.44.1 Connector -T5y-	2208
1.45 High-voltage battery charging socket 1 -UX4-	2209-2210
1.45.1 Connector -T13b-	2209-2210
841 - -Connector views: parts with prefix V - 3	2211-2272
1. Connector views: parts with prefix V	2211-2272
1.1 Windscreen wiper motor -V-	2213
1.1.1 Connector -T4bm-	2213
1.2 Headlight washer system pump -V11-	2213
1.2.1 Connector -T2gl-	2213
1.3 Rear window wiper motor -V12-	2214
1.3.1 Connector -T4cg-	2214
1.4 Driver seat longitudinal adjustment motor -V28-	2215
1.4.1 Connector -T5cy-	2215
1.5 Front passenger seat longitudinal adjustment motor -V31-	2216
1.5.1 Connector -T5dc-	2216
1.6 Driver seat backrest adjustment motor -V45-	2217-2218
1.6.1 Connector -T5db-	2217
1.6.2 Connector -T5cq-	2218
1.7 Front passenger seat backrest adjustment motor -V46-	2219
1.7.1 Connector -T5cp-	2219
1.8 Coolant circulation pump -V50-	2219
1.8.1 Connector -T3ed-	2220
1.9 Metering pump -V54-	2220
1.9.1 Connector -T2ex-	2220
1.10 Windscreen and rear window washer pump -V59-	2221
1.10.1 Connector -T2gj-	2221
1.11 Driver seat lumbar support longitudinal adjustment motor -V125-	2222
1.11.1 Connector -T4ey-	2222
1.12 Front passenger seat lumbar support longitudinal adjustment motor -V126-	2223
1.12.1 Connector -T4fa-	2223
1.13 Driver seat lumbar support height adjustment motor -V129-	2224
1.13.1 Connector -T4ex-	2224
1.14 Front passenger seat lumbar support height adjustment motor -V130-	2225
1.14.1 Connector -T4ez-	2225
1.15 Driver seat height adjustment motor -V138-	2226
1.15.1 Connector -T5da-	2226
1.16 Driver side window regulator motor -V147-	2227
1.16.1 Connector -T3gk-	2227
1.17 Front passenger side window regulator motor -V148-	2228
1.17.1 Connector -T3gl-	2228
1.18 Charge air cooling pump -V188-	2229-2230
1.18.1 Connector -T3aj-	2229
1.18.2 Connector -T3f-	2230
1.19 Vacuum pump for brakes -V192-	2231
1.19.1 Connector -T2qj-	2231
1.20 Driver seat rake adjustment motor -V243-	2231
1.20.1 Connector -T5cz-	2232
1.21 Front passenger seat rake adjustment motor -V244-	2232
1.21.1 Connector -T5dd-	2232
1.22 Front passenger seat height adjustment motor -V246-	2233
1.22.1 Connector -T5de-	2233
1.23 Left parking brake motor -V282-	2234
1.23.1 Connector -T2fi-	2234
1.24 Right parking brake motor -V283-	2235

1.24.1 Connector -T2fk-	2235
1.25 Motor 1 for rear lid -V444-	2236
1.25.1 Connector -T10m-	2236
1.26 Motor 2 for rear lid -V445-	2237
1.26.1 Connector -T10k-	2237
1.27 Charge pressure positioner -V465-	2238-2239
1.27.1 Connector -T6a-	2238
1.27.2 Connector -T6a-	2239
1.27.3 Connector -T6bw-	2240
1.28 Coolant pump for high-temperature circuit -V467-	2240
1.28.1 Connector -T3ha-	2240
1.29 Coolant pump for low-temperature circuit -V468-	2241
1.29.1 Connector -T3bj-	2241
1.30 Rear driver side window regulator motor -V471-	2242-2243
1.30.1 Connector -T3bx-	2242
1.30.2 Connector -T10aa-	2243
1.31 Rear passenger side window regulator motor -V472-	2244
1.31.1 Connector -T10ab-	2244
1.31.2 Connector -T3by-	2244
1.32 Auxiliary hydraulic pump 1 for gearbox oil -V475-	2245
1.32.1 Connector -T4fp-	2245
1.33 Auxiliary pump for heating -V488-	2246-2247
1.33.1 Connector -T3ag-	2246
1.33.2 Connector -T3e-	2247
1.33.3 Connector -T3gp-	2248
1.34 Coolant circulation pump before power and control electronics for electric drive -V508-	2248
1.34.1 Connector -T3gy-	2248
1.35 Coolant pump for high-voltage battery -V590-	2249
1.35.1 Connector -T3gz-	2249
1.36 Driver side exterior mirror -VX4-	2250-2251
1.36.1 Connector -T2ny-	2250
1.36.2 Connector -T5cx-	2251
1.36.3 Connector -T2ln-	2252
1.37 Passenger side exterior mirror -VX5-	2252-2253
1.37.1 Connector -T2pm-	2252
1.37.2 Connector -T5dn-	2253
1.38 Trailer towing coupling -VX15-	2254
1.38.1 Connector -T13a-	2254
1.38.2 Connector -T6aj-	2255
1.39 Power latching for rear lid -VX16-	2255
1.39.1 Connector -T6ao-	2255
1.40 Driver door lock unit -VX21-	2256
1.40.1 Connector -T8w-	2256
1.41 Front passenger door lock unit -VX22-	2257
1.41.1 Connector -T8al-	2257
1.42 Rear left door lock unit -VX23-	2258-2259
1.42.1 Connector -T8x-	2258
1.42.2 Connector -T8an-	2259
1.42.3 Connector -T8as-	2260
1.43 Rear right door lock unit -VX24-	2260-2261
1.43.1 Connector -T8y-	2260
1.43.2 Connector -T8ao-	2261
1.44 Rear lid lock unit -VX25-	2262
1.44.1 Connector -T4ce-	2262
1.45 Temperature flap -VX27-	2263
1.45.1 Connector -T6cj-	2263
1.46 Air distribution flap -VX33-	2263
1.46.1 Connector -T6ci-	2263
1.47 Air recirculation flap -VX52-	2264
1.47.1 Connector -T6ch-	2264
1.48 Three-phase current drive -VX54-	2265
1.48.1 Connector -T10ar-	2265
1.49 Radiator fan -VX57-	2266-2268
1.49.1 Connector -T4bk-	2266
1.49.2 Connector -T4bk-	2267
1.49.3 Connector -T4bl-	2268

1.49.4 Connector -T4hg-	2268
1.50 Head-up display module -VX78-	2269
1.50.1 Connector -T6r-	2269
1.51 Air conditioner compressor -VX81-	2270-2272
1.51.1 Connector -T8cg-	2270
1.51.2 Connector -T5ea-	2271-2272
842 - -Connector views: parts with prefix W to Z - 3	2273-2298
1. Connector views: parts with prefix W to Z	2273-2298
1.1 Luggage compartment light -W3-	2273
1.1.1 Connector -T2dp-	2274
1.2 Glove compartment light -W6-	2274
1.2.1 Connector -T2cr-	2274
1.3 Front passenger side illuminated vanity mirror -W14-	2275
1.3.1 Connector -T2ht-	2275
1.4 Driver side illuminated vanity mirror -W20-	2276
1.4.1 Connector -T2hu-	2276
1.5 Front left entry light -W31-	2277
1.5.1 Connector -T2ed-	2277
1.6 Front right entry light -W32-	2278
1.6.1 Connector -T2ee-	2278
1.7 Rear left interior light -W47-	2279
1.7.1 Connector -T4ca-	2279
1.8 Rear right interior light -W48-	2280
1.8.1 Connector -T4cb-	2280
1.9 Surround lighting 1 in rear lid -W61-	2281
1.9.1 Connector -T2jm-	2281
1.10 Interior light -W64-	2282
1.10.1 Connector -T4bz-	2282
1.11 Light for driver door background lighting -W86-	2283-2284
1.11.1 Connector -T2nx-	2283
1.11.2 Connector -T4hd-	2284
1.12 Light for passenger door background lighting -W87-	2285
1.12.1 Connector -T4hc-	2285
1.13 Light for rear door background lighting, driver side -W88-	2285
1.13.1 Connector -T2io-	2286
1.14 Light for rear door background lighting, passenger side -W89-	2286
1.14.1 Connector -T2is-	2286
1.15 Front interior light -WX1-	2287
1.15.1 Connector -T6w-	2287
1.16 Left number plate light -X4-	2288
1.16.1 Connector -T2ok-	2288
1.17 Right number plate light -X5-	2289
1.17.1 Connector -T2ol-	2289
1.18 Heated windscreen -Z2-	2290-2291
1.18.1 Connector -T1ju-	2290
1.18.2 Connector -T1jp-	2291
1.19 Left washer jet heater element -Z20-	2292
1.19.1 Connector -T2go-	2292
1.20 Right washer jet heater element -Z21-	2292
1.20.1 Connector -T2gp-	2293
1.21 Heater for reducing agent line (heater circuit 2) -Z104-	2293
1.21.1 Connector -T2fa-	2293
1.22 Windscreen heater for front sensors -Z113-	2294-2295
1.22.1 Connector -T2ff-	2294
1.22.2 Connector -T2tf-	2295
1.23 High-voltage heater (PTC) -ZX17-	2296-2298
1.23.1 Connector -T8ce-	2296
1.23.2 Connector -T5ef-	2297
1.23.3 Connector -T5ed-	2297-2298