



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Application notes and safety information for LED headlights	1
1.2 Safety measures when working on vehicles with a start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	1
<b>2 Repair instructions</b>	<b>2</b>
2.1 Rules for cleanliness	2
2.2 General information	2
2.3 Contact corrosion	2
2.4 ESD workplace	2
2.5 Routing and attachment of lines	3
<b>3 Battery</b>	<b>4</b>
3.1 Battery - general notes	4
3.2 Types of battery	4
<b>27 - Starter, current supply, CCS</b>	<b>5</b>
<b>1 Battery</b>	<b>5</b>
1.1 Assembly overview – battery	5
1.2 Removing and installing battery	8
1.3 Disconnecting and connecting battery	13
1.4 Removing and installing battery tray	15
1.5 Checking battery	17
1.6 Charging battery	17
1.7 Removing and installing earth wire with battery monitor control unit J367	17
1.8 Adapting battery monitor control unit J367	19
<b>2 Alternator</b>	<b>20</b>
2.1 Assembly overview – alternator	20
2.2 Removing and installing alternator	21
2.3 Checking alternator	26
2.4 Removing and installing poly V-belt pulley	26
2.5 Removing and installing voltage regulator	32
<b>3 Starter</b>	<b>35</b>
3.1 Assembly overview – starter	35
3.2 Removing and installing starter	36
<b>4 Cruise control system (CCS)</b>	<b>40</b>
<b>90 - Gauges, instruments</b>	<b>41</b>
<b>1 Dash panel insert</b>	<b>41</b>
1.1 Assembly overview – dash panel insert	41
1.2 Assembly overview – head-up display	41
1.3 Removing and installing dash panel insert KX2	42
1.4 Removing and installing control unit for head-up display	46
<b>2 Horn</b>	<b>48</b>
2.1 Assembly overview – horn	48
2.2 Removing and installing treble horn H2 and bass horn H7	48
2.3 Removing and installing bracket for treble horn H2/bass horn H7	49
<b>92 - Windscreen wash/wipe system</b>	<b>51</b>
<b>1 Windscreen wiper system</b>	<b>51</b>
1.1 Assembly overview – windscreen wiper system	51
1.2 Moving wipers to service position	54
1.3 Removing and installing wiper blade	54



1.4	Removing and installing wiper arms	55
1.5	Adjusting wiper arms	57
1.6	Removing and installing wiper motor V	58
1.7	Renewing wiper motor	59
1.8	Deactivating APP function of wiper motor	60
1.9	Removing and installing rain and light sensor	61
<b>2</b>	<b>Windscreen washer system</b>	<b>66</b>
2.1	Assembly overview – windscreen washer system	66
2.2	Removing and installing washer fluid reservoir	69
2.3	Removing and installing windscreen washer fluid level sender	72
2.4	Removing and installing windscreen washer pump	74
2.5	Removing and installing spray jets	76
2.6	Adjusting spray jets	77
<b>3</b>	<b>Rear window wiper system</b>	<b>78</b>
3.1	Assembly overview – rear window wiper system	78
3.2	Removing and installing wiper blade	78
3.3	Removing and installing wiper arm	79
3.4	Adjusting wiper arm	80
3.5	Removing and installing rear window wiper motor V12	81
<b>4</b>	<b>Rear window washer system</b>	<b>83</b>
4.1	Assembly overview – rear window washer system	83
4.2	Removing and installing spray jet	85
4.3	Adjusting spray jet	86
<b>5</b>	<b>Washer fluid lines</b>	<b>87</b>
5.1	Repairing washer fluid lines	87
<b>94</b>	<b>Lights, bulbs, switches - exterior</b>	<b>88</b>
<b>1</b>	<b>Headlights</b>	<b>88</b>
1.1	Assembly overview – headlight	88
1.2	Removing and installing headlight	93
1.3	Adjusting headlights	93
1.4	Removing and installing front turn signal bulb M5/M7	94
1.5	Installing repair kit for headlight housing	95
1.6	Removing and installing headlight range control motor V48/V49	96
1.7	Removing and installing LED module for daytime running light and side light L176/L177	102
1.8	Removing and installing LED module for daytime running light L377/L378	105
1.9	Removing and installing output module 1 for LED headlight A27/A31	107
<b>2</b>	<b>Lights in exterior mirror</b>	<b>111</b>
2.1	Assembly overview - lights in exterior mirror	111
2.2	Removing and installing turn signal	112
2.3	Removing and installing entry light in exterior mirror	114
<b>3</b>	<b>Tail light cluster</b>	<b>115</b>
3.1	Assembly overview – tail light cluster in body	115
3.2	Assembly overview – tail light clusters in rear lid	115
3.3	Removing and installing tail light in rear lid	116
3.4	Removing and installing tail light cluster	118
3.5	Removing and installing turn signal bulb	119
<b>4</b>	<b>High-level brake light</b>	<b>121</b>
4.1	Assembly overview – high-level brake light	121
4.2	Removing and installing high-level brake light	121
<b>5</b>	<b>Number plate light</b>	<b>124</b>
5.1	Assembly overview – number plate lights	124
5.2	Removing and installing number plate light X4/X5	124
<b>6</b>	<b>Entry and start authorisation system</b>	<b>126</b>



6.1	Overview of fitting locations – entry and start authorisation system	126
6.2	Overview of fitting locations – keyless entry system	128
6.3	Removing and installing interface for entry and start system J965	131
6.4	Removing and installing interior aerial 1 for entry and start system R138	132
6.5	Removing and installing interior aerial 2 for entry and start system R139	133
6.6	Removing and installing rear bumper aerial for entry and start system R136	134
6.7	Removing and installing luggage compartment aerial for entry and start system R137	134
6.8	Removing and installing rear lid power opening control unit J938	135
6.9	Removing and installing rear lid power opening sender G750/G760	136
<b>7</b>	<b>Steering column switch module</b>	<b>137</b>
7.1	Assembly overview – steering column switch module	137
7.2	Removing and installing lock cylinder	139
7.3	Removing and installing ignition key withdrawal lock solenoid N376	142
7.4	Removing and installing ignition/starter switch	142
7.5	Removing and installing steering column switch module	144
7.6	Removing and installing steering column electronics control unit J527	149
7.7	Removing and installing steering column combination switch	155
7.8	Removing and installing immobiliser reader coil D2	157
7.9	Removing and installing base for steering column combination switch	158
7.10	Removing and installing steering lock housing	158
<b>8</b>	<b>Automatic headlight range control</b>	<b>160</b>
8.1	Assembly overview - automatic headlight range control	160
8.2	Removing and installing cornering light and headlight range control unit J745	161
<b>9</b>	<b>Towing bracket</b>	<b>164</b>
9.1	Assembly overview - towing bracket socket	164
9.2	Trailer socket U10	164
9.3	Removing and installing trailer detector control unit J345	164
<b>96</b>	<b>Lights, bulbs, switches - interior</b>	<b>166</b>
<b>1</b>	<b>Lights</b>	<b>166</b>
1.1	Overview of fitting locations – lights in dash panel	166
1.2	Overview of fitting locations – lights in front doors	167
1.3	Overview of fitting locations – lights in rear doors	168
1.4	Overview of fitting locations - lights in centre console	169
1.5	Overview of fitting locations – lights in luggage compartment	170
1.6	Overview of fitting locations – lights in roof trim	171
1.7	Removing and installing glove compartment light W6	173
1.8	Removing and installing front footwell light K268/K269	174
1.9	Removing and installing Central locking SAFELOCK function warning lamp K133	176
1.10	Removing and installing reflectors in door	177
1.11	Removing and installing interior door handle illumination bulb L146/L147/L133/L134	177
1.12	Removing and installing luggage compartment light W3	178
1.13	Removing and installing electric torch R280	179
1.14	Removing and installing surround lighting 1 in rear lid W61	180
1.15	Removing and installing illuminated vanity mirror W20/W14	181
1.16	Removing and installing bulb for front interior light W1	182
1.17	Removing and installing bulb for rear interior light W43	184
<b>2</b>	<b>Controls</b>	<b>186</b>
2.1	Overview of fitting locations – controls in dash panel	186
2.2	Overview of fitting locations – controls in front doors	187
2.3	Overview of fitting locations – controls in rear doors	188
2.4	Overview of fitting locations - controls in centre console	189
2.5	Overview of fitting locations – controls in luggage compartment	190
2.6	Overview of fitting locations – controls in roof trim	191
2.7	Removing and installing rotary light switch EX1	194



2.8	Removing and installing switch for head-up display E736	194
2.9	Removing and installing switch module 1 in centre console EX23	195
2.10	Removing and installing switch module 2 in centre console EX30	196
2.11	Removing and installing operating unit for driving mode selection E881	198
2.12	Removing and installing hazard warning light switch EX3	199
2.13	Removing and installing glove compartment light switch E26	200
2.14	Removing and installing exterior mirror adjuster EX11	201
2.15	Removing and installing operating unit for window regulator in driver door E512	202
2.16	Removing and installing front passenger side window regulator button E716	203
2.17	Removing and installing driver side interior locking button for central locking system E308	203
2.18	Removing and installing rear lid remote release button E233	204
2.19	Removing and installing rear window regulator button E711/E713	205
2.20	Removing and installing electromechanical parking brake button E538/auto-hold button E540	205
2.21	Removing and installing starter button E378	206
2.22	Removing and installing rear lid warning buzzer H32	206
2.23	Removing and installing rear lid closure button E574	207
2.24	Removing and installing electric hinged tow coupling attachment button E474	208
2.25	Removing and installing sunroof button E325	209
2.26	Removing and installing front interior light/reading light	210
2.27	Removing and installing rear interior light/reading light	211
<b>3</b>	<b>Anti-theft alarm</b>	<b>215</b>
3.1	Assembly overview – interior monitor	215
3.2	Removing and installing alarm horn H12	215
3.3	Removing and installing anti-theft alarm sensor G578	216
<b>4</b>	<b>Cigarette lighter, socket</b>	<b>219</b>
4.1	Assembly overview - DC/AC converter with socket, 12 V-230 V	219
4.2	Removing and installing cigarette lighter U1	220
4.3	Removing and installing socket illumination bulb L42	220
4.4	Removing and installing rear cigarette lighter illumination bulb L32	220
4.5	Removing and installing electric socket U	220
4.6	Removing and installing DC/AC converter with socket, 12 V-230 V U13	220
<b>97 - Wiring</b>		<b>222</b>
<b>1</b>	<b>Relay carriers, fuse holders, electronics boxes</b>	<b>222</b>
1.1	Overview of fitting locations - relay carriers, fuse holders, electronics boxes	222
1.2	Removing and installing electronics box	226
1.3	Removing and installing relay and fuse holder in electronics box	227
1.4	Removing and installing relay and fuse carrier behind dash panel	230
1.5	Removing and installing main fuse box, battery in luggage compartment	232
<b>2</b>	<b>Control units</b>	<b>234</b>
2.1	Overview of fitting locations - control units	234
2.2	Assembly overview – onboard supply control unit	236
2.3	Assembly overview - data bus diagnostic interface	238
2.4	Removing and installing onboard supply control unit J519	240
2.5	Removing and installing data bus diagnostic interface J533	243
2.6	Removing and installing bracket for onboard supply control unit J519	245
2.7	Removing and installing rear lid control unit J605	247
<b>3</b>	<b>Connectors</b>	<b>249</b>
3.1	Repairing electrical wiring harnesses and plug-in connections	249
<b>4</b>	<b>Releasing and dismantling connector housings</b>	<b>250</b>
<b>5</b>	<b>Repairing aerial wires</b>	<b>251</b>
<b>6</b>	<b>Fibre optic cables</b>	<b>252</b>
<b>7</b>	<b>Vehicle diagnosis, testing and information systems</b>	<b>253</b>