



Contents

00 - Technical data	1
1 Safety information and repair notes	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Technical data	2
2.1 Panel gaps	2
3 Electrical components	6
3.1 Access to diagnoses	6
50 - Body - front	8
1 Safety information and repair notes	8
1.1 Safety information	8
1.2 Repair instructions	8
2 Lock carrier	9
2.1 Assembly overview – lock carrier	9
2.2 Setting service position and returning to normal position	11
2.3 Removing and installing lock carrier	12
2.4 Removing and installing lock carrier brace	14
3 Wings	16
3.1 Assembly overview – wing	16
3.2 Removing and installing wing	17
3.3 Removing and installing end plate	19
3.4 Removing and installing wing bracket	20
3.5 Removing and installing wing bracket	20
3.6 Removing and installing bracket for deformation element	21
3.7 Removing and installing wing bracket at A-pillar	22
4 Bulkhead	24
4.1 Assembly overview – bulkhead	24
4.2 Assembly overview – plenum chamber cover	24
4.3 Removing and installing bulkhead	25
4.4 Removing and installing plenum chamber cover for longitudinal member	26
4.5 Removing and installing plenum chamber cover	28
55 - Bonnet, rear lid	31
1 Safety information and repair notes	31
1.1 Safety information	31
1.2 Repair instructions	31
2 Bonnet	32
2.1 Assembly overview – bonnet	32
2.2 Assembly overview – Bowden cable	34
2.3 Removing and installing bonnet	36
2.4 Adjusting bonnet	38
2.5 Adjusting hinges	38
2.6 Setting adjusting buffers	39
2.7 Removing and installing bonnet lock	40
2.8 Removing and installing Bowden cable	41
2.9 Removing and installing bonnet lock operating lever	42
2.10 Removing and installing operating lever for arrester	43
2.11 Removing and installing Bowden cable for bonnet lock release lever	44
2.12 Removing and installing coupling unit for Bowden cable	46
2.13 Removing and installing striker	47
2.14 Removing and installing hinge	48



2.15	Removing and installing insulation	50
2.16	Removing and installing gas strut	50
2.17	Removing and installing mounting bracket for operating lever for arrester	51
2.18	Adjusting striker pin	52
2.19	Removing and installing striker pin	53
2.20	Preparing gas strut for disposal	54
3	Rear lid (no electric operation)	55
3.1	Assembly overview – rear lid	55
3.2	Removing and installing rear lid	57
3.3	Adjusting rear lid	59
3.4	Adjusting striker pin	61
3.5	Removing and installing rear lid handle	62
3.6	Removing and installing hinge	64
3.7	Removing and installing adjusting buffer at bottom	65
3.8	Adjust adjustment buffer at bottom	65
3.9	Adjusting adjusting buffer at side	66
3.10	Removing and installing adjusting buffer at side	66
3.11	Removing and installing stop for adjusting buffer	67
3.12	Removing and installing striker pin	68
3.13	Removing and installing rear lid seal	69
3.14	Removing and installing gas strut	70
3.15	Removing and installing rear lid control unit [J605]	71
3.16	Removing and installing rear lid lock unit [VX25]	72
3.17	Removing and installing ball stud	73
3.18	Removing and installing stop for adjusting buffer	74
4	Electrically operated rear lid	76
4.1	Assembly overview – rear lid	76
4.2	Assembly overview - rear lid power opening	78
4.3	Removing and installing rear lid	80
4.4	Adjusting rear lid	81
4.5	Adjusting striker pin	83
4.6	Removing and installing rear lid handle	84
4.7	Removing and installing power latching for rear lid [VX16]	86
4.8	Removing and installing Bowden cable for power latching system	87
4.9	Removing and installing hinge	89
4.10	Removing and installing adjusting buffer at bottom	91
4.11	Adjust adjustment buffer at bottom	91
4.12	Adjusting adjusting buffer at side	92
4.13	Removing and installing adjusting buffer at side	92
4.14	Removing and installing stop for adjusting buffer	93
4.15	Removing and installing striker pin	93
4.16	Removing and installing rear lid seal	94
4.17	Removing and installing gas strut	95
4.18	Removing and installing rear lid control unit [J605]	96
4.19	Removing and installing rear lid power opening senders [G750]/[G760]	97
4.20	Removing and installing rear lid lock unit [VX25]	98
4.21	Removing and installing ball stud	100
4.22	Removing and installing drive unit for rear lid	100
4.23	Removing and installing rear lid power opening control unit [J938]	102
4.24	Removing and installing holder for rear lid power opening control unit [J938]	102
4.25	Removing and installing stop for adjusting buffer	103
5	High-voltage charging flap unit	105
5.1	Assembly overview - high-voltage charging flap unit	105
5.2	Removing and installing high-voltage charging flap unit	105
5.3	Removing and installing charging socket flap	107



6	Tank flap unit	109
6.1	Assembly overview – tank flap unit	109
6.2	Removing and installing tank flap unit	109
6.3	Removing and installing fuel tank flap	111
57	Front doors, door components, central locking	112
1	Safety information and repair notes	112
1.1	Safety information	112
1.2	Repair instructions	112
2	Door	113
2.1	Assembly overview – door	113
2.2	Assembly overview - door seals	115
2.3	Removing and installing door	116
2.4	Adjusting door, left-hand drive vehicles	119
2.5	Adjusting door, right-hand drive vehicles	121
2.6	Removing and installing door hinge, left-hand drive vehicles	123
2.7	Removing and installing door hinge, right-hand drive vehicles	125
2.8	Removing and installing door arrester	127
2.9	Adjusting striker pin	128
2.10	Removing and installing inner door seal	129
2.11	Removing and installing outer door seal	131
3	Door components	135
3.1	Assembly overview - door components	135
3.2	Assembly overview – window regulator	136
3.3	Assembly overview – exterior door handle [EX6]/[EX7]	136
3.4	Assembly overview – lock unit [VX21]/[VX22]	137
3.5	Removing and installing window guide	139
3.6	Removing and installing exterior door handle [EX6]/[EX7]	141
3.7	Dismantling and assembling exterior door handle [EX6]/[EX7]	142
3.8	Removing and installing lock cylinder	143
3.9	Removing and installing mounting bracket	144
3.10	Removing and installing lock unit [VX21]/[VX22]	145
3.11	Removing and installing striker pin	146
3.12	Removing and installing operating cable for exterior door handle	147
3.13	Removing and installing operating cable for interior door handle	147
3.14	Removing and installing window regulator	149
3.15	Removing and installing window regulator motor	150
3.16	Removing and installing outer window slot seal	151
3.17	Removing and installing window slot inner seal	152
4	Central locking	154
4.1	Overview of fitting locations - central locking system	154
4.2	Removing and installing driver door control unit J386 and front passenger door control unit J387	157
4.3	Removing and installing ignition key battery	158
58	Rear doors, door components	159
1	Safety information and repair notes	159
1.1	Safety information	159
1.2	Repair instructions	159
2	Door	160
2.1	Assembly overview – door	160
2.2	Assembly overview - door seals	162
2.3	Removing and installing door	163
2.4	Adjusting door	166
2.5	Adjusting striker pin	168



2.6	Removing and installing inner door seal	168
2.7	Removing and installing door hinge	170
2.8	Removing and installing door arrester	171
2.9	Removing and installing outer door seal	172
3	Door components	176
3.1	Assembly overview - door components	176
3.2	Assembly overview – window regulator	176
3.3	Assembly overview – rear exterior door handle [EX8]/[EX9] and rear door lock unit [VX83]/[VX84]	177
3.4	Removing and installing window guide	178
3.5	Dismantling and assembling rear exterior door handle [EX8]/[EX9]	180
3.6	Removing and installing rear exterior door handle [EX8]/[EX9]	181
3.7	Removing and installing mounting bracket	182
3.8	Removing and installing rear door lock unit [VX83]/[VX84]	184
3.9	Removing and installing striker pin	185
3.10	Removing and installing operating cable for exterior door handle	185
3.11	Removing and installing operating cable for interior door handle	187
3.12	Removing and installing window regulator	188
3.13	Removing and installing rear window regulator motor [V471]/[V472]	190
3.14	Removing and installing window slot inner seal	191
3.15	Removing and installing outer window slot seal	193
60	- Sunroof	195
1	Safety information and repair notes	195
1.1	Safety information	195
1.2	Repair instructions	195
2	Sliding/glass roof	196
2.1	Assembly overview - sliding sunroof	196
2.2	Assembly overview - sun blind	198
2.3	Removing and installing wind deflector	199
2.4	Removing and installing sliding sunroof frame	200
2.5	Removing and installing front glass panel	204
2.6	Removing and installing rear glass panel	205
2.7	Adjusting glass panel	208
2.8	Removing and installing seal for roof aperture	209
2.9	Removing and installing seal for glass panel (front)	211
2.10	Removing and installing seal for glass panel (rear)	211
2.11	Removing and installing roof system control unit J1355	212
2.12	Removing and installing sliding sunroof motor [V1]	213
2.13	Removing and installing sun blind motor [VX455]	214
2.14	Removing and installing sun blind	215
2.15	Adapting roof system adjustment control unit J1355	217
2.16	Manual actuation	217
3	Water drain hoses	219
3.1	Assembly overview - water drain hoses	219
3.2	Removing and installing water drain hoses	220
3.3	Cleaning water drain hoses	223
63	- Bumpers	225
1	Safety information and repair notes	225
1.1	Safety information	225
1.2	Repair instructions	225
2	Bumper, front	226
2.1	Assembly overview – bumper cover	226
2.2	Assembly overview – bumper carrier	226



2.3	Assembly overview - attachments	227
2.4	Removing and installing bumper cover	229
2.5	Repairing bumper cover	231
2.6	Removing and installing bumper carrier	232
2.7	Removing and installing bumper cover reinforcement	234
2.8	Removing and installing centre air intake grille	235
2.9	Removing and installing spoiler strip	236
2.10	Removing and installing closure section of bumper cover	237
2.11	Removing and installing towing eye cap, one-piece design	237
2.12	Removing and installing bracket for park assist steering sender	238
3	Front bumper, R-Line	240
3.1	Assembly overview – bumper cover	240
3.2	Assembly overview – bumper carrier	240
3.3	Assembly overview - attachments	241
3.4	Removing and installing bumper cover	243
3.5	Repairing bumper cover	245
3.6	Removing and installing bumper carrier	246
3.7	Removing and installing bumper cover reinforcement	248
3.8	Removing and installing centre air intake grille	249
3.9	Removing and installing spoiler strip	250
3.10	Removing and installing closure section of bumper cover	251
3.11	Removing and installing trim strip	251
3.12	Removing and installing trim strip for side air intake grille	252
3.13	Removing and installing towing eye cap, one-piece design	254
3.14	Removing and installing bracket for parking aid sender	254
4	Bumper, rear	256
4.1	Assembly overview – bumper cover	256
4.2	Assembly overview – bumper carrier	256
4.3	Assembly overview – bumper carrier, vehicles with high-voltage system	257
4.4	Assembly overview - attachments	258
4.5	Assembly overview - cross panel for vehicles with towing bracket	261
4.6	Assembly overview – cross panel for vehicles with towing bracket, vehicles with high-voltage system	262
4.7	Removing and installing bumper cover	262
4.8	Repairing bumper cover	265
4.9	Removing and installing bumper carrier	265
4.10	Removing and installing rear bumper cover spoiler	266
4.11	Removing and installing bumper cover trim	266
4.12	Removing and installing reflector for rear bumper	267
4.13	Removing and installing forced ventilation for passenger compartment	270
4.14	Checking forced ventilation vent for passenger compartment	270
4.15	Removing and installing bracket for parking aid sender	271
4.16	Removing and installing bracket for park assist steering sender	271
5	Rear bumper, R-Line	273
5.1	Assembly overview – bumper cover	273
5.2	Assembly overview - attachments	273
5.3	Assembly overview – bumper carrier	275
5.4	Assembly overview – bumper carrier, vehicles with high-voltage system	276
5.5	Assembly overview - cross panel for vehicles with towing bracket	277
5.6	Assembly overview – cross panel for vehicles with towing bracket, vehicles with high-voltage system	278
5.7	Removing and installing bumper cover	279
5.8	Repairing bumper cover	281
5.9	Removing and installing bumper carrier	282
5.10	Removing and installing forced ventilation for passenger compartment	283
5.11	Checking forced ventilation vent for passenger compartment	283



5.12	Removing and installing side and centre reflector for rear bumper	284
5.13	Removing and installing rear bumper cover spoiler	285
5.14	Removing and installing bracket for park assist steering sender	286
5.15	Removing and installing centre bumper trim strip	287
5.16	Removing and installing side bumper trim strip	288
64	- Glazing	290
1	Safety information and repair notes	290
1.1	Safety information	290
1.2	Repair instructions	290
2	Windscreen	291
2.1	Assembly overview – windscreen	291
2.2	Removing and installing windscreen	291
3	Rear windscreen	300
3.1	Assembly overview – rear window	300
3.2	Removing and installing rear window	301
4	Side windows	305
4.1	Assembly overview - rear side window	305
4.2	Removing and installing rear side window	305
5	Door windows	309
5.1	Assembly overview - front door window	309
5.2	Assembly overview - rear door window	309
5.3	Assembly overview – fixed rear door window	310
5.4	Removing and installing front door window	311
5.5	Removing and installing rear door window	314
5.6	Removing and installing fixed rear door window	317
66	- Exterior equipment	319
1	Safety information and repair notes	319
1.1	Safety information	319
1.2	Repair instructions	319
2	Radiator grille and front trim	320
2.1	Assembly overview – radiator grille	320
2.2	Removing and installing badge mounting	321
2.3	Removing and installing radiator grille	322
2.4	Removing and installing front trim	323
3	Spoiler	325
3.1	Assembly overview - spoilers	325
3.2	Removing and installing side spoiler	327
3.3	Removing and installing spoilers	328
4	Mouldings, trims, extensions	331
4.1	Assembly overview - covers	331
4.2	Assembly overview - water deflector strip	331
4.3	Assembly overview - wheel arch covers	332
4.4	Assembly overview - sill panel trim	333
4.5	Removing and installing water deflector strip	334
4.6	Removing and installing retaining strip	336
4.7	Removing and installing trim panel for A-pillar	337
4.8	Removing and installing B-pillar trim on front door	338
4.9	Removing and installing B-pillar trim on rear door	339
4.10	Removing and installing front wheel arch cover	340
4.11	Removing and installing cover for wing	342
4.12	Removing and installing rear wheel arch cover	343
4.13	Removing and installing trim strip, window guide of front door	345
4.14	Removing and installing trim strip, window guide of rear door	346



4.15	Removing and installing step moulding	347
4.16	Removing and installing trim cover for front door	349
4.17	Removing and installing trim cover for rear door	351
5	Noise insulation	354
5.1	Assembly overview - noise insulation	354
5.2	Removing and installing noise insulation	355
6	Long noise insulation	356
6.1	Assembly overview - noise insulation	356
6.2	Removing and installing noise insulation	356
7	Underbody cladding	358
7.1	Assembly overview - underbody struts	358
7.2	Assembly overview – skid plate	358
7.3	Assembly overview – underbody cladding	359
7.4	Removing and installing side underbody cladding	361
7.5	Removing and installing centre underbody cladding, long	362
7.6	Removing and installing underbody cladding, rear centre	363
7.7	Removing and installing skid plate	364
7.8	Removing and installing front tunnel cross-piece	364
7.9	Removing and installing rear tunnel cross-piece	365
8	Underbody cladding, vehicles with all-wheel drive	367
8.1	Assembly overview - underbody struts	367
8.2	Assembly overview – skid plate	367
8.3	Assembly overview – underbody cladding, all-wheel drive	368
8.4	Removing and installing side underbody cladding	370
8.5	Removing and installing skid plate	371
8.6	Removing and installing front tunnel cross-piece	372
8.7	Removing and installing rear tunnel cross-piece	373
8.8	Removing and installing protective bar for rear axle	373
8.9	Removing and installing centre underbody cladding, short	374
8.10	Removing and installing underbody cladding, rear centre	374
9	Underbody cladding, vehicles with high-voltage system	376
9.1	Assembly overview - underbody struts	376
9.2	Assembly overview – skid plate	376
9.3	Assembly overview – underbody cladding, plug-in hybrid vehicles	377
9.4	Removing and installing side underbody cladding	379
9.5	Removing and installing skid plate	380
9.6	Removing and installing centre underbody cladding, long	381
9.7	Removing and installing front tunnel cross-piece	381
9.8	Removing and installing rear tunnel cross-piece	382
9.9	Removing and installing protective bar for rear axle	383
10	Roof moulding and roof railing	384
10.1	Assembly overview - roof rail	384
10.2	Removing and installing roof rail	385
11	Exterior mirror	387
11.1	Assembly overview – exterior mirror	387
11.2	Removing and installing exterior mirror [VX4]/[VX5]	389
11.3	Removing and installing upper mirror cover	390
11.4	Removing and installing lower mirror cover	391
11.5	Removing and installing mirror glass	392
11.6	Removing and installing mirror trim	394
11.7	Removing and installing mirror adjustment unit	395
12	Wheel housing liner	397
12.1	Assembly overview – front wheel housing liner	397
12.2	Assembly overview – rear wheel housing liner	397



12.3	Removing and installing front wheel housing liner	398
12.4	Removing and installing rear wheel housing liner	399
12.5	Removing and installing side member trim	401
13	Lettering and emblems	402
13.1	Assembly overview – lettering and badges	402
13.2	Dimensions – lettering and badges on rear	404
13.3	Dimensions – lettering and badges on sides	406
13.4	General notes on renewing lettering and badges	408
13.5	Removing and installing front badge	409
13.6	Removing and installing rear badge	409
14	Towing bracket	412
14.1	Assembly overview – towing bracket	412
14.2	Removing and installing towing bracket [VX15]	412
14.3	Removing and installing trailer detector control unit [J345]	413
14.4	Removing and installing hinged tow attachment ball head motor [V317]	415
14.5	Removing and installing button for electric swivelling towing bracket [E474]	415
15	Heat shields	417
15.1	Assembly overview - heat shields	417
15.2	Removing and installing front heat shield	417
15.3	Removing and installing rear centre heat shield	418
16	Heat shields, vehicles with all-wheel drive	420
16.1	Assembly overview - heat shields	420
16.2	Removing and installing front heat shield	421
16.3	Removing and installing centre heat shield	422
17	Heat shields, vehicles with high-voltage system	424
17.1	Assembly overview - heat shields	424
17.2	Removing and installing front heat shield	424
17.3	Removing and installing rear centre heat shield	425