



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Tools</b>	<b>2</b>
2.1 Tools	2
<b>3 Vehicle identification data</b>	<b>3</b>
3.1 Vehicle identification data	3
<b>4 Safety information</b>	<b>6</b>
4.1 Safety information – body repairs	6
<b>5 Body parts and materials</b>	<b>7</b>
5.1 Moulded foam inserts	7
5.2 Galvanized body parts, high-strength/extra-high-strength body panels	7
<b>6 Technical data</b>	<b>10</b>
6.1 Body dimensions	10
<b>7 Alignment jig</b>	<b>20</b>
7.1 Procedure with structural body damage to vehicles	20
7.2 Straightening jig	20
7.3 Portal gauge	20
<b>50 - Body - front</b>	<b>21</b>
<b>1 Safety information and repair notes</b>	<b>21</b>
1.1 Safety information	21
1.2 Repair instructions	21
<b>2 Overview of fitting locations</b>	<b>22</b>
2.1 Overview of fitting locations - body, front	22
<b>3 Right bracket</b>	<b>25</b>
3.1 Assembly overview – right wing door	25
3.2 Renewing right bracket	25
<b>4 Mounting bracket for subframe</b>	<b>29</b>
4.1 Assembly overview - mounting bracket for subframe	29
4.2 Renewing mounting bracket for subframe	29
<b>5 Front longitudinal member end plate</b>	<b>35</b>
5.1 Assembly overview – front longitudinal member end plate	35
5.2 Renewing front longitudinal member end plate	35
<b>6 Longitudinal member</b>	<b>38</b>
6.1 Assembly overview – front left longitudinal member (part section)	38
6.2 Assembly overview - front left longitudinal member (part section, second separating cut)	38
6.3 Assembly overview – front right longitudinal member (part section)	39
6.4 Assembly overview - front right longitudinal member (part section, second separating cut)	40
6.5 Assembly overview – upper longitudinal member	41
6.6 Assembly overview - upper inner longitudinal member	42
6.7 Renewing front left longitudinal member (part section)	43
6.8 Renewing front left longitudinal member (part section, second separating cut)	47
6.9 Renewing front right longitudinal member (part section)	52
6.10 Renewing front right longitudinal member (part section, second separating cut)	56
6.11 Renewing upper longitudinal member	60
6.12 Renewing upper inner longitudinal member	62
<b>7 Battery tray</b>	<b>67</b>
7.1 Assembly overview - battery tray	67
7.2 Renewing battery tray	67



<b>8</b>	<b>Front wheel housing</b> .....	<b>70</b>
8.1	Assembly overview - front wheel housing .....	70
8.2	Assembly overview - front wheel housing (part section) .....	70
8.3	Renewing front wheel housing .....	71
8.4	Renewing front wheel housing (part section) .....	75
<b>51 - Body - centre</b> .....		<b>81</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>81</b>
1.1	Safety information .....	81
1.2	Repair instructions .....	81
<b>2</b>	<b>Overview of fitting locations</b> .....	<b>82</b>
2.1	Overview of fitting locations - body, centre .....	82
<b>3</b>	<b>Roof, vehicles without glass panel</b> .....	<b>83</b>
3.1	Assembly overview – vehicle without glass panel .....	83
3.2	Assembly overview – roof side member .....	83
3.3	Renewing roof – vehicle without glass panel .....	84
3.4	Renewing roof side member .....	91
<b>4</b>	<b>Roof, vehicles with glass panel</b> .....	<b>95</b>
4.1	Assembly overview – vehicle with glass panel .....	95
4.2	Assembly overview – roof side member .....	95
4.3	Renewing roof - vehicle with glass panel .....	96
4.4	Renewing roof side member .....	103
<b>5</b>	<b>A-pillar</b> .....	<b>107</b>
5.1	Assembly overview – A-pillar .....	107
5.2	Assembly overview – A-pillar reinforcement .....	107
5.3	Renewing A-pillar .....	108
5.4	Renewing A-pillar reinforcement (part section) .....	111
<b>6</b>	<b>B-pillar</b> .....	<b>116</b>
6.1	Assembly overview – B-pillar .....	116
6.2	Assembly overview – B-pillar reinforcement .....	116
6.3	Renewing B-pillar .....	117
6.4	Renewing B-pillar reinforcement .....	120
<b>7</b>	<b>Side member</b> .....	<b>125</b>
7.1	Assembly overview – outer side member .....	125
7.2	Assembly overview – side member reinforcement .....	125
7.3	Renewing outer side member .....	126
7.4	Renewing side member reinforcement .....	129
<b>53 - Body - rear</b> .....		<b>134</b>
<b>1</b>	<b>Safety information and repair notes</b> .....	<b>134</b>
1.1	Safety information .....	134
1.2	Repair instructions .....	134
<b>2</b>	<b>Overview of fitting locations</b> .....	<b>135</b>
2.1	Overview of fitting locations - body, rear .....	135
<b>3</b>	<b>Rear cross member</b> .....	<b>136</b>
3.1	Assembly overview – rear cross member .....	136
3.2	Renewing rear cross member .....	136
<b>4</b>	<b>Rear cross panel</b> .....	<b>140</b>
4.1	Assembly overview – rear cross panel .....	140
4.2	Renewing rear cross panel .....	140
<b>5</b>	<b>Luggage compartment floor</b> .....	<b>144</b>
5.1	Assembly overview – luggage compartment floor .....	144
5.2	Renewing luggage compartment floor .....	144
<b>6</b>	<b>Rear longitudinal member</b> .....	<b>148</b>



---

6.1	Assembly overview – rear longitudinal member (part section) .....	148
6.2	Assembly overview – rear longitudinal member end plate .....	148
6.3	Renewing rear longitudinal member (part section) .....	149
6.4	Renewing rear longitudinal member end plate .....	152
<b>7</b>	<b>Side panel</b> .....	<b>156</b>
7.1	Assembly overview – side panel .....	156
7.2	Approved separating cuts on side panel .....	157
7.3	Renewing side panel (part section) .....	157
<b>8</b>	<b>Rear wheel housing</b> .....	<b>162</b>
8.1	Assembly overview - rear wheel housing .....	162
8.2	Renewing rear wheel housing .....	162