



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information</b>	<b>1</b>
1.1 Safety precautions when working on the fuel supply system	1
1.2 Safety measures when working on vehicles with start/stop system	1
1.3 Safety precautions when using testers and measuring instruments during a road test	2
1.4 Safety precautions when working on the cooling system	2
1.5 Safety precautions when working on the ignition system	2
<b>2 Identification</b>	<b>3</b>
2.1 Engine number/engine data	3
<b>3 Repair notes</b>	<b>6</b>
3.1 Rules for cleanliness	6
3.2 Foreign material in engine	6
3.3 Contact corrosion	6
3.4 Routing and attachment of lines	6
3.5 Fitting radiator and condensers	7
<b>10 - Removing and installing engine</b>	<b>8</b>
<b>1 Removing and installing engine</b>	<b>8</b>
1.1 Removing motor	8
1.2 Separating engine and gearbox	20
1.3 Securing engine on engine and gearbox support	21
1.4 Installing motor	23
<b>2 Assembly mountings</b>	<b>28</b>
2.1 Assembly overview – assembly mountings	28
2.2 Removing and installing engine mounting	32
2.3 Removing and installing gearbox mounting	33
2.4 Removing and installing pendulum support	34
2.5 Supporting engine in installation position	35
2.6 Adjusting assembly mountings	47
2.7 Checking adjustment of assembly mountings	49
<b>13 - Crankshaft group</b>	<b>50</b>
<b>1 Cylinder block, pulley end</b>	<b>50</b>
1.1 Assembly overview - poly V-belt drive	50
1.2 Assembly overview – sealing flange, pulley end	54
1.3 Removing and installing poly-V belt	56
1.4 Removing and installing poly V-belt tensioner	59
1.5 Removing and installing vibration damper	60
1.6 Removing and installing engine support	62
1.7 Renewing crankshaft oil seal (pulley end)	64
1.8 Removing and installing sealing flange, pulley end	67
<b>2 Cylinder block, gearbox side</b>	<b>70</b>
2.1 Assembly overview – cylinder block, gearbox side	70
2.2 Removing and installing flywheel	71
2.3 Removing and installing sealing flange on gearbox side	73
<b>3 Crankshaft</b>	<b>81</b>
3.1 Renewing needle bearing in crankshaft	81
3.2 Crankshaft dimensions	83
3.3 Measuring axial clearance of crankshaft	83
<b>4 Pistons and conrods</b>	<b>85</b>
4.1 Assembly overview – pistons and conrods	85
4.2 Removing and installing pistons	88



4.3	Removing and installing oil spray jets	89
4.4	Checking piston and cylinder bore	90
4.5	Checking radial clearance of conrods	91
4.6	Setting piston to TDC position	92
<b>15</b>	<b>Cylinder head, valve gear</b>	<b>96</b>
<b>1</b>	<b>Cylinder head</b>	<b>96</b>
1.1	Assembly overview – cylinder head	96
1.2	Assembly overview – camshaft housing	98
1.3	Removing and installing cylinder head	105
1.4	Removing and installing camshaft housing	110
1.5	Checking compression	115
<b>2</b>	<b>Toothed belt drive</b>	<b>118</b>
2.1	Assembly overview – toothed belt cover	118
2.2	Assembly overview – toothed belt	119
2.3	Removing and installing toothed belt guard	123
2.4	Pre-assembling and fitting valve timing tool	124
2.5	Removing and installing toothed belt	133
2.6	Checking valve timing	142
2.7	Adjusting valve timing	144
2.8	Removing toothed belt from camshaft	163
<b>3</b>	<b>Valve gear</b>	<b>172</b>
3.1	Assembly overview – valve gear	172
3.2	Measuring axial play of camshaft	174
3.3	Removing and installing camshaft oil seal	175
3.4	Removing and installing camshaft adjuster	184
3.5	Removing and installing camshaft control valve 1 N205	197
3.6	Removing and installing exhaust camshaft control valve 1 N318	198
3.7	Removing and installing valve stem oil seals	199
3.8	Removing and installing toothed belt pulley	209
3.9	Removing and installing cam actuators	212
<b>4</b>	<b>Inlet and exhaust valves</b>	<b>214</b>
4.1	Checking valve guides	214
4.2	Checking valves	214
4.3	Valve dimensions	215
<b>17</b>	<b>Lubrication</b>	<b>216</b>
<b>1</b>	<b>Sump, oil pump</b>	<b>216</b>
1.1	Assembly overview – sump/oil pump	216
1.2	Engine oil	220
1.3	Removing and installing lower part of sump	221
1.4	Removing and installing upper part of sump	226
1.5	Removing and installing oil pump	230
1.6	Removing and installing oil level and oil temperature sender G266	231
<b>2</b>	<b>Engine oil cooler</b>	<b>233</b>
2.1	Assembly overview - engine oil cooler	233
2.2	Removing and installing engine oil cooler	233
<b>3</b>	<b>Crankcase breather</b>	<b>235</b>
3.1	Assembly overview - crankcase breather system	235
3.2	Removing and installing oil separator	236
<b>4</b>	<b>Oil filter, oil pressure switch</b>	<b>239</b>
4.1	Assembly overview - oil filter/oil pressure switches	239
4.2	Removing and installing oil pressure switch F1	241
4.3	Removing and installing oil pressure switch for reduced oil pressure F378	243
4.4	Removing and installing valve for oil pressure control N428	244



4.5	Checking oil pressure	245
<b>19</b>	<b>Cooling</b>	<b>248</b>
<b>1</b>	<b>Cooling system/coolant</b>	<b>248</b>
1.1	Connection diagram - coolant hoses	248
1.2	Checking cooling system for leaks	250
1.3	Draining and filling cooling system	254
<b>2</b>	<b>Coolant pump, regulation of cooling system</b>	<b>261</b>
2.1	Assembly overview – coolant pump/thermostat	261
2.2	Assembly overview – electric coolant pump	264
2.3	Assembly overview - engine preheater	264
2.4	Assembly overview – coolant temperature sender	265
2.5	Removing and installing electric coolant pump	266
2.6	Removing and installing coolant pump	268
2.7	Removing and installing thermostat	272
2.8	Removing and installing toothed belt pulley for coolant pump	275
2.9	Removing and installing coolant temperature sender G62	280
2.10	Removing and installing radiator outlet coolant temperature sender G83	281
2.11	Removing and installing engine preheating element Z97	282
<b>3</b>	<b>Coolant pipes</b>	<b>285</b>
3.1	Assembly overview – coolant pipes	285
3.2	Removing and installing coolant pipes	285
<b>4</b>	<b>Radiator, radiator fan</b>	<b>289</b>
4.1	Assembly overview - radiator/radiator fan	289
4.2	Assembly overview - radiator cowl and radiator fans	293
4.3	Removing and installing radiator	294
4.4	Removing and installing water radiator for charge air cooling circuit	302
4.5	Removing and installing radiator cowl with radiator fans	306
4.6	Removing and installing radiator fan	307
<b>21</b>	<b>Turbocharging/supercharging</b>	<b>309</b>
<b>1</b>	<b>Turbocharger</b>	<b>309</b>
1.1	Assembly overview – turbocharger	309
1.2	Removing and installing turbocharger	313
1.3	Removing and installing charge pressure positioner V465	318
1.4	Removing and installing connection for turbocharger	320
<b>2</b>	<b>Charge air system</b>	<b>323</b>
2.1	Assembly overview – charge air system	323
2.2	Removing and installing charge pressure sender GX26	325
2.3	Removing and installing charge air cooler	326
2.4	Checking charge air system for leaks	328
2.5	Removing and installing air intake pipe	330
<b>24</b>	<b>Mixture preparation - injection</b>	<b>333</b>
<b>1</b>	<b>Injection system</b>	<b>333</b>
1.1	Overview of fitting locations - injection system	333
<b>2</b>	<b>Injectors</b>	<b>338</b>
2.1	Assembly overview - fuel rail with injectors	338
2.2	Removing and installing fuel rail	340
2.3	Removing and installing injectors	341
2.4	Cleaning injectors	346
<b>3</b>	<b>Air filter</b>	<b>347</b>
3.1	Assembly overview – air filter housing	347
3.2	Removing and installing air filter housing	348
3.3	Removing and installing resonator for intake air	349



<b>4</b>	<b>Intake manifold</b>	<b>350</b>
4.1	Assembly overview – intake manifold	350
4.2	Removing and installing intake manifold	352
4.3	Removing and installing throttle valve module GX3	355
4.4	Cleaning throttle valve module GX3	356
<b>5</b>	<b>Senders and sensors</b>	<b>358</b>
5.1	Removing and installing intake manifold sender GX9	358
5.2	Removing and installing fuel pressure sender G247	358
5.3	Checking fuel pressure sender G247	359
5.4	Removing and installing exhaust gas pressure sensor 1 G450	363
<b>6</b>	<b>Engine/motor control unit</b>	<b>365</b>
6.1	Removing and installing motor control unit J623	365
<b>7</b>	<b>High-pressure pump</b>	<b>371</b>
7.1	Assembly overview – high-pressure pump	371
7.2	Removing and installing high-pressure pump	377
7.3	Removing and installing high-pressure pipe	378
<b>8</b>	<b>Lambda probe</b>	<b>380</b>
8.1	Assembly overview – lambda probe	380
8.2	Removing and installing lambda probe	381
<b>26</b>	<b>- Exhaust system</b>	<b>383</b>
<b>1</b>	<b>Exhaust pipes and silencers</b>	<b>383</b>
1.1	Assembly overview – silencers	383
1.2	Removing and installing silencer	394
1.3	Separating exhaust pipes from silencers	402
1.4	Aligning exhaust system free of stress	409
1.5	Checking exhaust system for leaks	411
1.6	Installation position of clamp	411
<b>2</b>	<b>Emission control</b>	<b>413</b>
2.1	Assembly overview – emission control	413
2.2	Removing and installing catalytic converter	421
2.3	Removing and installing particulate filter	426
2.4	Removing and installing exhaust flap control unit J883	427
<b>28</b>	<b>- Ignition system</b>	<b>428</b>
<b>1</b>	<b>Ignition system</b>	<b>428</b>
1.1	Assembly overview - ignition system	428
1.2	Removing and installing ignition coils with output stage	430
1.3	Removing and installing knock sensor 1 G61	432
1.4	Removing and installing Hall sender	433
1.5	Removing and installing engine speed sender G28	434