



Contents

00 - Technical data	1
1 Safety and repair instructions	1
1.1 Safety information	1
1.2 Repair instructions	1
2 Identification	2
2.1 Engine identification	2
2.2 Engine number/engine data	3
3 Electrical components	5
3.1 Access to diagnoses	5
4 Technical data	7
4.1 Test and adjustment values	7
10 - Removing and installing engine	12
1 Safety and repair instructions	12
1.1 Safety information	12
1.2 Repair instructions	12
2 Removing and installing engine	13
2.1 Removing motor	13
2.2 Separating engine and gearbox	24
2.3 Securing engine on engine and gearbox support	27
2.4 Installing engine	30
3 Assembly mountings	34
3.1 Assembly overview – assembly mountings, Tiguan, Touran, Passat	34
3.2 Assembly overview – assembly mountings, Polo, T-Roc, T-Cross, Taigo	36
3.3 Removing and installing engine mounting	38
3.4 Removing and installing gearbox mounting, Tiguan, Touran, Passat	40
3.5 Removing and installing gearbox mountings, T-Roc, T-Cross, Taigo	41
3.6 Removing and installing pendulum support	43
3.7 Supporting engine in installation position, T-Roc	44
3.8 Supporting engine in installation position, Tiguan, Touran	46
3.9 Supporting engine in installation position, T-Cross, Taigo	49
3.10 Supporting engine in installation position, Passat	50
3.11 Checking and adjusting assembly mountings	52
4 Engine cover panel	56
4.1 Removing and installing engine cover panel	56
13 - Crankshaft group	57
1 Safety and repair instructions	57
1.1 Safety information	57
1.2 Repair instructions	57
2 Cylinder block (pulley end)	58
2.1 Assembly overview – poly V-belt drive	58
2.2 Assembly overview - sealing flange (pulley end)	60
2.3 Removing and installing poly-V belt	61
2.4 Removing and installing tensioner for poly V-belt	66
2.5 Removing and installing vibration damper	67
2.6 Removing and installing engine support	70
2.7 Renewing crankshaft oil seal (pulley end)	72
2.8 Removing and installing sealing flange, pulley end	75
3 Cylinder block, gearbox end	78
3.1 Assembly overview – cylinder block, gearbox side	78
3.2 Removing and installing sealing flange (gearbox end)	80



3.3	Removing and installing flywheel	88
3.4	Removing and installing intermediate plate	91
3.5	Removing and installing intermediate plate	91
4	Crankshaft	93
4.1	Renewing needle bearing in crankshaft	93
4.2	Measuring axial clearance of crankshaft	94
5	Pistons and conrods	96
5.1	Assembly overview – pistons and conrods	96
5.2	Removing and installing pistons	97
5.3	Checking pistons and cylinder bores	99
5.4	Separating new conrod	101
5.5	Checking radial clearance of conrods	102
5.6	Removing and installing oil spray jets	102
5.7	Setting piston to TDC (top dead centre)	104
15	- Cylinder head, valve gear	109
1	Safety and repair instructions	109
1.1	Safety information	109
1.2	Repair instructions	109
2	Cylinder head	110
2.1	Assembly overview - cylinder head	110
2.2	Assembly overview – camshaft housing	111
2.3	Removing and installing cylinder head	113
2.4	Removing and installing camshaft housing	117
2.5	Checking compression	121
2.6	Checking cylinder head for distortion	122
3	Toothed belt drive	124
3.1	Assembly overview - toothed belt guard	124
3.2	Assembly overview – toothed belt	124
3.3	Removing and installing toothed belt guard	126
3.4	Removing and installing toothed belt	128
3.5	Preassembling and mounting test tool VAS 611 007	133
3.6	Checking valve timing	140
3.7	Adjusting valve timing	143
4	Valve gear	153
4.1	Assembly overview – valve gear	153
4.2	Removing and installing camshaft oil seal	153
4.3	Removing and installing camshaft adjuster	159
4.4	Removing and installing cam actuators	165
4.5	Removing and installing inlet camshaft control valve 1 N727	167
4.6	Removing and installing exhaust camshaft control valve 1 [N318]	168
4.7	Removing and installing valve stem oil seals	169
4.8	Removing and installing holder for oil seal	179
4.9	Checking control valve	182
4.10	Removing and installing oil seal for inlet camshaft control valve 1 N727	183
5	Inlet and exhaust valves	186
5.1	Checking valve guides	186
5.2	Checking valves	186
17	- Lubrication	188
1	Safety and repair instructions	188
1.1	Safety information	188
1.2	Repair instructions	188
2	Sump, oil pump	189
2.1	Assembly overview – sump/oil pump	189



2.2	Engine oil:	192
2.3	Using tester to check engine oil level	192
2.4	Removing and installing lower part of sump	193
2.5	Removing and installing upper part of sump	196
2.6	Removing and installing oil pump	199
2.7	Removing and installing oil level and oil temperature sender [G266]	201
3	Engine oil cooler	203
3.1	Assembly overview - engine oil cooler	203
3.2	Removing and installing engine oil cooler	203
4	Crankcase ventilation	205
4.1	Assembly overview - crankcase breather system	205
4.2	Removing and installing oil separator	206
5	Oil filter, oil pressure switch	210
5.1	Assembly overview - oil filter/oil pressure switches	210
5.2	Removing and installing oil pressure sender [G10]	210
5.3	Checking oil pressure and oil pressure switch	211
5.4	Removing and installing oil filter	211
5.5	Removing and installing oil pressure regulating valve [N428]	212
19 - Cooling	214
1	Safety and repair instructions	214
1.1	Safety information	214
1.2	Repair instructions	214
2	Cooling system/coolant	215
2.1	Connection diagram - coolant hoses	215
2.2	Checking cooling system for leaks	217
2.3	Checking filling quality of cooling system	219
2.4	Removing and installing coolant expansion tank	222
2.5	Draining coolant	224
2.6	Filling cooling system	225
2.7	Removing and installing cap for cooling system in cylinder block	227
3	Coolant pump, regulation of cooling system	229
3.1	Assembly overview - coolant pump/thermostat	229
3.2	Assembly overview - electric coolant pump	230
3.3	Assembly overview - coolant temperature senders	230
3.4	Removing and installing electric coolant pump	231
3.5	Removing and installing coolant pump	234
3.6	Removing and installing toothed belt pulley for coolant pump	239
3.7	Removing and installing coolant temperature sender [G62]	241
3.8	Removing and installing radiator outlet coolant temperature sender [G83]	243
3.9	Removing and installing engine outlet coolant temperature sender G82	245
3.10	Removing and installing engine temperature regulation module GX33	247
3.11	Checking coolant pump	250
4	Coolant pipes	254
4.1	Assembly overview - coolant pipes	254
4.2	Removing and installing coolant pipes	255
5	Radiator, radiator fan	260
5.1	Assembly overview – radiator	260
5.2	Assembly overview – radiator	262
5.3	Assembly overview - radiator cowl and radiator fan	264
5.4	Assembly overview - radiator blind	264
5.5	Removing and installing radiator	267
5.6	Removing and installing water radiator for charge air cooling circuit	271
5.7	Removing and installing radiator cowl	276
5.8	Removing and installing radiator fan VX57	278



5.9	Removing and installing radiator blind	279
5.10	Removing and installing radiator blind control motor [V544]	280
21	- Turbocharging/supercharging	286
1	Safety and repair instructions	286
1.1	Safety information	286
1.2	Repair instructions	286
2	Turbocharger	287
2.1	Assembly overview – turbocharger	287
2.2	Removing and installing turbocharger	290
2.3	Removing and installing charge pressure control module [GX34]	296
2.4	Removing and installing connection for turbocharger	296
3	Charge air system	299
3.1	Assembly overview - charge air system	299
3.2	Removing and installing charge air cooler	301
3.3	Removing and installing charge pressure sender [GX26]	303
3.4	Checking charge air system for leaks	304
3.5	Removing and installing air intake pipe	307
3.6	Checking charge air cooler for leaks	315
24	- Mixture preparation - injection	320
1	Safety and repair instructions	320
1.1	Safety information	320
1.2	Repair instructions	320
2	Injection system	321
2.1	Overview of fitting locations - injection system	321
3	Vacuum system	327
3.1	Assembly overview - vacuum system	327
3.2	Removing and installing vacuum line	327
4	Injectors	330
4.1	Assembly overview - fuel rail with injectors	330
4.2	Removing and installing fuel rail	332
4.3	Removing and installing injectors	333
4.4	Renewing seals on injectors	336
4.5	Cleaning injectors	338
5	Air filter	340
5.1	Assembly overview - air filter housing	340
5.2	Removing and installing air filter housing	342
5.3	Removing and installing air guide on lock carrier, Tiguan, Passat	344
5.4	Removing and installing air duct on lock carrier, T-Roc	345
5.5	Removing and installing air duct on lock carrier, T-Cross	347
5.6	Removing and installing air duct on lock carrier, Taigo	347
6	Intake manifold	349
6.1	Assembly overview – intake manifold	349
6.2	Removing and installing intake manifold	351
6.3	Removing and installing throttle valve module GX3	357
6.4	Cleaning throttle valve module [GX3]	358
7	Senders and sensors	360
7.1	Removing and installing fuel pressure sender [G247]	360
7.2	Checking fuel pressure sender [G247]	361
7.3	Removing and installing intake manifold sender [GX9]	362
7.4	Removing and installing exhaust gas pressure sensor 1 [G450]	364
7.5	Removing and installing air mass measurement module [GX35]	366
8	Engine/motor control unit	368



8.1	Assembly overview - engine control unit	368
8.2	Removing and installing motor control unit [J623]	368
9	High-pressure pump	373
9.1	Assembly overview - high-pressure pump	373
9.2	Removing and installing high-pressure pump	374
9.3	Removing and installing high-pressure pipe	376
10	Lambda probe	378
10.1	Assembly overview - Lambda probe	378
10.2	Removing and installing lambda probe	378
26	- Exhaust system	382
1	Safety and repair instructions	382
1.1	Safety information	382
1.2	Repair instructions	382
2	Exhaust pipes/silencers, Passat	383
2.1	Assembly overview – silencer	383
2.2	Removing and installing front exhaust pipe	385
2.3	Separating exhaust pipes from silencers	387
2.4	Removing and installing front silencers	388
2.5	Removing and installing centre silencer	390
2.6	Removing and installing rear silencer	391
2.7	Removing and installing front exhaust pipe bracket	393
2.8	Aligning exhaust system free of stress	395
2.9	Checking exhaust system for leaks	396
2.10	Installation position of clamp	396
3	Exhaust pipes/silencers, Tiguan	398
3.1	Assembly overview – silencer	398
3.2	Removing and installing front exhaust pipe	400
3.3	Separating exhaust pipes from silencers	402
3.4	Removing and installing front silencers	403
3.5	Removing and installing rear silencer	405
3.6	Removing and installing front exhaust pipe bracket	407
3.7	Aligning exhaust system free of stress	408
3.8	Checking exhaust system for leaks	409
3.9	Installation position of clamp	409
4	Exhaust pipes/silencers, Touran	411
4.1	Assembly overview – silencer	411
4.2	Removing and installing front exhaust pipe	413
4.3	Separating exhaust pipes from silencers	415
4.4	Removing and installing front silencers	416
4.5	Removing and installing centre silencer	418
4.6	Removing and installing rear silencer	419
4.7	Removing and installing front exhaust pipe bracket	421
4.8	Aligning exhaust system free of stress	423
4.9	Checking exhaust system for leaks	424
4.10	Installation position of clamp	424
5	Exhaust pipes/silencers, T-Cross, Taigo	426
5.1	Assembly overview – silencers	426
5.2	Removing and installing front exhaust pipe	427
5.3	Separating exhaust pipes from silencers	429
5.4	Removing and installing front silencers	430
5.5	Removing and installing rear silencer	432
5.6	Removing and installing front exhaust pipe bracket	433
5.7	Aligning exhaust system free of stress	434
5.8	Checking exhaust system for leaks	435



5.9	Installation position of clamp	435
6	Exhaust pipes/silencers, T-Roc	437
6.1	Assembly overview – silencer, torsion beam axle	437
6.2	Assembly overview – silencer, multi-link rear suspension	439
6.3	Removing and installing front exhaust pipe	440
6.4	Separating exhaust pipes from silencers	442
6.5	Removing and installing front silencers	443
6.6	Removing and installing centre silencer, torsion beam axle	445
6.7	Removing and installing rear silencer	446
6.8	Removing and installing silencer, multi-link rear suspension	448
6.9	Removing and installing front exhaust pipe bracket	450
6.10	Aligning exhaust system free of stress	452
6.11	Checking exhaust system for leaks	453
6.12	Installation position of clamp	453
7	Exhaust pipes/silencers, T-Roc Cabriolet	455
7.1	Assembly overview – silencer	455
7.2	Removing and installing front exhaust pipe	457
7.3	Separating exhaust pipes from silencers	459
7.4	Removing and installing front silencers	460
7.5	Removing and installing centre silencer	461
7.6	Removing and installing silencer	463
7.7	Removing and installing front exhaust pipe bracket	465
7.8	Aligning exhaust system free of stress	467
7.9	Checking exhaust system for leaks	468
7.10	Installation position of clamp	468
8	Emission control	470
8.1	Assembly overview – emission control	470
8.2	Assembly overview - bracket and pipes for pressure differential sender for particulate filter	472
8.3	Removing and installing emission control module	473
8.4	Removing and installing exhaust flap control unit [J883]	477
8.5	Removing and installing pressure differential sender for particulate filter G1037	478
9	Exhaust gas temperature regulation	481
9.1	Assembly overview – exhaust gas temperature regulation	481
9.2	Removing and installing dual exhaust gas temperature sensor 1	481
28	Ignition system	484
1	Safety and repair instructions	484
1.1	Safety information	484
1.2	Repair instructions	484
2	Ignition system	485
2.1	Assembly overview - ignition system	485
2.2	Removing and installing ignition coil with output stage	487
2.3	Removing and installing knock sensor 1 [G61]	490
2.4	Removing and installing engine speed sender [G28]	491
2.5	Removing and installing inlet camshaft position sender [G1002]	493
2.6	Removing and installing exhaust camshaft position sender [G1003]	494