



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Safety information and repair notes</b>	<b>1</b>
1.1 Safety information	1
1.2 Repair instructions	1
<b>2 Technical data</b>	<b>2</b>
2.1 Test and adjustment values	2
<b>3 Electrical components</b>	<b>3</b>
3.1 Access to diagnoses	3
<b>20 - Fuel supply system</b>	<b>4</b>
<b>1 Safety information and repair notes</b>	<b>4</b>
1.1 Safety information	4
1.2 Repair instructions	4
<b>2 Fuel tank, Tiguan</b>	<b>5</b>
2.1 Assembly overview - fuel tank	5
2.2 Emptying fuel tank	7
2.3 Removing and installing fuel tank	16
2.4 Removing and installing fuel tank switch-off valve	20
2.5 Renewing seal for cap	21
2.6 Checking earth cable on filler neck of fuel tank	21
<b>3 Fuel tank, Golf</b>	<b>23</b>
3.1 Assembly overview - fuel tank	23
3.2 Emptying fuel tank	25
3.3 Removing and installing fuel tank	34
3.4 Removing and installing fuel tank switch-off valve	38
3.5 Renewing seal for cap	39
3.6 Checking earth cable on filler neck of fuel tank	39
<b>4 Fuel tank, Passat</b>	<b>41</b>
4.1 Assembly overview - fuel tank	41
4.2 Emptying fuel tank	43
4.3 Removing and installing fuel tank	52
4.4 Removing and installing fuel tank switch-off valve	56
4.5 Renewing seal for cap	57
4.6 Checking earth cable on filler neck of fuel tank	58
<b>5 Fuel delivery unit/fuel gauge sender, Tiguan</b>	<b>59</b>
5.1 Assembly overview – fuel delivery unit/fuel gauge sender	59
5.2 Removing and installing fuel delivery unit, fuel gauge sender	59
5.3 Removing and installing fuel gauge sender [G]	63
5.4 Removing and installing assembly opening cover	66
<b>6 Fuel delivery unit/fuel gauge sender, Golf</b>	<b>67</b>
6.1 Assembly overview – fuel delivery unit/fuel gauge sender	67
6.2 Removing and installing fuel delivery unit, fuel gauge sender	67
6.3 Removing and installing fuel gauge sender [G]	71
6.4 Removing and installing assembly opening cover	74
<b>7 Fuel delivery unit/fuel gauge sender, Passat</b>	<b>75</b>
7.1 Assembly overview – fuel delivery unit/fuel gauge sender	75
7.2 Removing and installing fuel delivery unit, fuel gauge sender	76
7.3 Removing and installing fuel gauge sender [G]	79
7.4 Removing and installing assembly opening cover	82
<b>8 Plug-in connectors</b>	<b>84</b>
8.1 Disconnecting plug-in connectors	84



<b>9</b>	<b>Activated charcoal filter system, Tiguan</b> .....	<b>89</b>
9.1	Connection diagram – activated charcoal filter system .....	89
9.2	Assembly overview – activated charcoal filter system .....	89
9.3	Removing and installing activated charcoal filter .....	90
9.4	Checking fuel tank breather .....	91
<b>10</b>	<b>Activated charcoal filter system, Golf</b> .....	<b>98</b>
10.1	Connection diagram – activated charcoal filter system .....	98
10.2	Assembly overview – activated charcoal filter system .....	98
10.3	Removing and installing activated charcoal filter .....	99
10.4	Checking fuel tank breather .....	100
<b>11</b>	<b>Activated charcoal filter system, Passat</b> .....	<b>107</b>
11.1	Connection diagram – activated charcoal filter system .....	107
11.2	Assembly overview – activated charcoal filter system .....	107
11.3	Removing and installing activated charcoal filter .....	108
11.4	Checking fuel tank breather .....	109
<b>12</b>	<b>Accelerator mechanism</b> .....	<b>114</b>
12.1	Assembly overview – accelerator pedal module .....	114
12.2	Removing and installing accelerator pedal module [GX2] .....	115
<b>13</b>	<b>Fuel pump</b> .....	<b>116</b>
13.1	Checking fuel pressure .....	116
13.2	Checking fuel delivery rate .....	121
13.3	Connecting test instrument adapter to fuel delivery unit .....	127
13.4	Connecting remote control to fuel delivery unit .....	128
13.5	Removing and installing fuel pump control unit [J538] .....	130
13.6	Checking suction-jet pump .....	131
<b>14</b>	<b>Fuel lines</b> .....	<b>133</b>
14.1	Removing and installing fuel lines .....	133
14.2	Removing and installing fuel line for auxiliary/supplementary heater .....	138
<b>15</b>	<b>Senders and sensors</b> .....	<b>141</b>
15.1	Removing and installing tank pressure sensor .....	141