



Contents

1	Engine list	1
2	Service work	5
2.1	Information on long-life service and time or distance dependent service	5
2.2	Service tables	7
3	General information	16
3.1	Raising vehicle with lifting platform or trolley jack	16
3.2	Stickers	17
3.3	Connecting vehicle diagnostic tester	19
3.4	Vehicle identification number	21
3.5	Vehicle data sticker	22
3.6	Countries where diesel has a high sulphur content	23
3.7	Engine code and engine number	23
3.8	RME fuel (biodiesel)	23
3.9	Severe operating conditions	24
3.10	Identification plate	24
3.11	Jacking up mode: switching self-levelling suspension off and on	24
4	Descriptions of work:	26
4.1	Removable towing bracket: checking and cleaning if necessary	28
4.2	Turbocharger: Lubricate control motor linkage	30
4.3	Swivel joints and suspension link mountings: inspecting	31
4.4	Additive tank: extracting fluid and filling new additive	32
4.5	Diesel particulate filter: reading ash loading level	38
4.6	Automatic gearbox: check ATF level.	38
4.7	Battery cut-off relay: Remove	38
4.8	Battery: checking battery terminal clamps for secure seating	40
4.9	Battery: Checking using battery tester with printer VAS 5097A or VAS 6161	47
4.10	Reducing agent (AdBlue®): replenishing	47
4.11	Reducing agent (AdBlue®): changing	56
4.12	Tyres: checking condition, wear pattern, tyre pressure and tread depth	56
4.13	Storing tyre pressure values	60
4.14	Brakes, front and rear: checking thickness of brake pads and condition of brake discs ..	61
4.15	Brake system and shock absorbers: inspecting for leaks and damage	63
4.16	Changing brake fluid	64
4.17	Brake fluid level (dependent upon brake pad/lining wear): check.	67
4.18	Diesel particulate filter: renewing	68
4.19	Electric windows: checking positioning (open and close functions)	69
4.20	Vehicles with reversing camera system: Check number plate	70
4.21	Vehicle system test: Carry out test	70
4.22	Front airbag for the front passenger: Check activation / deactivation	71
4.23	Bonnet catch hook: grease.	72
4.24	Multi-purpose additive for petrol fuel: adding	72
4.25	Gearbox, final drive (especially on flanges) and drive shaft bellows: inspect for leaks and damage	73
4.26	Dust and pollen filter: cleaning housing and renewing filter element	73
4.27	Poly V-belt: checking condition	73
4.28	Diesel fuel filter: draining water	74
4.29	Diesel fuel filter: renewing (diesel engine)	75
4.30	Interior and exterior body: inspecting for corrosion with doors and flaps open	84
4.31	Compass in roof module: Set compass zones	85
4.32	Cooling system: checking frost protection and coolant level	86
4.33	Air filter: cleaning housing and renewing filter element	89
4.34	Engine oil level: checking	100
4.35	Engine oil: draining or extracting, renewing oil filter and replenishing engine oil	101



4.36	Engine cover panel -top-: Removing and installing	109
4.37	Engine cover - bottom (noise insulation): removing and installing	110
4.38	Engine and components in engine compartment: inspecting for leaks and damage (from above and below)	111
4.39	Tyre repair set: checking if bottle is damaged or used; checking shelf life of tyre sealant	112
4.40	Road test: performing (driving behaviour, noises, air conditioner etc.)	112
4.41	Wheel securing bolts: tightening to specified torque	113
4.42	Radio code: reading using vehicle diagnostic tester	114
4.43	Radio/navigation system: Activating anti-theft coding	115
4.44	Power assisted steering: check fluid level.	118
4.45	Headlight adjustment: Checking and adjusting as necessary	119
4.46	Sunroof: checking function, cleaning and greasing guide rails	127
4.47	Sliding sunroof drains: checking for blockage, cleaning if necessary	127
4.48	Window wash/wipe system and headlight washer system: Checking operation and checking for damage, if necessary replenishing fluid	129
4.49	Wiper blade protection: removing	132
4.50	Service interval display: resetting	135
4.51	Service interval display: recoding	136
4.52	Track rod ends: checking clearance, firm seating and boots	137
4.53	Transportation mode: switching off	138
4.54	Greasing door arrester	139
4.55	Elastic drive coupling and freewheel disc: Renew	139
4.56	Underbody: inspecting for damage to underbody sealant, underbody panels, routing of lines, plugs	140
4.57	Setting time, language and units: On display of dash panel insert	140
4.58	Transfer box and front and rear final drive: Checking oil level, replenishing if necessary	142
4.59	Toothed belt for camshaft drive: renewing (8-cylinder petrol engines)	142
4.60	Spark plugs: renewing	142
4.61	Static cornering light (cornering light) and driving light assist: check function.	151
5	Exhaust emissions test	153
5.1	Exhaust emissions test for petrol engines	153
5.2	Exhaust emissions test for diesel engines	155
5.3	Exhaust emissions test for diesel engines with OBD	162
6	Glossary	165