



## Contents

<b>00 - Technical data</b>	<b>1</b>
<b>1 Brake allocation via PR No.</b>	<b>1</b>
1.1 Example of a vehicle data sticker	1
1.2 Front brakes	1
1.3 Rear brakes (disc brakes)	1
<b>2 Technical data</b>	<b>3</b>
2.1 Brake master cylinder and brake servo	3
2.2 Front brakes	3
2.3 Rear brakes	5
<b>3 Brake test</b>	<b>8</b>
3.1 General	8
3.2 Test	8
<b>45 - Anti-lock brake system</b>	<b>9</b>
<b>1 General notes for anti-lock brake system (ABS)</b>	<b>9</b>
<b>2 Notes for repair work on the ABS</b>	<b>10</b>
<b>3 Connecting VAS 5051 and selecting functions</b>	<b>11</b>
<b>4 Electrical/electronic components and fitting locations</b>	<b>13</b>
<b>5 Fault display via warning lamps</b>	<b>15</b>
<b>6 Assembly overview - hydraulic unit, brake servo/brake master cylinder</b>	<b>18</b>
6.1 ABS MK 25 to week 48/06	18
6.2 ABS MK 25 E1 from week 48/06	24
<b>7 Removing and installing parts of ABS system on front and rear axle</b>	<b>31</b>
7.1 Removing and installing speed sensor on front axle	31
7.2 Removing and installing parts of ABS system on rear axle	32
7.3 Removing and installing speed sensor on rear axle	33
<b>8 Removing and installing parts of ESP system</b>	<b>34</b>
8.1 Removing and installing ESP sensor unit G419	34
8.2 Removing and installing steering angle sender G85	35
<b>46 - Brakes - mechanism</b>	<b>36</b>
<b>1 Repairing front brakes</b>	<b>36</b>
1.1 Repairing front brakes, FN 3 brake caliper (16")	36
1.2 Removing and installing brake pads/linings	37
1.3 Removing and installing brake caliper	41
1.4 Repairing front brake, Brembo 17" brake caliper (1LC)	44
1.5 Removing and installing brake pads/linings	46
1.6 Removing and installing brake caliper	49
1.7 Repairing front brake, Brembo 17" brake caliper (1LE)	51
1.8 Removing and installing brake pads/linings	52
1.9 Removing and installing brake caliper	54
1.10 Repairing front brake, Brembo 18" brake caliper	56
1.11 Removing and installing brake pads/linings	58
1.12 Removing and installing brake caliper	61
1.13 Repairing front brake, Brembo 18" brake caliper Plus	63
1.14 Removing and installing brake pads/linings	64
1.15 Removing and installing brake caliper	66
<b>2 Repairing rear brakes</b>	<b>69</b>
2.1 Repairing rear brakes, brake caliper FN 44	69
2.2 Removing and installing brake pads/linings	70
2.3 Removing and installing brake caliper	75



2.4	Removing and installing brake shoes	78
2.5	Repairing rear brakes, Brembo 17" brake caliper (1KF)	79
2.6	Removing and installing brake pads/linings	81
2.7	Removing and installing brake caliper	84
2.8	Removing and installing brake shoes	86
2.9	Repairing rear brakes, Brembo 17" brake caliper (1KQ)	87
2.10	Removing and installing brake pads/linings	89
2.11	Removing and installing brake caliper	92
2.12	Removing and installing brake shoes	93
2.13	Repairing rear brakes, 18" brake caliper Plus	94
2.14	Removing and installing brake pads/linings	96
2.15	Removing and installing brake caliper	98
2.16	Removing and installing brake shoes	100
2.17	Adjusting parking brake	101
<b>3</b>	<b>Assembly overview - foot-operated parking brake</b>	<b>103</b>
3.1	Parking brake pedal	103
3.2	Transfer module	104
3.3	Rear brake cable	104
3.4	Removing and installing parking brake pedal	105
<b>4</b>	<b>Brake cables</b>	<b>107</b>
4.1	Removing and installing rear brake cables	107
4.2	Removing and installing front brake cable	108
<b>5</b>	<b>Assembly overview - brake pedal (LHD)</b>	<b>110</b>
5.1	Separating brake pedal from brake servo	110
5.2	Removing and installing brake light switch F and brake pedal switch F47	112
<b>47 - Brakes - hydraulics</b>		<b>114</b>
<b>1</b>	<b>Repairing front brake calipers</b>	<b>114</b>
1.1	Repairing FN 3 brake calipers	114
1.2	Removing and installing piston for brake caliper FN 3	114
1.3	Repairing Brembo brake calipers (17", 18" and 18" Plus)	117
1.4	Removing and installing Brembo brake caliper piston (17", 18" and 18" Plus)	120
<b>2</b>	<b>Repairing rear brake calipers</b>	<b>123</b>
2.1	Repairing FN 44 brake calipers	123
2.2	Removing and installing piston for FN 44 brake caliper	123
2.3	Repairing Brembo brake calipers (17"and 18" Plus)	126
2.4	Removing and installing rear brake caliper piston	129
<b>3</b>	<b>Pressurised leak test</b>	<b>132</b>
<b>4</b>	<b>Bleeding brake system</b>	<b>133</b>
4.1	Bleeding brake system with brake filling and bleeding unit VAS 5234 or brake filling and bleeding unit V.A.G 1869	133
4.2	Changing brake fluid	135
<b>5</b>	<b>Assembly overview - brake servo/brake master cylinder</b>	<b>136</b>
5.1	Removing and installing diaphragm movement potentiometer in brake servo G420	137
5.2	Removing and installing brake pressure sender G201	138
<b>6</b>	<b>Brake servo vacuum supply</b>	<b>139</b>
6.1	Overview - vacuum pump for brake servo (diesel vehicles)	139
6.2	Assembly overview - vacuum pump for brakes V192	139
6.3	Checking non-return valve	141
<b>7</b>	<b>Removing and installing brake master cylinder</b>	<b>142</b>
7.1	Removing	142
7.2	Installing	142
<b>8</b>	<b>Removing and installing brake servo</b>	<b>144</b>
8.1	Removing	144



---

8.2	Installing .....	145
<b>9</b>	<b>Repairing brake lines</b> .....	<b>146</b>
9.1	Assembly overview - flanging tool .....	146
9.2	Work instructions .....	147